
Safety Precautions


Thank you for purchasing Shihlin Electric product. This user manual introduce how to install, wiring, inspect and operate Shihlin Servo Drive and Motor. Please read related items in this user manual prior to installation for safety.

■ There are 2 safety notification levels in this user manual: Danger and Caution.

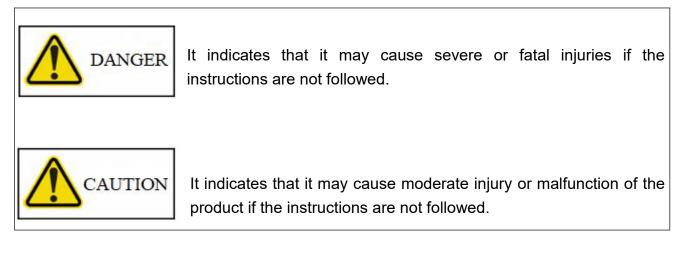

Besides, for those items remark as CAUTION, it may cause bad consequences in some cases, please follow the instruction to operate due to its importance.

Below symbols indicate the items should be followed.

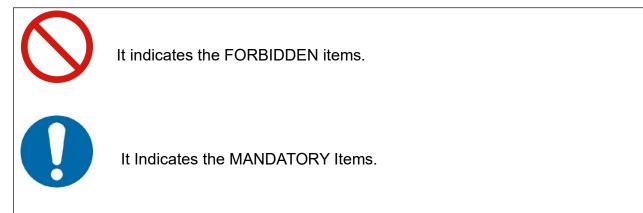


In this user manual, NOTE indicates the cautions which may not cause malfunction of the product, but need pay attention.

Please read this manual carefully and keep it properly to make sure the user can reach it freely.

Safety Instruction

1. Electric Shock Prevention

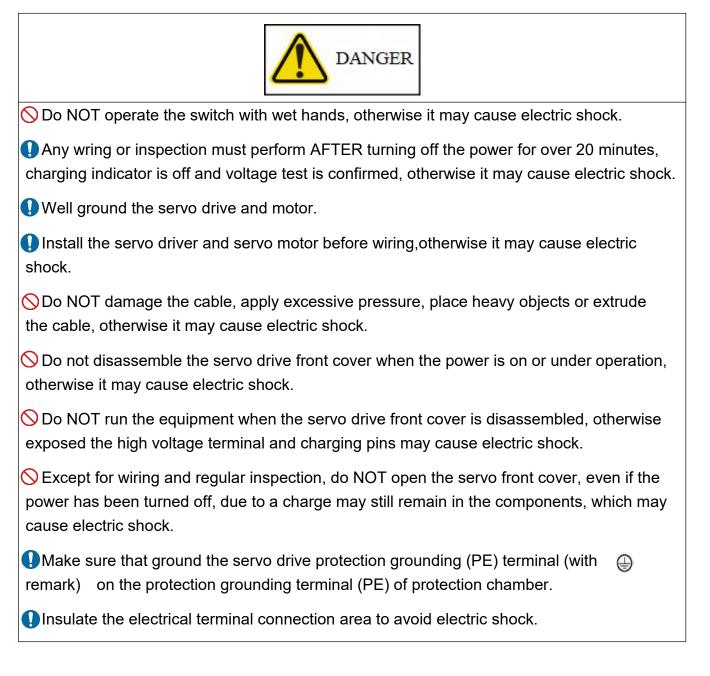

2. Fire Disaster Prevention



Do NOT place the servo drive, motor or external regenerative resistor on or nearby

inflammable objects, otherwise, fire disaster may be caused.

Turn off the servo drive power when problem occurs, otherwise, the high current flow may cause fire disaster.

Turn off the power by regenerative abnormal signal When regenerative resistor is used. If there is a regenerative brake transistor fault, which will make the regenerative resistor overheat and may cause fire disaster.

Never let below items go inside of the servo drive or motor. Including: flammable matter, such as oil, fat, etc. And conductive matter: such as screw, metal parts, etc.

Densure the servo drive power supply is connected with a no-fuse breaker.

3. Injury Prevention



ODo NOT apply voltages other than those specified in the specifications to each terminal, otherwise, a burst or damage may occur.

ODo NOT make mistake when wiring to the terminal. Otherwise, a burst or damage may occur.

⊘Do NOT make mistake on the(+ -)polarity. otherwise, a burst or damage may occur.

ODo NOT touch the heat sink, regenerative resistor of the servo drive, servo motor and other components during operation or soon after the power just turned off, because it may get hot and cause injury.

4. Other cautions

Please pay attention to below notifications, improper operation may cause breakdown, injury, electric shock, etc.

(1) Delivery & Installation



Choose correct way to deliver the product base on its weight.

Never stack products which is beyond limitation.

Do NOT hand carry the cable, motor shaft, and encoder when deliver the servo motor.

Servo drive and motor must be installed on the location with enough bearing capacity.

 \bigcirc Do NOT stand or put heavy staff on the product.

Densure the product is installed correctly as specified in this manual.

Inside the protective chamber, a specified space must be reserved between the servo drive and other equipment.

 \bigcirc Do NOT install, run the damaged or component missing servo drive and servo motor.

ODo NOT congest the vent of servo drive. Otherwise, it may cause a malfunction.

 \bigcirc Do NOT drop or strike the servo drive and servo motor as they are precision machinery.

Consult with Shihlin Electric system service representative if you need keep the product for a long period without using.

(2) Wiring



Do wiring carefully, otherwise, it may cause error on servo motor.

ODo NOT install phase-in capacitors, surge absorber, and EMI noise filters between the servo drive and servo motor.

Connect the servo drive and motor correctly(terminal U,V,W), otherwise, it may cause malfunction of servo motor.

♦ Connect the servo drive output(terminal U,V,W)and servo motor input(terminal U, V, W)

directly, Do NOT connect them by electromagnetic contactor, otherwise, it may cause abnormality or fault.

ODO NOT put the diode which control the output signal in wrong direction. Otherwise, it may cause malfunction: no signal output and protect circuit is disabled.

Fasten the cable which is connect to the terminal panel with correct torque force. Otherwise, it may cause overheat on the cable and terminal panel.

(3) Trial run and adjustment.



Check the program and parameters before operation. Otherwise, it may lead to malfunction of the machine.

Do NOT adjust the parameter settings excessively, otherwise, it may cause some abnormal on the product.

(4) Operation



Set an emergency stop circuit outside the drive, which can be activated immediately in urgent cases to turn off the power supply.

ODo NOT disassembly, repair or modify the equipment.

Please confirm that the run signal is off before clear the alarm. otherwise the motor might restart immediately and you may get injured.

Use noise filter to minimize the influence of electromagnetic interference, otherwise, the electric device nearby might be impacted.

 \bigotimes Do NOT burn or disassemble the servo drive, or it may cause hazardous gas.

Ensure a specified combination of servo drive and motor is used.

SThe built-in electromagnetic brake is designed to hold the motor shaft, do NOT use for ordinary braking.

(5) Maintenance and Inspection



DEnsure the power LED indicator is off before maintenance or inspection.

Only qualified electricians can install, wire, repair and maintain the servo drive and servo motor.

Do NOT disassemble the servo motor, otherwise you may get electric shock or injured.

When the power is ON, do NOT connect or disconnect the servo drive with motor.

SThe built-in electromagnetic brake is designed to hold the motor shaft, do NOT use for ordinary braking.

Note: The content of this manual may be revised without prior notice. Please consult our distributors or download the latest version at <u>http://www. seec. com. tw/en/</u>

1.	Product Overview and Introduction	14
	1.1 Outline	14
	1.2 Product Checklist	14
	1.3 Product Model Overview	15
	1.3.1 Servo Motor Model Naming Rule	15
	1.3.2 Servo Drive Model Naming Rule	18
	1.3.3 Servo Drive and Motor Model Overview Chart	20
	1.4 Servo Drive Appearance and panel Introduction	21
	1.5 Servo Drive Control Mode Introduction	22
	1.6 Recommended Specification Chart for Breaker and Fuse	23
2	. Installation	23
	2.1 Precautions and Storage	23
	2.2 Installation Environment	24
	2.3 Installation Direction and Clearances	24
3	. Wiring and Signal	28
	3.1 Connection of power supply and peripheral equipment	28
	3.1.1 Peripheral equipment wiring diagram - Below 1KW	28
	3.1.2 Peripheral equipment wiring diagram-1. 5KW~3KW	29
	3.1.3 Description of Drive Connector and Terminals	29
	3.1.4 Wiring for Power Supply	31
	3.1.5 Connector specifications of motor U,V, W	32
	3.1.6 Wire selection	33
	3.2 CN1 I/O signal wiring and introduction	34
	3.2.1 CN1 terminal configuration diagram	34

	3.2.2 CN1 Signal Wire Shielding and Grounding	
	3.2.3 CN1 Terminal signal description	42
	3.2.4 Interface wiring diagram	60
	3.2.5 User-specified DI and DO signals	66
	3.3 CN2 encoder signal wiring and description	67
	3.3.1 Encoder lead wire connector specifications	68
	3.4 CN3/CN3L communication port wiring and description	69
	3.5 CN4 USB communication port	70
	3.6 CN5 absolute encode battery connector	71
	3.7 Standard wiring instruction	72
	3.7.1 Position control mode(Pr Mode) wiring diagram for SDC-A	73
	3.7.2 Position control mode(Pt Mode) wiring diagram for SDC-A	74
	3.7.3 Speed control mode (S Mode)wiring diagram for SDC-A	76
	3.7.4 Torque control mode (T Mode) wiring diagram for SDC-A	78
4	I. Panel display and operation	80
	4.1 Name of each part of the panel	80
	4.2 Displayed procedure	81
	4.3 Status display	82
	4.4 One-touch Tuning Function	88
	4.5 Alarm mode	88
	4.6 Diagnostic mode	90
	4.6 Diagnostic mode 4.6.1 External I/O signal indicator	
		91
	4.6.1 External I/O signal indicator	91 93

4.6.5 Inertia estimation a	and tuning by communication software	96
4.7 Parameter mode		100
4.7.1 16 bit parameter se	etting instruction	
4.7.2 32 bit parameter se	etting instruction	
5. Running Operation		
5.1 Check items Before Ope	ration	104
5.2 No-load test		105
5.2.1 No-load JOG test.		105
5.2.2 No-load positioning	g test	108
5.3 Tuning procedure		110
5.3.1 Tuning method and	d type	110
5.3.2 One-touch Tuning	Function	113
5.3.3 Auto tuning functio	n	
5.3.4 Manually tuning m	ode	126
5.3.5 Interpolation mode		
5.4 Position mode paramete	r setting and operation	
5.5 Speed mode parameter	setting and operation	131
5.6 Torque mode parameter	setting and operation	134
6. Control function		
6.1 Control mode option		
6.2 Torque control mode		
6.2.1 Torque command.		
6.2.2 Torque command	smoothing	139
6.2.3 Torque limit of torc	ue control mode	
6.2.4 The speed limit of	torque mode	

6.3 Speed control mode	143
6.3.1 Selection of speed command	
6.3.2 Speed command Smoothing	
6.3.3 Torque limit of speed control mode	148
6.3.4 Adjustment of speed loop gain	149
6.3.5 Resonance suppression unit	
6.3.6 Gain switch function	158
6.4 Position control mode	165
6.4.1 External pulse command(Pt command)	166
6.4.2 Internal position command (Pr command)	
6.4.3 Position command smoothing	
6.4.4 Electronic gear	172
6.4.5 Torque limit of position loop	174
6.4.6 Position loop gain	174
6.5 Dual control mode	175
6.5.1 Position/speed dual mode	177
6.5.2 Speed/torque dual mode	178
6.5.3 Torque/position dual mode	
6.6 Other functions	
6.6.1 Selection of regenerative resistor	
6.6.2 Operation of electromagnetic brake	
7. PR (procedure) sequence control introductions	187
7.1 PR introduction	
7.2 DI/DO and sequences	
7.3 Parameter setting of PR	

	7.4 PR sequence status	200
8.	. Parameter setting	205
	8.1 Parameter definitions	205
	8.2 List of Parameters	207
	8.3 Parameter group introduction	233
	Table 8.1: Digital input(DI) function description:	316
	Table 8.2: Digital output(DO) function description	317
9.	. Communication function	319
	9.1 Communication hardware interface and wiring	319
	9.2 Communication specifications	321
	9.3 Modbus communication protocol	322
	9.3.1. ASCII mode	
	9.3.2. RTU mode	330
	9.4 Setting and accessing communication parameters	
1(0. Troubleshooting	351
	10.1 Alarm list and corrective actions	351
	10.2 Causes and corrective actions	354
1	1. Specifications	369
	11.1 Servo drive standard specifications	
	11.2 Interface and out dimensions of the servo drive	
	11.3 Dimensions of the servo drive	372
	11.4 SME series servo motor general specification	
	11.4.1 SME series : Specification of Low Capacity Servo Motor	373
	11.4.2 SM3 series : Specification of Low Capacity Servo Motor	375
	11.5 Motor dimensions	377

11.5.1 Dimensions of 3000 RPM motor	
11.5.2 Dimensions of 2000 RPM motor	
11.5.3 Dimensions of servo motor keyway	
11.6 Electromagnetic Interference Filter (EMI Filter)	
11.7 EMI interference countermeasure	
12. Features	
12.1 Motor T-N Curve/S-T curve	
12.2 Overload features	
13. Absolute Servo System	
13.1 Mitsubishi Absolute Position Detection System	
13.1.1 Signal description	
13.1.2 Startup procedure	
13.1.3 Absolute position data transmission protocol	
13.2 Delta absolute position detection system	407
13.2.1 Signal description	407
13.2.2 Start procedure	408
13.2.3 Use DI/DO to initialize absolute coordinates	409
13.2.4 Use parameter settings to initialize absolute coordinates	410
13.2.5 Absolute position data transmission protocol	411
13.3 Absolute battery specifications	413
14. Appendix	
14.1 Accessories	415
14.2 Regenerative resistor	422
14.3 Table of communication address	
14.4 Compliance with global standards	

	14.4.1. Safety instructions	428
	14.4.2. Professional technicians	428
	14.4.3. Compliance with standards	428
	14.4.4. Correct use method	429
	14.4.5. Basic inspection and maintenance	431
14.	5 Manual version and revision history	433

1. Product Overview and Introduction

1.1 Outline

The control modes of Shihlin general purpose AC servo includes single mode and dual mode. Single mode includes following 4 types: position mode(terminal input), position mode(internal register), speed mode and torque mode. And dual mode includes following 5 types: position mode(terminal input)/speed mode, position mode(terminal input)/torque mode, position mode(internal register)/speed mode, position mode(internal register)/torque mode, speed mode/torque mode.

The servo can be used for high-precision positioning system, speed control smoothing system in general machinery industry, machine tools and tension control system.

Shihlin servo have RS-485 series communication function, and also have the most convenient USB communication function, this enable that you can rapidly perform parameter adjustment, test operation, status monitoring and gain adjustment by a computer which is installed with Shihlin communication software.

With the auto tuning function, Shihlin servo gain value could automatically adjust according to the machinery status. The Shihlin series servo is equipped with 17-bit pulses/rev absolute magnetic encoder, it can perform high-precision control.

1.2 Product Checklist

Check below items before you start to use our product:

- Any loose or fall off screw on motor or drive.
- Check if the product model name on nameplates of the motor and drive are align with the purchase order. You can refer to the product model list in next section.
- Check if any damage or scratch on the surface of the motor and drive.
- Manually rotate the motor shaft to check if it can move smoothly to make sure no abnormality on the motor shaft. If the motor is equipped with electromagnetic brake, you cannot smoothly rotate the motor shaft by hand.

If any of the above problems occur, please contact the distributor.


A complete servo set includes:

- (1) A servo drive and a servo motor.
- (2) A UVW motor power cable: one end of the U, V, and W wires connects to the corresponding terminal panel and the other end to the UVW connector on the motor. The green wire is connect to the ground terminal of the servo drive (optional purchase).
- (3) An encoder cable: one end of it connects to the CN2 of the servo drive and the other end to encoder.
- (4) A USB communication cable, one end of it connects to CN4 on the drive, the other end to USB port on the computer. (Optional purchase).
- (5) A 50 Pin connector for CN1.
- (6) A 8 Pin connector (L1, L2, P, C, N, U, V, W) for servo below 1kw.
- (7) An installation guide.
- (8) A Shihlin servo user manual, the electric copy can be download from the website.

1.3 **Product Model Overview**

1.3.1 Servo Motor Model Naming Rule

1. Naming Rule

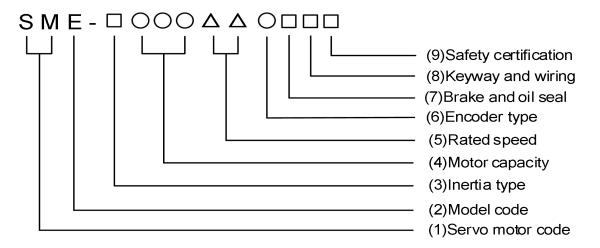

- 2. Description of each code item.
- (1) Servo motor code: SM indicates servo motor.
- (2) Model code: E \ 3
- (3) Inertia classification: Coding according to the motor inertia as follows:

Code	Inertia class			
L	Low			
М	Medium			
Н	High			

(4) Motor capacity: motor output power.

Code	010	020	040	075	100
Motor power(W)	100	200	400	750	1000

(5) Rated speed: the rated output speed of motor.

Code	20	30
Rated speed(rpm)	2000	3000

(6) Encoder type: Shihlin servo motor magnetic encoder(17bit)/(20bit)Shihlin servo motor optical encoder(22bit)

Code	Encoder type		
Т	Single turn, 17bit/rev		
N	65536 turns, 17bit/rev(Note1)		
S	Single turn, 22bit/rev		
М	65536 turns, 22bit/rev		

Note1 : For SM3 series motors, the single-turn resolution of the magnetic encoder is 20 bits.

(7) Brake and oil seal: below codes to indicate whether the motor is equipped with brake and oil seal.

Code Item	A	В	С	D
Brake	_	•	_	•
Oil seal		_	•	•

(8) Keyway and outlet type: below codes to indicate if the motor have keyway and outlet type selection.

Code Item	А	В	С	D
Keyway	_	•	_	•
Back side cable	_		•	•

(9) Safety certification: the certified safety certification of the motor is indicated by the following code:

Code Item	CE Certification	Conform to UL/CE certification
Code	-	U

Code samples:


Example (1): 200W motor, low inertia, rated speed 3000 rpm, no brake, no oil seal, no keyway, Single-turn absolute magnetic type encoder, with CE certification, the model name is as follows: SME-L02030TAA.

Example (2): 750W motor, low inertia, rated speed 3000 rpm, with brake, no oil seal, with keyway, Multi-turn absolute magnetic type encoder, rear lead wire, with UL certification, the model name is as follows: SME-L07530NBDU.

Example (3): 1000W motor, low inertia, rated speed 3000 rpm, no brake, oil seal, with keyway, Multi-turn absolute magnetic type encoder, with CE certification, the model name is as follows: SME-L10030NCB.

1.3.2 Servo Drive Model Naming Rule

1. Naming Rule

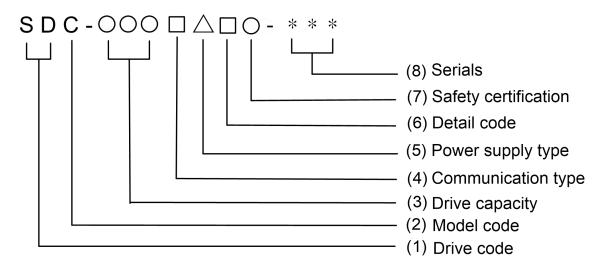

2. Description of each code item

- (1) Drive code: SD means servo drive.
- (2) Model code: C.
- (3) Drive capacity: motor output capacity, it indicate by the last 3 digits

of the number which is a multiply the motor output power with 1/10. For models above 1000W, using the English letter K in the third code to represent 1000W,

Example: 020 means 200W; 100 means 1000W.

(4) Communication type: different types of communication

Code Item	А	С	E
Communication protocol	Modbus	CANopen	EtherCAT

- (5) Power type: input power specification
 - 2: Single-phase or three-phase, 220VAC
 - 4: Single-phase or three-phase, 440VAC

(6) Detail code

Code Item	-	A	С
Application type	Ge	neral	Full-closed

(7) Safety certification: the certified safety certification of the drive is indicated by the following code.

Code	CE	Conform
Item	certification	the UL/CE certification
Code	-	U

(8) Series

	Code	General	analog input	OVV
Item		type	type	SXX
С	ode	-	М	Customer type or Other definitions

Example description:

Example (1): For a 200W drive, with CE certification, single-phase or three-phase $200 \sim 240$ VAC, general type, the coding is as follows: SDC-020A2.

Example (2): For a 400W drive, with UL certification, single-phase or three-phase 200~240VAC, general type, dedicated for a certain customer,The code is: SDC-040A2-UXX, in which XX is a number.

1.3.3 Servo Drive and Motor Model Overview Chart

	Servo Drive	Corresponding servo motor
100W	SDC-010A2□○- * * *	SME-L01030 • □ □ □
200W	SDC-020A2□○- * * *	SME-L02030 • □ □ □
400W	SDC-040A2□○- * * *	SME-L04030 • □ □ □
750W	SDC-075A2□○- * * *	SME-L07530 • □ □ □
1000W	SDC-100A2□○-***	SME-L10030 • □ □ □


Note 1;
is safety certification, *** is Shihlin definition/market/customer.

Note 2: ○ is encoder type of servo motor. ○=T is for single turn resolution type, ○=N is multi-turn resolution type.

Note 3: For the description of $\Box\Box\Box$ in the servo motor, please refer to section 1.3.1.

1.4 Servo Drive Appearance and panel Introduction

1.4.1 Appearance and panel of Drive below 1kw

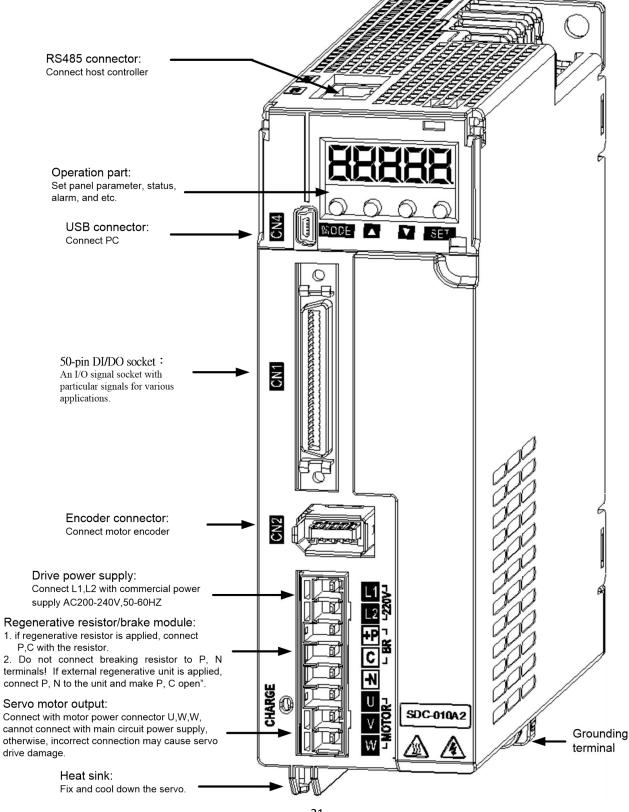

1.5 Servo Drive Control Mode Introduction

Shihlin servo drive provides a variety of control modes for you, as detailed in the table below:

	Mode Name	Mode code	Description
Single	Position mode(terminal input)	Pt	Drive receives the external position pulse command which is input from terminal , then runs the motor to reach the target position.
Mode	Position mode(internal register)	Pr	The drive receives the position command which is provided by the internal register (64 groups of registers). and runs the motor to the target position. The DI signal can be used to select the register number.
	Speed mode	S	The drive receives the speed command and runs the motor to the target speed. The speed command can be selected by the DI signal(7 groups of register)
	Torque mode	т	The drive receives torque command which is provided by three groups of internal torque commands and runs the motor to the target torque.
		Pt-S	Pt/S is switched mutually via the signal of DI.
		Pt-T	Pt/T is switched mutually via the signal of DI.
	Dual mode		Pr/S is switched mutually via the signal of DI.
			Pr/T is switched mutually via the signal of DI.
		S-T	S/T is switched mutually via the signal of DI.

★ You can set PA01 to perform the mode selection. After PA01 is been set, you should restart the power to activate it.

★ If use the default configuration directly, the Parameter PA01 need set as 1XXX.

1.6 Recommended Specification Chart for Breaker and Fuse

Drive Model Name	Fuse	Circuit Breaker
SDC-010A2□	5A	5A
SDC-020A2	5A	5A
SDC−040A2□	20A	10A
SDC-075A2□	20A	10A
SDC-100A2	25A	15A

Specification of Shihlin Servo Drive Fuse and Breaker

2. Installation

2.1 Precautions and Storage

- Do not install the product in the location with or nearby inflammable matters.
- Do not over tighten the wire between the drive and the motor.
- Do not place heavy objects on the top of the drive.
- Be sure to fasten every screw tightly when fixing the drive.
- Install the drive at a location with proper weight capacity.
- The motor shaft must be aligned with the shaft of the equipment.
- Do not mix metal pieces, screws and other conductive matters or inflammable matters such as oil in the drive.
- Upgrade the diameter of the U/V/W wires and the encoder cable if the length between the drive and the motor is over 20meters.
- Do NOT congest vent of the drive, otherwise breakdown may be occurred.
- Do not drop or strike the drive.

- Do not try to operate the drive if something has been damaged.
- Refer to section 10.1 and 11.3 for drive and motor storage details.

2.2 Installation Environment

The applicable ambient temperature for Shihlin drive is between $0^{\circ}C$ and $55^{\circ}C$. If it is exceeds $45^{\circ}C$, please place the drive in a well-ventilated or air-conditioned room. It is recommended to keep the ambient temperature below $45^{\circ}C$ for long-term operation to ensure the reliable performance of the product. If this product is installed in a distribution box, the size of the distribution box and the ventilation conditions must be good enough to ensure that all internal electronic devices are free from the danger of overheating, and be careful if vibration of the machine will impact the electronic devices of the distribution box.


In addition, the applicable location of Shihlin servo includes the following criteria:

- Locations without high-heating devices.
- Locations without floating dust and metal particles.
- Locations without corrosive, inflammable gas and liquid.
- Locations without water drops, steam, dust or oil dust.
- Locations without electromagnetic noise interference.
- Select a solid, vibration-free location.

2.3 Installation Direction and Clearances


Cautions:


The installation direction must follow the requirement, otherwise it may cause servo breakdown. When installing Shihlin AC servo drive, sufficient clearance must be reserved between its surrounding and adjacent objects to ensure a good cooling air flow cycle. When installing the AC servo drive, its vent cannot be sealed or dumped, otherwise it may cause breakdown.

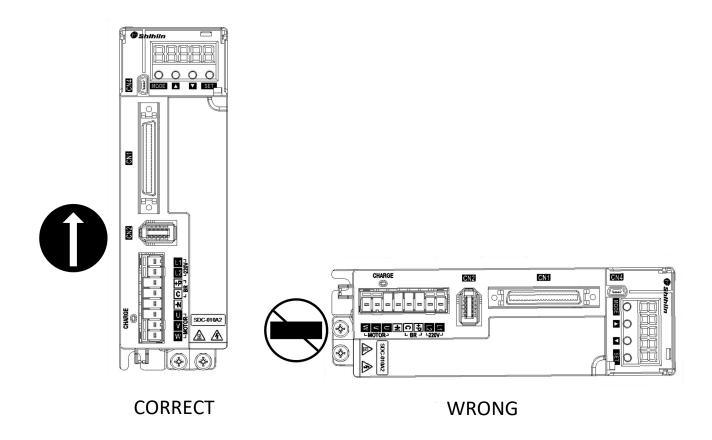

Installation diagram:

In order to have adequate air flow for ventilation, please follow the suggested clearances when installing one or more servo drives (refer to the following diagrams).

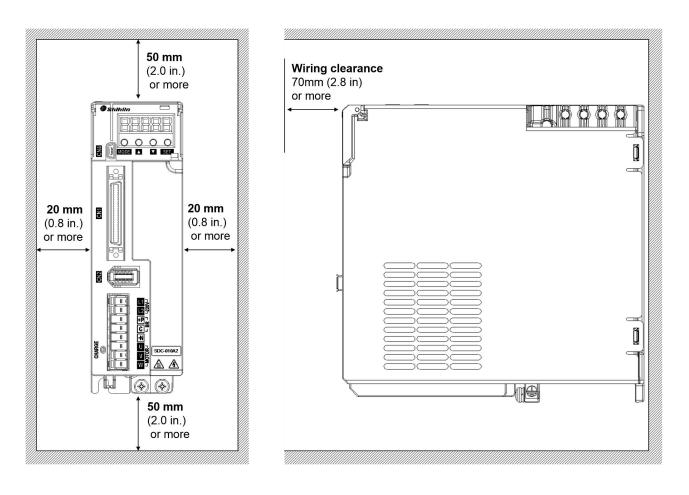

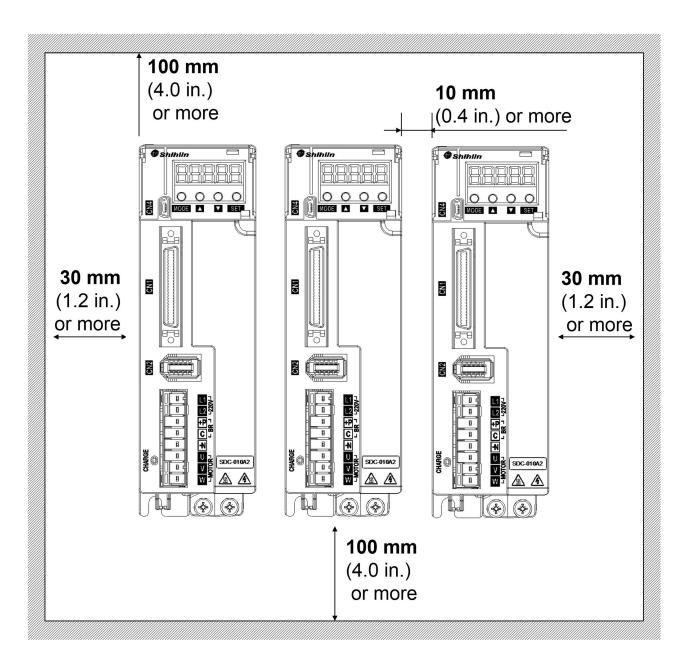


3. Wiring and Signal

This chapter explains the wiring method of Shihlin servo drive and the definition of signals, as well as the standard wiring diagrams in all modes.

3.1 Connection of power supply and peripheral equipment



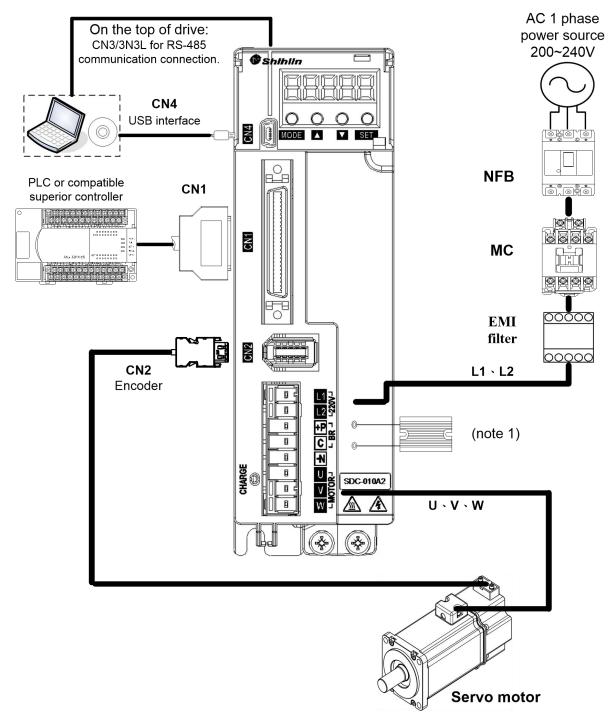

Note1: If an external brake resistor is applied, please make sure that "P" and "C" connect to the resistor, and make "P" and "N" open. If an active brake unit is applied, connect "P" and "N" to the unit and make "P" and "C" open. "Do not connect breaking resistor to P, N terminals!"

%For detailed EMI filter content, please refer to section 12.6 EMI Filter

Prevent electric shock, the ground protection (PE) terminal (marked terminal)) of the servo drive must be connected to the ground protection terminal of the controller.

3.1.2 Peripheral equipment wiring diagram-1. 5KW~3KW

Content reserved due to no such capacity currently.

3.1.3 Description of Drive Connector and Terminals


Item	Terminal name		De	scription
Power supply input	L1, L2	Connect to	single-pha	se AC power source
Motor power input terminal	U, V, W, PE	Terminal code U V W PE	Wire color red white black green	
Regenerative resistor terminal	P, C	External resistor Internal resistor	connect a P and C te	he original wiring and regenerative resistor. erminals are connected to al regenerative resistor.

Grounding terminal		Connect both the power grounding terminal and the motor grounding terminal, which is the green screw on the outside of the controller.
P: Main circuit+ terminal N: Main circuit -terminal	P, N	 When selecting to use a brake module, connect its terminal to the P terminal of servo drive, and its terminal to N terminal of servo drive. The brake module is optional purchase item and usually does not need to be connected. it is used to offset the regenerative energy when the huge regenerative power produced by the servo motor.
I/O connector	CN1	Connect to the host controller.
Encoder connector	CN2	Connect to the encoder.
RS-485 connector	CN3/CN3L	Connect to RS485 device.
USB connector	CN4	Connect to USB slot of PC.
Absolute encoder battery connecting terminal	CN5	Connect to absolute encode battery pack(optional purchase).

The following items must be paid special attention:


- 1. Separate L1, L2 and U, V, W from other wires. The separation should be at least 30 cm.
- 2. When the power supply is OFF, do not touch the power cable L1, L2 and U, V, W because the big capacitors inside the drive contains a large amount of electric charge. Wait for the charging indicator OFF before touching.
- 3. If the encoder wiring needs to be lengthened, use a twisted pair with an isolated grounded signal wire and it should not exceed 20 meters (65. 62 feet). If it exceed 20 meters, a signal cable that is twice the diameter must be used to ensure that the signal will not attenuated too much.
- 4. If the power supply and the detector (encoder) of the SV motor are not fixed on the motor, it may cause them swaying and poor wire contact.

 3.1.4 Wiring for Power Supply



- The power supply wire(U V W) of the servo drive and the servo motor must be connected correctly to avoid any abnormal operation on servo motor.
- Servo motor cannot be connected to commercial power supply, otherwise it may cause malfunction.

The power wiring of Shihlin servo drive is a single-phase power supply. In this below figure, Power ON is A contact point, Power OFF and Alarm Processing are B contact points. 1MC/a is self-contained supply, and 1MC is electromagnetic contactor.

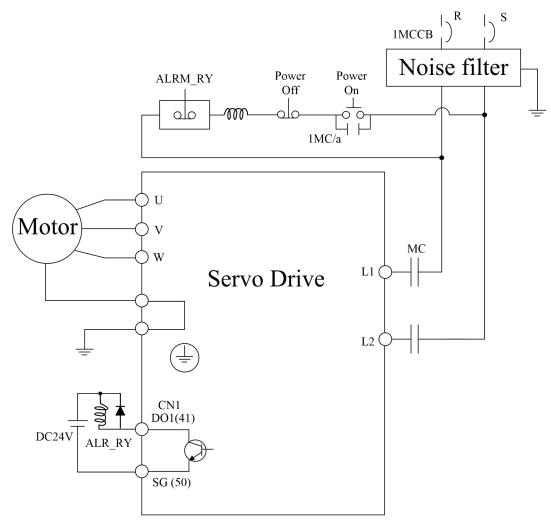

3.1.5 Connector specifications of motor U,V, W

Drive capacity	Motor model	
100W	SME-L010300000	
200W	SME-L020300000	
400W	SME-L040300000	
750W	SME-L075300000	With brake Without brake
1kW	SME-L10030°□□□	

Connector specifications of Shihlin low inertia motor U, V, W (female connector):

The following table shows the signal of low inertia motor UVW ends:

PIN	Signal	Wire color				
1	U	red				
2	V	white				
3	W	black				
4	PE	green/yellow(green is the bottom)				
5	NC	black(for motor with electromagnetic brake)				
6	NC	black(for motor with electromagnetic brake)				

★ Note: the above wiring connects to the motor itself.

3.1.6 Wire selection

	Wire[mm ²]						
Drive model	Power supply wiring(AWG)						
	L1, L2	U, V, W	P, C, N	B1, B2			
SDC-010A2		2(AWG14)		2(AWG14)			
SDC-020A2							
SDC-040A2	2(AWG14)		2(AWG14)				
SDC-075A2							
SDC-100A2							

	Encoder wiring(AWG)						
Drive model	Wire specific ation	Standard wire length	Wire count	Wire gauge			
SDC-010A2	UL1332	2meters	10	AWG26			
SDC-020A2	UL1332	2meters	10	AWG26			
SDC-040A2	UL1332	2meters	10	AWG26			
SDC-075A2	UL1332	2meters	10	AWG26			
SDC-100A2	UL1332	2meters	10	AWG26			


- ★ Please wiring base on the recommended specifications or higher to avoid danger.
- ★ The shielding end of isolation net should be grounded.
- ★ Use twisted-pair isolated wires to reduce noise interference when wiring encoder.
- ★ American Wire Gauge (AWG) is US wire diameter standard.
- ★ The standard is to use 600V vinyl wire, and the wiring distance is less than 30meters.
- ★ If the wiring distance exceeds 30meters, please consider the voltage drop before changing the wire gauge.
- ★ Use UL-certified copper wires with a rating of 75°C or higher when wiring for UL/C-UL (CSA) specifications.
- ★ Ground wire needs to use AWG14, 12in-lbs.

3.2 CN1 I/O signal wiring and introduction

3.2.1 CN1 terminal configuration diagram


Shihlin servo drives provides user-defined 9 digital input (DI) points and 5 digital output (DO) points which enable a more flexible connection method between the servo drive and the host controller. The 9 user-defined input DIs are PD02~PD09 and PD21, and the 5 output DO are PD10~PD14. In addition, it provides differential output encoder A+, A-, B+, B-, Z+, Z- signals, its pin diagram is shown as follows:


(1) CN1 connector(female)

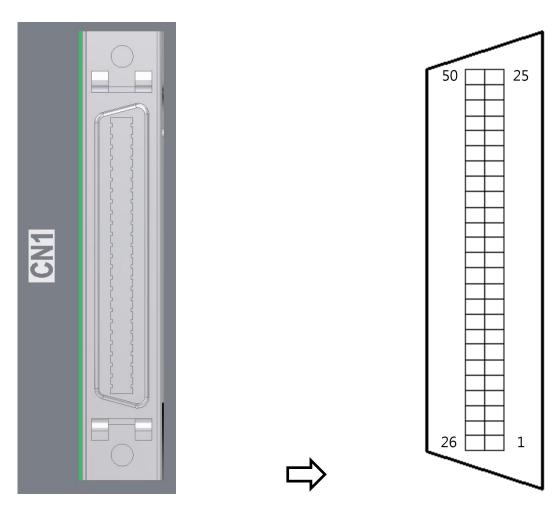


Pin assignment

 
Front view

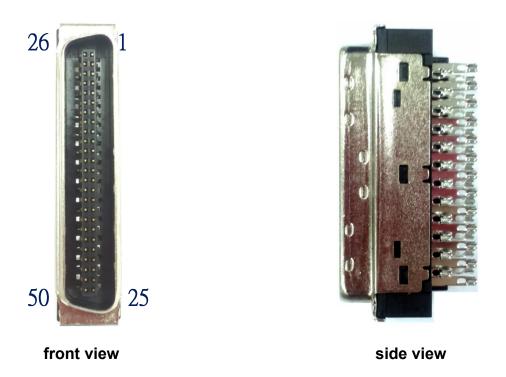

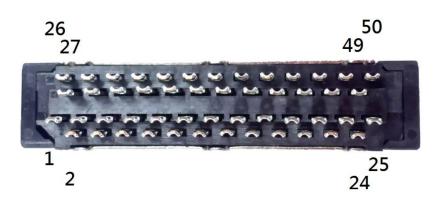



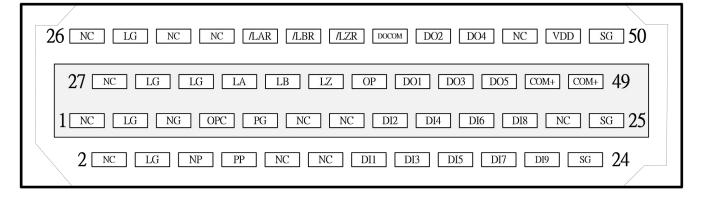



(a) SDC-A CN1 Pin definition

Pin	Code	Function	Pin	Code	Function	Pin	Code	Function	Pin	Code	Function
1	NC	NA	2	NC	NA	26	NC	NA	27	NC	NA
3	LG	Signal ground of OP	4	LG	Signal ground of OP	28	LG	Signal ground of OP	29	LG	Signal ground of OP
5	NG	Input pulse	6	NP	Input pulse	30	NC	NA	31	LG	Signal ground of OP
7	OPC	Open collector power input	8	PP	Input pulse	32	NC	NA	33	LA	Encoder A pulse output
9	PG	Input pulse	10	NC	NA	34	LAR	Encoder A pulse reverse output	35	LB	Encoder B pulse output
11	NC	NA	12	NC	NA	36	LBR	Encoder B pulse reverse output	37	LZ	Encoder Z pulse output
13	NC	NA	14	DI1	Digital input 1	38	LZR	Encoder Z pulse reverse output	39	OP	Encoder Z pulse output(Open- collector)
15	DI2	Digital input 2	16	DI3	Digital input 3	40	DOC OM	Common port of digital output	41	DO1	Digital output1

17	DI4	Digital input 4	18	DI5	Digital input 5	42	DO2	Digital output 2	43	DO3	Digital 3	output
19	DI6	Digital input 6	20	DI7	Digital input 7	44	DO4	Digital output 4	45	DO5	Digital 5	output
21	DI8	Digital input 8	22	DI9	Digital input 9	46	NC	NA	47	COM+	Digital power	input
23	NC	NA	24	SG	Digital power ground	48	Vdd (24V)	+24V power output	49	COM+	Digital power	input
25	SG	Digital power ground				50	SG	Digital power ground				

(b) SDC-A(M) CN1 Pin definition

Pin	Code	Function	Pin	Code	Function	Pin	Code	Function	Pin	Code	Function
1	Vcc (12V)	+12V power output	2	VC/ VLA	Analog Speed Command /Limit	26	Vcc (12V)	+12V power output	27	TC/ TLA	Analog Torque Command /Limit
3	LG	Signal ground of Analog I/O	4	LG	Signal ground of Analog I/O	28	LG	Signal ground of Analog I/O	29	LG	Signal ground of Analog I/O
5	NG	Input pulse	6	NP	Input pulse	30	MON1	Analog monitor output 1	31	LG	Signal ground of OP
7	OPC	Open collector power input	8	PP	Input pulse	32	NC	NA	33	LA	Encoder A pulse output
9	PG	Input pulse	10	LG	Signal ground of Analog I/O	34	LAR	Encoder A pulse reverse output	35	LB	Encoder B pulse output
11	LG	Signal ground of Analog I/O	12	NC	NA	36	LBR	Encoder B pulse reverse output	37	LZ	Encoder Z pulse output
13	NC	NA	14	DI1	Digital input 1	38	LZR	Encoder Z pulse reverse output	39	OP	Encoder Z pulse output(Open-co llector)


15	DI2	Digital input 2	16	DI3	Digital input 3	40	DOCO M	Common port of	41	DO1	Digital output1
								digital output			
17	DI4	Digital input 4	18	DI5	Digital input 5	42	DO2	Digital output 2	43	NC	NA
19	DI6	Digital input 6	20	NC	NA	44	NC	NA	45	NC	NA
21	NC	NA	22	NC	NA	46	DO3	Digital output 3	47	COM+	Digital input power
23	NC	NA	24	SG	Digital power ground	48	Vdd (24V)	+24V power output	49	COM+	Digital input power
25	SG	Digital power ground				50	SG	Digital power ground			

3.2.2 CN1 Signal Wire Shielding and Grounding


The both ends of the CN1 signal line which is the CN1 connector and the upper controller terminal, its shielding and grounding wire must be connected to the corresponding pins to effectively achieve the shielding and grounding functions.

Connecting shielded wire to the CN1 encoder connector as following instruction:


1. Pull out the metal isolation net and fix it with a copper sheet around it.

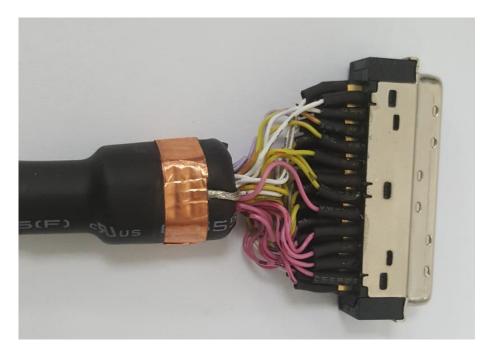


2. Screw the big metal case to fix the cooper sheet, make sure the copper sheet is completely covered the extended metal sheet, and which is contact with the metal part of the connector.

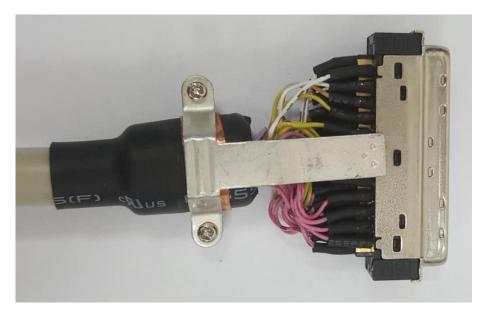

3. Put it into the connector housing as below picture shows:

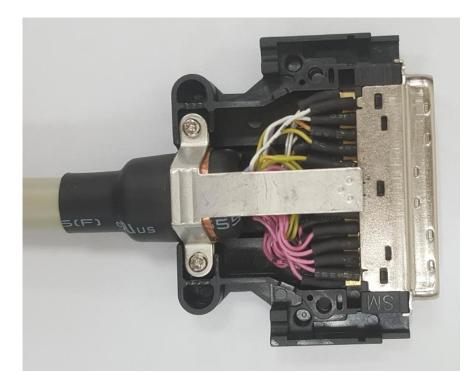

4. Fasten the housing to complete assembly:

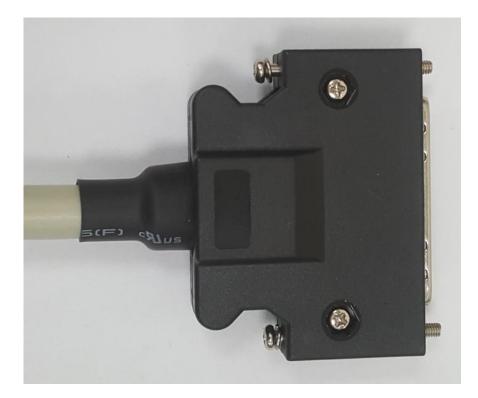

3.2.3 CN1 Terminal signal description

This section introduce the signal which mentioned in section 3.2.2.

1. CN1 terminal signal

The detailed description of each signal of total 50Pin of CN1 is as follows:

The symbols of the control modes in the following table are as follows:

- Pt : Position control mode/ position mode(terminal input)
- Pr : Position control mode/position mode(internal register)
- S: Speed control mode
- T: Torque control mode

Signal Name	Code	Pin NO	Function	Control mode
		CN1-3	It's signal ground of OP. Each pin is	
		CN1-4	connected internally.	
Signal ground of OP	LG	CN1-28		ALL
		CN1-29		
		CN1-31		
			Open-collector type(max input frequency is 200kpps)	
Forward/rever	NG		Signal between PP-SG is "forward command".	Pt
se rotation pulse		CN1-5	Signal between NP-SG is "reverse command".	
			Differential receiving type (the max input frequency is 4Mpps)	
			Signal between PG-PP is "forward	

			command". Signal between NG-NP is "reverse command". The command pulse type can be changed by PA13 setting.	
open-collecto r power input	OPC	CN1-7	When the pulse train is input in the open collector type, this pin provides DC24V.	ALL
Digital I/O signal ground	SG	CN1-24 CN1-25 CN1-50	It's common pin for input signals such as SON and EMG, etc. Each PIN is internally connected and separated from LG.	ALL

Signal Name	Code	Pin NO	Function	Control mode
Encoder A-phase	LA	CN1-33	Output the differential pulses of PA14	ALL
pulse differential output(line driver)	LAR	CN1-34	setting value in one revolution. A π/2 delay between phase A and	ALL
	LB	CN1-35	phase B.(when the servo motor runs in CCW direction)	
Encoder B-phase pulse differential output(line driver)	LBR	CN1-36	The phase sequence of rotation and difference between phase A and phase B could be defined by the PA39 setting value.	ALL
Encoder Z-phase pulse differential	LZ	CN1-37	Output the OP signal in differential line driver type.	ALL
output(line driver)	LZR	CN1-38		
Encoder Z phase pulse output (open-collector)	OP	CN1-39	Output the ZERO signal of encoder. Each revolution of servo motor generate 1 pulse.	ALL
Digital input power	COM+	CN1-47 CN1-49	Input DC24V for input interface. Connect to the the positive pole of DC24V external power supply or to the VDD terminal, but you can only choose one of the two, not both ones.	ALL
Common pin of digital output	DOCOM	CN1-40	Use as common pin of output signal, it can be applied in Sink Type and Source Type. In sink type, DOCOM is connected to SG or the "-" of external 24V power. In source type, DOCOM is connected to VDD or "+" of external 24V power. Refer to section 3.3.4 for wring detail.	ALL
Internal +24V power output	VDD (24V)	CN1-48	Output a +24V±10% power source between VDD-SG, and connect to COM+ when it used as a digital interface power supply.	ALL

The signals of DI and DO are explained in detail below:

Digital Input Wiring

The users can define the DI function by editing user parameters, see the following table for details:

Signal name	code	Function	Control mode
Servo ON	SON	If SON is ON, the basic circuit is on and servo is ready to run(servo ON status). If SON is OFF, the basic circuit is off and the servo motor is in free run status(servo OFF status).	ALL
Reset	RES	If the RES is ON for over 50ms, reset is valid, but may not able to clear an abnormal alarm status (refer to section 11. 1). The circuit is still on when set PD20 to XXX1.	ALL
Proportion control	PC	The speed controller will switch from proportion integral control to proportion control when PC is ON. When servo motor is static, 1 external pulse will generate torque and adjust position shift. Once the positioning is done(stopped), it will lock the machine shaft and turn on the proportional control signal (PC) at the same time to suppress the unnecessary torque. When the servo stops running for long time, you need to turn on both the proportion control signal and the torque control signal(TL) at the same time to control it below the rated torque.	Pt, Pr, S

Signal name	code		Function											
Internal torque limit selection	TL1	PC25 > PA05	nternal torque limit control 2 is valid when TI1 is ON. C25 > PA05 => PA05 C25 < PA05 => PC25											
Speed option 1	SP1		•			in speed control mode, and nal parameter when using								
Speed	SP2	Parameter setting		ut sigi SP2		Speed command								
option 2		When speed		0	0	NA(ZERO speed)								
		option		0	1	Inner speed command 1								
		(SP3) is not used. (initial status)		1	0	Inner speed command 2 Inner speed command 3								
			0	0	0	NA(ZERO speed)	S, T							
			0	0	1	Inner speed command 1	_, .							
		When speed	0	1	0	Inner speed command 2								
Speed		option	0	1	1	Inner speed command 3								
option 3	SP3	(SP3) is used.	1	0	0	Inner speed command 4								
			1	0	1	Inner speed command 5								
			1	1	0	Inner speed command 6								
			1	1	1	Inner speed command 7								
		To select the s	speed	limit	in toro	que control mode.								
		Parameter	Inp	ut sigi	nals	Speed limit								
		setting	SP3	SP2	SP1									

		Wh			0	0	NA(ZERO speed)								
		spe opt			0	1	Inner speed commar	nd 1							
		(SP3)			1	0	Inner speed comman	nd 2							
		(ini	used. (initial status)			1	Inner speed commar	nd 3							
			,	0	0	0	NA(ZERO speed)								
				0	0	1	Inner speed comman	nd 1							
		Wh	nen	0	1	0	Inner speed comman	nd 2							
		spe		0	1	1	Inner speed comman	nd 3							
		opt (SP:		1	0	0	Inner speed comman	nd 4							
		use	used.		0	1	Inner speed comman	nd 5							
				1	1	0	Inner speed comman	nd 6							
			1 1 1 Inner speed command				nd 7								
Forward rotation	ST1	When st directior		e servo	o mot	or,it	runs in the following								
activated			Inpu	Input signals			ervo motor starting								
		ST2 0 0 1		ST2		ST2		ST2		ST2 ST1		-	direction		
				0		5	Stop(servo locked)	-							
				0		1			CCW	-	S				
Reverse rotation	ST2				0		CW	-							
activated	- : L		1		1	5	Stop(servo locked)	-							
		If both ST1 and ST2 are ON or OFF during operation, the													
		servo will be decelerated to stop base on PC18 and the													
		motor w	rill be lo	ocked	•										

Forward rotation	RS1				orque (follows	direction of the servo r	motor. The				
option			Input signals			the torque direction					
			RS2	RS1							
			0	0		no torque genera	ated	т			
Reverse rotation	RS2		0	1		ard rotation torque, re neration.	verse rotation				
option			1	0 Reverse rotation torque, forward rotation regeneration.							
			1 1 no torque generated								
		This	s activ	vated	signal	assign current positio	n to the origin in				
Homing	ORGP		node.					Pr			
						o activate homing.					
Return to origin	SHOM	orig	in, the	e fund	•	n register mode, wher searching the origin i	•	Pr			
Electronic gear option 1	CM1	CM para	2 can	be u er car	sed for	are used, the combin selecting the E-gears e numerator with 4 kin	, and the				
			1 and ection			t be used in the absol	lute position				
		GOR		put si		Electronic gear		Pt			
	CM2 CM1 numerator										
Electronic gear option	CM2		0		0	PA06(CMX)					
2			0		1	PC32(CMX2)					
			1		0	PC33(CMX)					
			1		1	PC34(CMX4)					

Clear	CR	Turn CR on to clear the position control counter droop pulses on its leading edge. When PD18 is set to xxx1, the pulse are always cleared if CR is on.	Pt, Pr
Gain switching option	CDP	When using this signal, enable CDP and turn CDP on to change the gain values to the multiplier of related parameters.	ALL
External emergency stop	EMG	Turn EMG OFF, the motor will be in emergency stop state, servo will be off and the electromagnetic brake will be activated. Turning EMG ON will release the emergency stop status in urgent cases. When set the value of PD01 to 1XXX, this signal will be automatically on(keeps ON).	ALL
Limit of forward rotation	LSP	To use as the switch for forward rotation limit. When LSP is on, the motor can be operate forwardly.	Pt, Pr, S
Limit of reverse rotation	LSN	To use the switch for reverse rotation limit. When LSN is on, the motor can be operate reversely.	Pt
Inhabit pulse input	INHP	To inhabit pulse input. In position mode, turn INHP on to make the external pulse input command invalid.	

Signal name	Code				Func	tion				Control mode
Control switch	LOP	LOP 0 1 In speed/t select the 0 1 In torque/ select the LOP 0	0 Position 1 Speed 1 Speed n speed/torque control switch mode, it can be used to elect the control mode. LOP control mode 0 speed 1 torque n torque/position control switch mode, it can be used to elect the control mode. LOP control switch mode, it can be used to elect the control mode.						to	Refer to introduc tion in differen t control mode
Position command option 1	POS1	Position command	POS6	POS5	POS4	POS3	POS2	POS1	CTRG	
Position command option 2	POS2	P0	0	0	0	0	0	0	↑ (_
Position command option 3	POS3	P1	0	0	0	0	0	1	↑	Pr
Position command option 4	POS4	P50	1	1	0	0	1	0	↑	

Position command option 5 Position command	POS5 POS6	P51	1	1	0	0	1	1	<u>↑</u>	
option 6		P63	1	1	1	1	1	1	Ţ	
Position command trigger	CTR G	CTRG is	n position mode with internal commands(Pr mode), when CTRG is ON, it choose a position command by the ON/OFF status according to combination of POS1~POS6.							Pr
Event trigger Pr command 1	EV1		The event trigger PR command 1-4: The status change of EV1~EV4 is used as a trigger event This can be set by PF83 or PF84. Applicable case: sensor, trigger preset procedure.							
Event trigger Pr command 2	EV2									Pr
Event trigger Pr command 3	EV3									
Event trigger Pr command 4	EV4									
Delta ABS transfer mode	ABSE	When ABSE is on, servo will enter ABS mode and enables ABSQ, ABSR, ABSD, ABSC. When ABSE is on, the functions of DI4,DO2,DO3 can not be defined by the parameters. The DI4 function is ASDQ, the DO2 function is ABSR, the DO3 function is ABSD. In addition, ABSC can be defined via the DI parameter setting.					ALL			
Mitsubishi ABS transfer mode	ABS M	When ABSM is on, servo will enter ABS mode and enables ABSR, ABST, ABSB0, ABSB1,ABSC. When ABSE is on, the functions of DI4,DO2,DO3,DO4 can not be defined by the parameters. The DI4 function is ABSR, the DO2 function is ABST, the DO3 function is						ALL		

			ABSB0, the DO4 function is ABSB1. In addition, ABSC						
Delta/Mitsubi shi original position setting	ABSC	When ABSC absolute end	can be defined via the DI parameter setting. When ABSC is on, the number of revolution stored in absolute encoder are cleared. But this digital input is only valid when ABSE or ABSM is on.						
Motor stopped signal in Pr mode	STOP	The motor st in Pr mode.	The motor stops running, when the stop signal is activated n Pr mode.						
Torque command option 1	TC1	Torque	Input s	signal TC1	Command				
		command code			source	Description			
Torque		T1	0	0	N/A(no command	For factory test only	т		
command option 2	TC2	T2	0	1	Internal	PC73 value			
		Т3	1	0	register	PC74 value			
		T4	1	1	parameter	PC75 value			
Pt-Pr switching mode	Pt-Pr	Switch mutually between Pt and Pr. Pt-Pr OFF: Pt mode Pt-Pr ON: Pr mode							
	DTE	1					1		

- 1. ST1/RS2 and ST2/RS1 automatically switch signals internally when setting PA01 in speed mode (ST1) or torque mode (RS2).
- 2. When the user need to define the terminal function by himself, set PA01=0□□□ to activate. If PA01 is set to 1□□□, the recommended setting value of the DI/DO digital input function will be its setting value.
- 3. For detailed DI setting of absolute servo system, please refer to CH14.

Digital Output DO

The user can define the DO function by setting related parameters. Please refer to details in the following table:

Signal name	Code	Function	Control mode
Ready	RD	When servo is ready to operate, RD will turn ON.	ALL
Alarm	ALM	When power is off or protection circuit cuts off the main circuit, ALM signal will turn OFF.When there is no alarm occurs, ALM will be ON 1 second after the power turning on.	ALL
In-position ready	INP	INP turns on when the number of error pulses is in the preset range. The range could be changed by parameter setting. When the in-position range is increased, INP may be kept conductive during low-speed rotation.	Pr, Pt
Speed attained	SA	When servo motor speed is close to the setting value, the SA will turn ON. The SA will keep ON when setting speed is below 50 rpm.	S
Homing complete	HOME	After homing is completed, the HOME signal turns ON.	Pr
Torque limiting control	TLC	TLC is on as motor generated torque reaches the setting of inner torque limit 1 (PA05). TLC is off when SON signal turns off.	Pr, Pt, S
Speed limiting control	VLC	In torque control mode, VLC is on when motor reaches speed limit by internal speed command 1-7. VLC is off when SON signal turns off.	Т
Electromag netic brake interlock	MBR	When using electromagnetic brake motor, please set PA01 to □1□□. MBR is off if servo turns off or alarm occurs. MBR is on if servo turns on.	ALL

Warning	WNG	WNG is on when Warning occurs. WNG signal is turning off when no warning occurs.	ALL
Zero speed detection	ZSP	ZSP will be ON when servo motor speed runs to below 50 rpm. the zero speed range can be adjusted by parameter.	ALL
Internal position command completion output	CMD OK	CMDOK is on when internal positioning command is completed or stopped.	Pr
overload level reached	OLW	The OLW signal is ON when reaching the overload level setting.	ALL
Internal position reached	МС_ОК	When the digital output of CMD_OK and INP are ON, the MC_OK signal will turn on. Otherwise, it will turn off.	Pr
Position command overflow	OVF	The OVF signal is ON when the position command overflows.	Pr
Software positive limit reached	SWPL	When the position command exceeds the software positive limit(PF86)setting value, SWPL will be ON. Otherwise, SWPL will be OFF.	Pr
Software negative limit reached	SWNL	When the position command is less than the software negative limit(PF87)setting value, SWNL will be ON. Otherwise, SWNL will be OFF.	Pr
Delta absolute system warning output	ABSW	The related alarms of Delta's absolute system is indicated by this DO output.	ALL
Mitsubishi absolute position lost	ABSV	ABSV is ON when Mitsubishi absolute position value is lost.	ALL

Mode switching status	LOPM	In control switching mode, the current control mode (related to LOP) is displayed as follows: 1. when PA01= <u>XXX</u> 1, LOPM represents the current control mode as follows: LOPM OFF: position mode LOPMON: speed mode 2. When PA01= <u>XXX</u> 3, LOPM represents the current control mode as follows: LOPM OFF: speed mode LOPM OFF: speed mode 3. When PA01= <u>XXX</u> 5, LOPM represents the current control mode as follows: LOPM OFF: torque mode LOPM OFF: torque mode LOPM OFF: torque mode	ALL
Software digital output	S_DO0 ~ S_DOF	To output bit0~bit15 of PD33.	ALL
Servo state Ready	SRDY	When the driver is powered on, if there is no abnormal display, then SRDY ON	ALL

NOTE

- 1. INP and SA automatically switch signals internally when setting PA01 in speed mode or position mode.
- 2. TLC and VLC automatically switch signals internally when setting PA01 in speed mode or position mode.

Shihlin servo has 9 digital input (PD02~ PD09 and PD21) and 5 digital output. In different control modes, its function is also different, you can refer to below table for details.

DI code	Signal	Function	Pt	Pr	S	Т	Pt-S	Pt-T	Pr-S	Pr-T	S-T
0x01	SON	Servo ON	DI1	DI1	DI1	DI1	DI1	DI1	DI1	DI1	DI1
0x02	RES	Reset	DI5	DI5	DI5	DI5	DI5	DI5	DI5	DI5	DI5
0x03	PC	Proportion control	DI3								
0x04		None									
0x05	TL1	Inner torque limit option	DI4								
0x06	SP1	Speed option 1			DI6	DI6	DI2	DI2		DI5	DI6
0x07	SP2	Speed option 2			DI2	DI2					DI2
0x08	SP3	Speed option 3									
0x09	ST1	Forward rotation start			DI3		DI3		DI3		
0x0A	ST2	Reverse rotation start			DI4		DI4		DI6		
0x0A	RS1	Forward rotation option				DI4		DI4		DI6	DI4
0x09	RS2	Reverse rotation option				DI3		DI3		DI3	DI3
0x0B	ORGP	Origin position									
0x0C	SHOM	Return to origin									
0x0D	CM1	Electronic gear option1	DI2								
0x0E	CM2	Electronic gear option2									
0x0F	CR	Clear	DI6	DI6			DI6	DI6			
0x10	CDP	Gain switch signal									
0x11	LOP	Control switching					DI6	DI6	DI5	DI6	DI2
0x12	EMG	External emergency stop	DI7	DI7	DI7	DI7	DI7	DI7	DI7	DI7	DI7
0x13	POS1	Position command option 1		DI2					DI2	DI2	

The DI default function of the CN1 changes depending on the control mode for SDC-A

0x14	POS2	Position command option 2		DI3							
0x15	POS3	position command option 3									
0x16	CTRG	Position command trigger		DI4					DI4	DI4	
0x18	LSP	Limit of forward rotation	DI9								
0x19	LSN	Limit of reverse rotation	DI8								
0x1A	POS4	Position command option 4									
0x1B	POS5	Position command option 5									
0x1C	POS6	Position command option 6									
0x1D	INHP	Inhabit pulse input									
0x1E	EV1	Event trigger Pr command 1									
0x1F	EV2	Event trigger Pr command 2									
0x20	EV3	Event trigger Pr command 3									
0x21	EV4	Event trigger Pr command 4									
0x22	ABSE	Enable Delta absolute system									
0x22	ABSM	Enable Mitsubishi absolute system									
0x23	ABSC	Absolute system origin setting									
0x24	STOP	Pr mode stop command									
0x2D	TC1	Torque command option 1									
0x2E	TC2	Torque command option 2									
0x2F	Pt-Pr	Pt-Pr switching mode									

The DO default function of the CN1 changes depending on the control mode for SDC-A

DO	Signal	Function	Pt	Pr	S	т	Pt-S	Pt-T	Pr-S	Pr-T	S-T
code											
0x01	RD	Ready	DO5	DO5	DO5	DO5	DO5	DO5	DO5	DO5	DO5
0x02	ALM	Alarm	DO3	DO3	DO3	DO3	DO3	DO3	DO3	DO3	DO3
0x03	INP	In-position ready	DO1	DO1			DO1	DO1	DO1	D01	
0x03	SA	Speed attained			DO1		DO1		DO1		DO1
0x04	HOME	Homing complete									
0x05	TLC	Torque limiting control	DO4		DO4		DO4	DO4	DO4	DO4	DO4
0x05	VLC	Speed limiting control				DO4		DO4		DO4	DO4
0X06	MBR	Electromagnetic brake interlock									
0x07	WNG	Warning				DO1					
0x08	ZSP	Zero speed detection	DO2	DO2	DO2	DO2	DO2	DO2	DO2	DO2	DO2
0x09	CMDOK	Inner position command completion output		DO4					DO4	DO4	
0x0A	OLW	Overload level reached warning									
0x0B	мс_ок	Both CMDOK and INP are reached the level									
0x0C	OVF	Position command overflow									
0x0D	SWPL	output of software positive limit reached									

0x0E	SWNL	Output of software negative limit reached				
0x0F	ABSW	Absolute system warning(Delta)				
0x10	ABSV	Absolute system lost warning (Mitsubishi)				
0x17	LOPM	Mode switching status				
0x19	SRDY	Servo state Ready				
0x20	S_DO1	Software digital				
~	~	output 1- software digital output 16	Applicable in all modes			
0x2F	S_SOF					


Recommended setting values for DI/DO input and output functions for SDC-A(M)

Parameter	Pin No.	PT	PR	S	Т
PD02	DI1	SON	SON	SON	SON
PD03	DI2	CM1	CTRG	ST1	RS1
PD04	DI3	RES	POS1	SP1	RS2
PD05	DI4	EMG	EMG	EMG	EMG
PD06	DI5	LSN	LSN	LSN	SP1
PD07	DI6	LSP	LSP	LSP	SP2
PD10	DO1	ZSP	ZSP	ZSP	ZSP
PD11	DO2	ALM	ALM	ALM	ALM
PD12	DO3	RD	RD	RD	RD

Note : SDC-A(M) only has 6 DI and 3 DO pins


3.2.4 Interface wiring diagram

(1) Digital input in SINK type

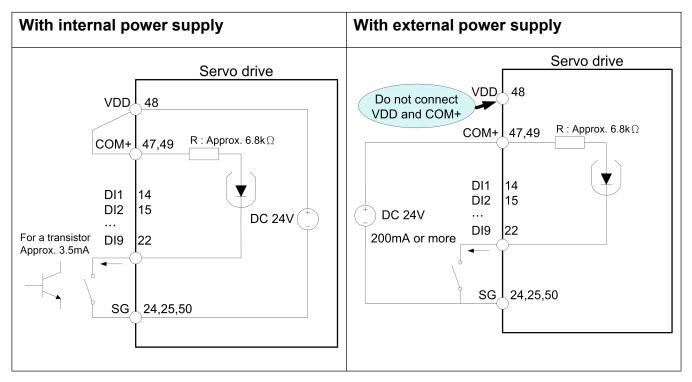


(2) Digital input in Source type

In this mode, all digital input signal are in Source type, and Source output is disabled.

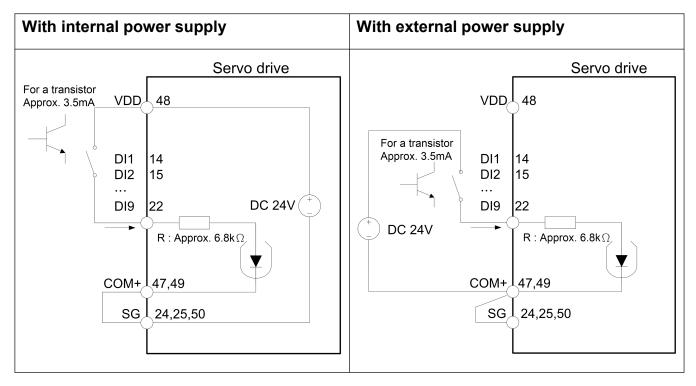

(3) **Digital output**


It can drive Lamp, Relay and photocoupler when a diode for relay load and a suppressing resistor for lamp load is installed. (Permissible current: below 40 mA; surge current: below 100 mA).

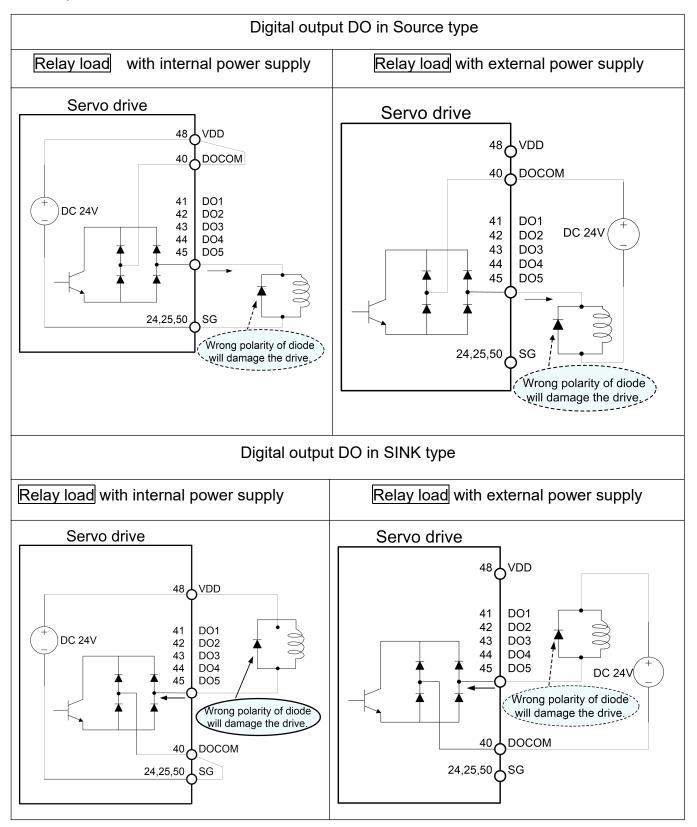


(4) Encoder position output

Encoder output contains open-collector type and differential line driver type. Open-collector type output is only available for CN1-39(OP).

The maximum input current of the open-collector encoder pulse detection circuit is 35mA.

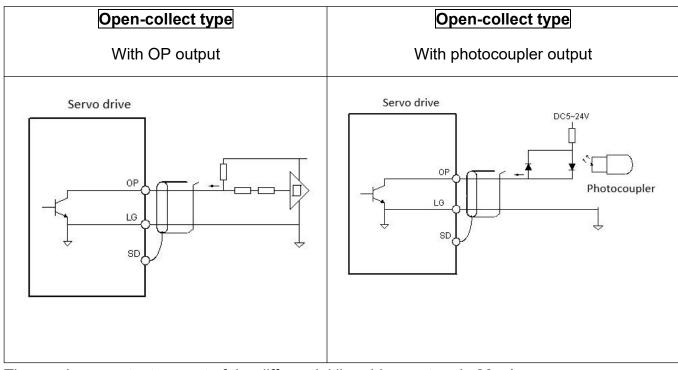



The maximum output current of the differential line drive system is 20mA.

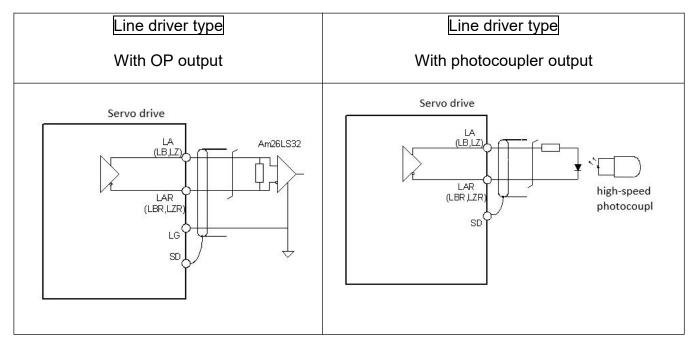

(5) Pulse command input


Pulse command can be input by open-collector type (maximum input pulse is 200kpps) and differential line driver type(maximum input pulse is 4Mpps).

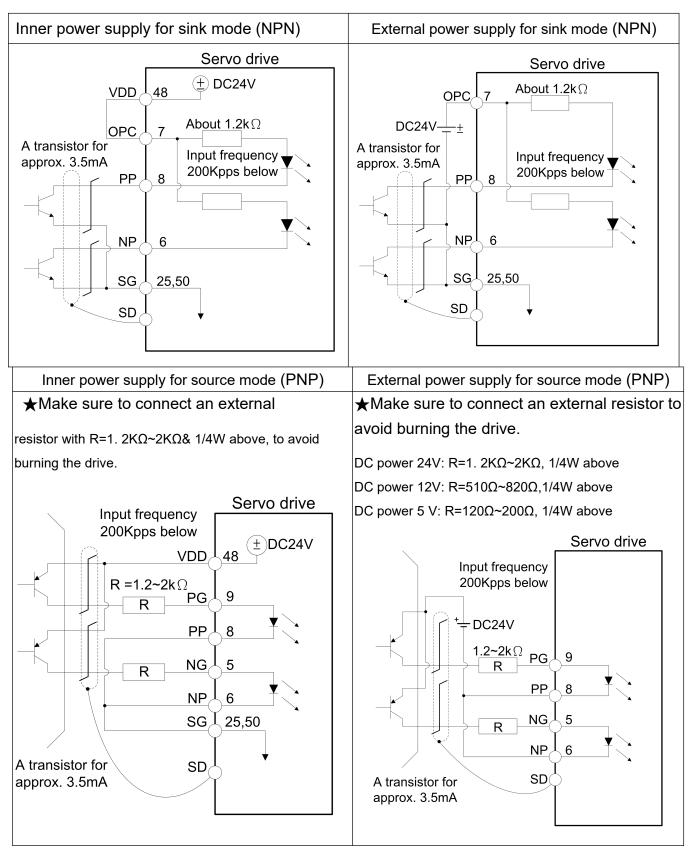


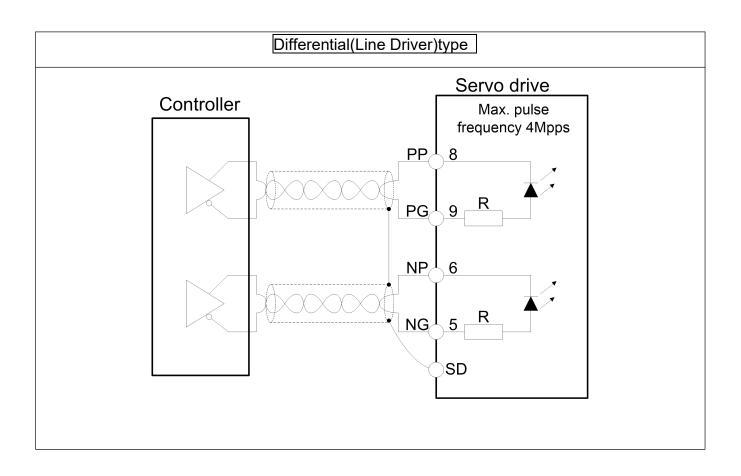

Note 1: It is recommended to use a twisted pair shielding wire for PP-PG and for NP-NG.

(6) Speed analog command, torque analog command and MON1 analog output.

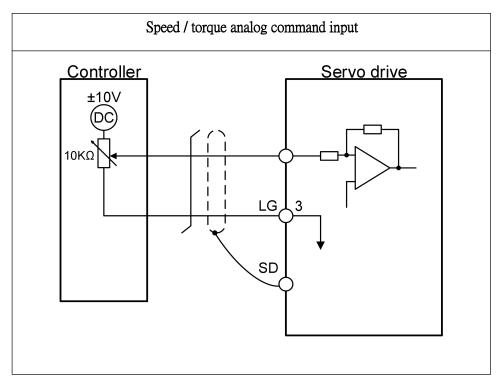

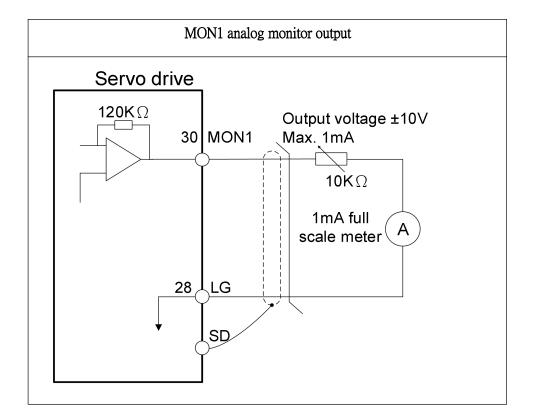

3.2.5 User-specified DI and DO signals

The preset DI and DO signals of Shihlin Servo are the signals of the position mode. If the preset DI/DO signals is not base on customer's requirement or customer adjusted PA01 to change control mode, you can redo the DI/DO signal setting. DI1 ~ DI12 and DO1 ~ DO5 signal are set by PD02~PD09 & PD21 and PD10~PD14 separately. You can input the DI code or DO code in the corresponding parameters to set its function. Below table will explain the DI/DO corresponding CN1 Pin and its parameters.

CN1 Pin	Signal	Parameter
CN-14	DI1	PD02
CN-15	DI2	PD03
CN-16	DI3	PD04
CN-17	DI4	PD05
CN-18	DI5	PD06
CN-19	DI6	PD07
CN-20	DI7(Note1)	PD08
CN-21	DI8(Note1)	PD09
CN-22	DI9(Note1)	PD21

CN1 Pin	Signal	Parameter
CN-41	DO1	PD10
CN-42	DO2	PD11
CN-43	DO3(Note1)	PD12
CN-44	DO4(Note1)	PD13
CN-45	DO5	PD14

Note1 : SDC-A(M) drive does not have this IO


3.3 CN2 encoder signal wiring and description

The internal encoder connector pin assignment and terminal appearance as below:

(1)CN2 connector (Female)

(2)CN2 connector (Male)




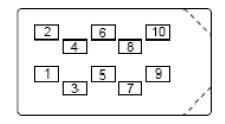

3M connector rear view



Connector side view

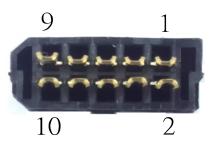

Molex connector rear view

CN2 incremental/absolute encoder signal table:

Pin	Pin marking	Signal
1, 3	Vcc(5V)	5V power supply for encoder
2	GND	5V ground
4	GNDB	3. 6V ground
5	Vcc(3. 6V)	3. 6V power battery for encoder
6	ENCP	Encoder communication(+)
7	ENCN	Encoder communication(-)
8,9,10		
Casing	Shielding	Shield

3.3.1 Encoder lead wire connector specifications

Low capacity motor

The applicable Shihlin servo capacity is shown in the table below


Drive capacity	Motor model name	
100W	SME-L010300000	
200W	SME-L020300000	$\frac{1}{2}$
400W	SME-L040300000	4 5 6
750W	SME-L075300000	789
1kW	SME-L100300000	

Pin	Pin marking	Signal
1		
2		
3	Vcc(3. 6V)	3. 6V power supply for battery
4	GNDB	3. 6V ground
5	ENCN	encoder communication(-)
6	ENCP	encoder communication(+)
7	Vcc(5V)	5V power supply for encoder
8	GND	5V ground
9	Shielding	Shield

- ★ Note: the above wiring connects to the motor itself.
- ★ Refer to P2 for □□□ meaning.

3.4 CN3/CN3L communication port wiring and description

Shihlin servo CN3/CN3L are interface for RS-485 communication. The user can perform parameter setting, status monitoring, test operation and other actions by connecting the driver to a computer which is installed with Shilin servo communication software. The CN3/CN3L allows RS485 communication between servo and the computer. The RS485 provides a longer distance communication and simultaneous connection of multiple drives.

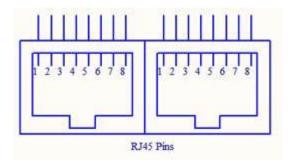


CN3/CN3L Pin NO	Pin marking	Function
1~3		NC
4	RS-485-B	Trans/receive data with the differential terminal B.
5	RS-485-A	Trans/receive data with the differential terminal A.
6-8		NC
	ΙΟΤΕ	

1. For RS-485 communication details, please refer to section 9.1

3.5 CN4 USB communication port

Shihlin servo drive provides USB communication slot(CN4) which is convenient to plug in and operate. Same as RS-485, when CN4 is connected to PC with universal mini-USB, you can use a PC with Shihlin communication software to perform parameter setting, status monitoring and test operation, etc.

Mini-USB is quite common in the market and very easy to buy, which greatly increases the convenience of users.

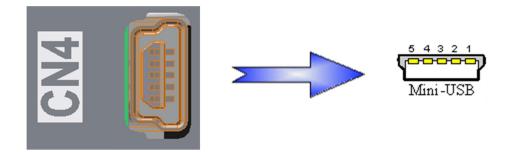


The following table shows Mini-USB standard pin assignment:

Pin NO	Pin function
1	+5V
2	D-
3	D+
4	NC
5	GND

3.6 CN5 absolute encode battery connector.

When using an absolute servo motor, an external absolute encoder battery box is required. CN5 is a battery connector. After the battery is connected, the parameter setting can be performed.

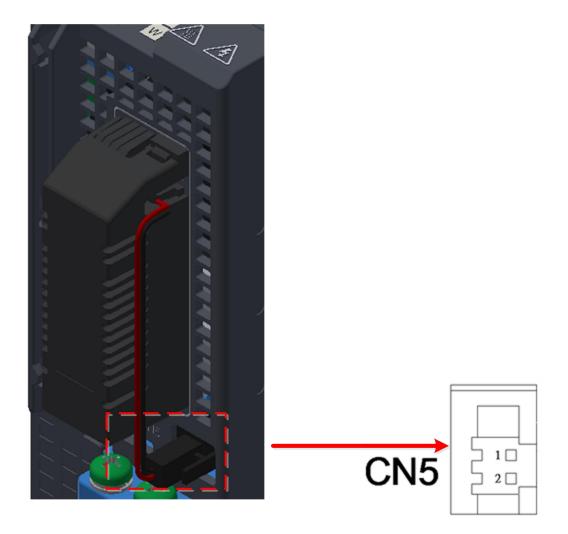

The following table shows the standard pin assignment of CN5.

Pin NO	Pin function	Function
1	Vcc(3. 6V)	3. 6V for battery
2	GND	3. 6V ground

3.7 Standard wiring instruction

•Only qualified engineer can do the wiring.

 
•The wiring must be done more than 20 minutes after the power is turned

off, and the voltage must be confirmed with an electric meter, otherwise it may cause electrical shock.

•The servo drive and servo motor must be well grounded.

•Install the servo drive and motor before wiring, otherwise it may cause electric shock.

•Don't scratch or apply excessive stress on the cable, or hold it down by heavy objects.



•The wiring of cables and terminals should be correct, otherwise it may

cause damage or abnormal operation.

•The polarity (+/-) must be correct, otherwise it may cause damage or abnormal operation.

•The polarity of the surge absorbing diode installed on the DC relay for output control cannot be reversed, otherwise the alarm signal may have no output and emergency stop protection circuit will be disabled as well.


•The electric device nearby the servo drive may have electromagnetic interference, please use the EMI suppression filter to improve.

•Don't install phase-in capacitor, surge absorber, or EMI noise suppression in the power line of the servo motor.

•When using a regenerative resistor, switch power off by regenerative abnormal signal. Otherwise, it may cause a fire due to overheated regenerative resistor.


•Do not modify the servo drive or servo motor.

3.7.1 Position control mode(Pr Mode) wiring diagram for SDC-A

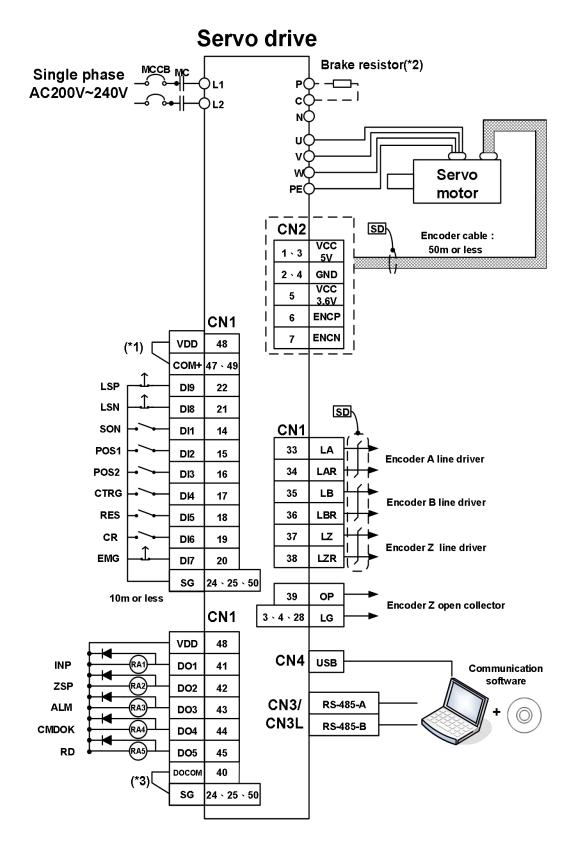


- ♦ Note: 1. If the external power is applied, do not connect VDD and COM+.
 - 2. See section 3.1 for the wirings of brake resistor.
 - 3. See section 3.3.6 for DO sink or source wiring

3.7.2 Position control mode(Pt Mode) wiring diagram for SDC-A

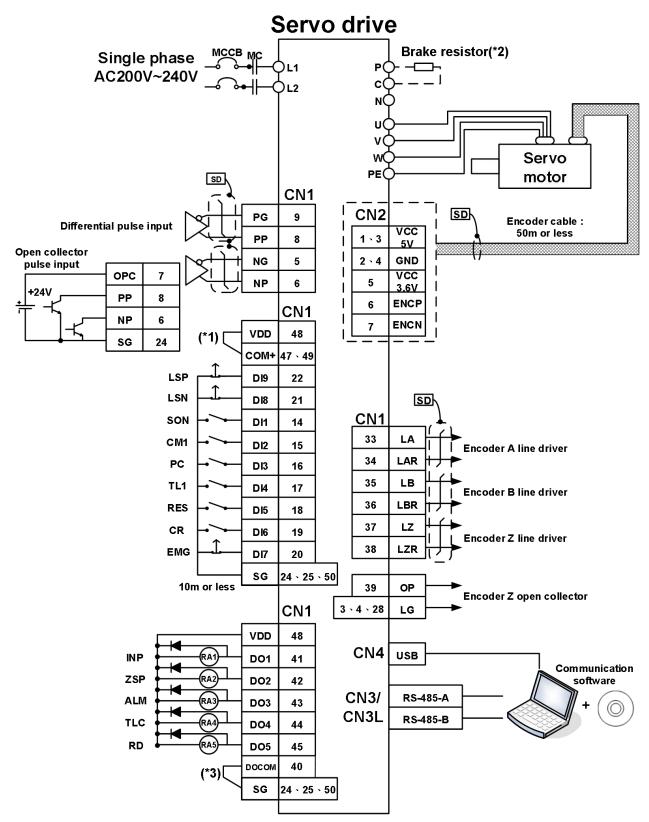


- ♦ Note: 1. If the external power is applied, do not connect VDD and COM+.
 - 2. See section 3.1 for the wirings of brake resistor.
 - 3. See section 3.3.6 for DO sink or source wiring

Position control mode(Pt Mode) wiring diagram for SDC-A(M)

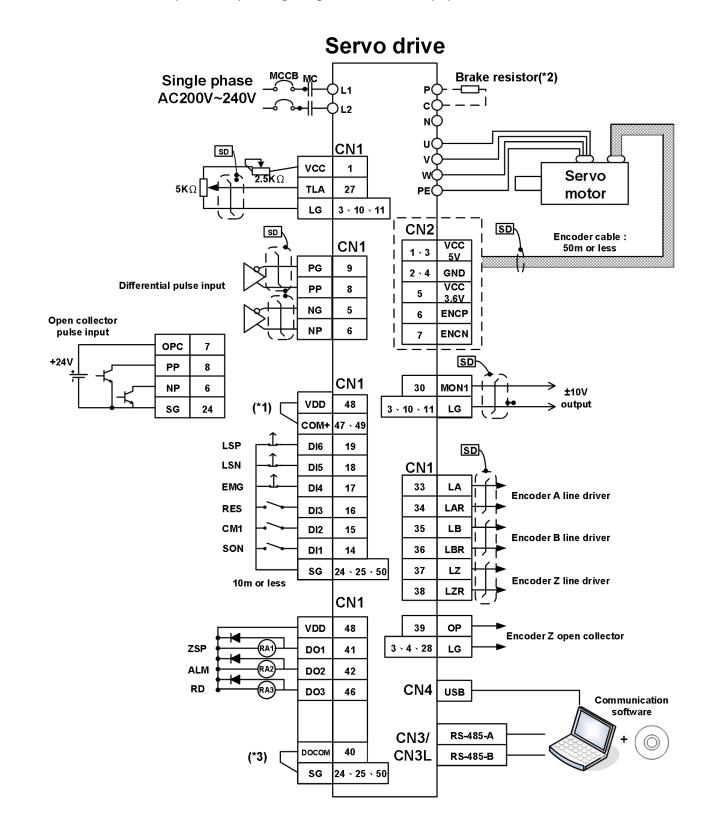


- ♦ Note: 1. If the external power is applied, do not connect VDD and COM+.
 - 2. See section 3.1 for the wirings of brake resistor.
 - 3. See section 3.3.6 for DO sink or source wiring

3.7.3 Speed control mode (S Mode)wiring diagram for SDC-A

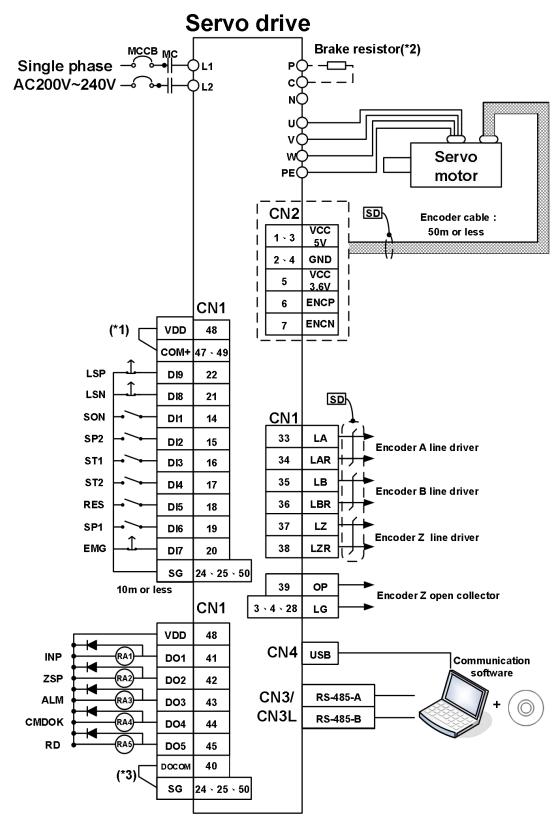


- ♦ Note: 1. If the external power is applied, do not connect VDD and COM+.
 - 2. See section 3.1 for the wirings of brake resistor.
 - 3. See section 3.3.6 for DO sink or source wiring

Speed control mode (S Mode)wiring diagram for SDC-A(M)

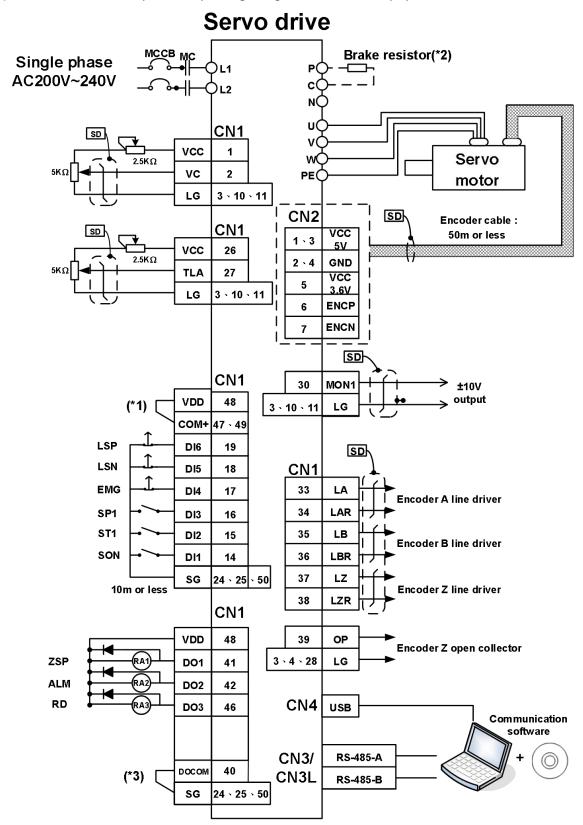


- ♦ Note: 1. If the external power is applied, do not connect VDD and COM+.
 - 2. See section 3.1 for the wirings of brake resistor.
 - 3. See section 3.3.6 for DO sink or source wiring

3.7.4 Torque control mode (T Mode) wiring diagram for SDC-A

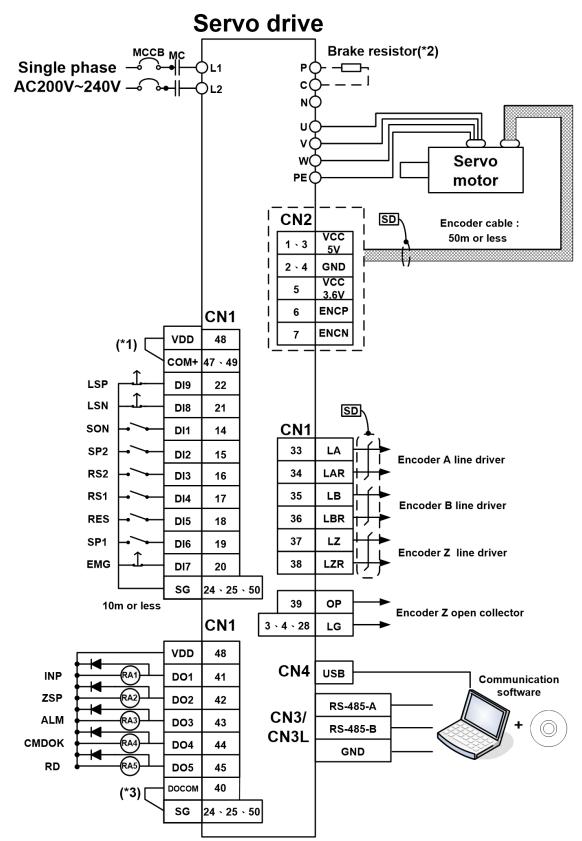

- ♦ Note: 1. If the external power is applied, do not connect VDD and COM+.
 - 2. See section 3.1 for the wirings of brake resistor.
 - 3. See section 3.3.6 for DO sink or source wiring


Torque control mode (T Mode) wiring diagram for SDC-A(M)

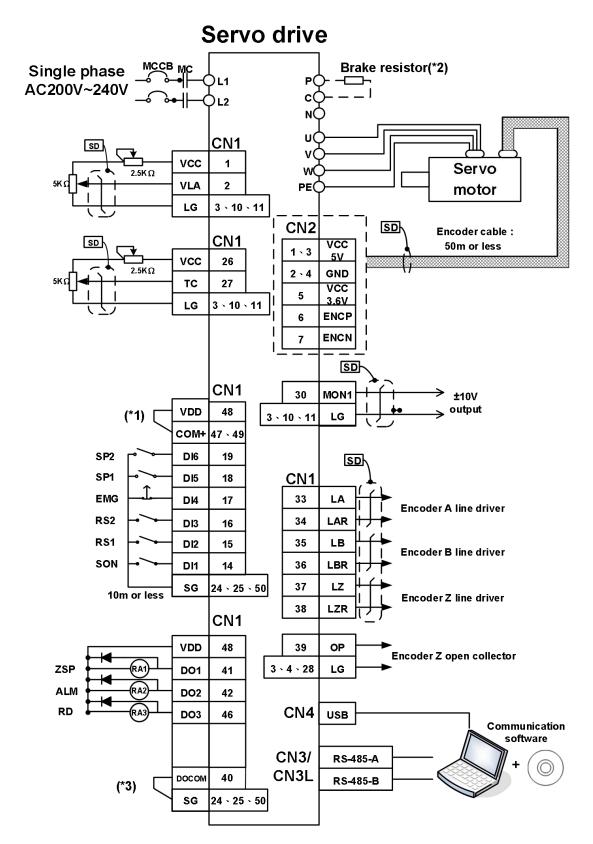

- ♦ Note: 1. If the external power is applied, do not connect VDD and COM+.
 - 2. See section 3.1 for the wirings of brake resistor.
 - 3. See section 3.3.6 for DO sink or source wiring

4. Panel display and operation.

This chapter describes the panel status of Shihlin Servo Drive and the operation instructions for the panel.

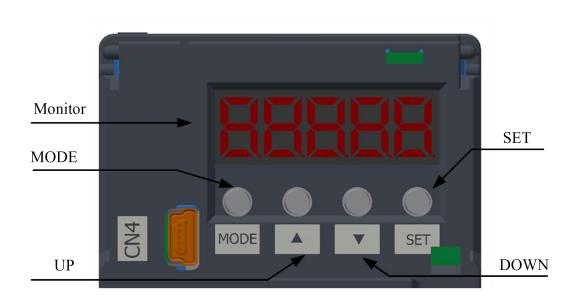

4.1 Name of each part of the panel

Name	Function
Monitor	Five groups of seven-segment LED are used to display monitoring values, parameter values, set values, etc.
Mode button	The key is to enter into or exit from parameter writing mode, alarm mode, monitoring mode and setting mode. This button is shift function when servo is in parameter writing mode.
UP button	This button is used to scroll up the parameter code or set value.
Down button	This button is used to scroll down the parameter code or set value.
SET button	To display and save the set value.

4.2 Displayed procedure

Press "MODE" key once to shift to the next display mode. Refer to section 4.4 and later for related display. To read or set the extension parameters, make them valid with the PA42 setting.

Display process	Initial Screen	Function description	Reference
Status MODE	<u>FP!</u>	Servo status display This message appears at power-on	Section 4.3
	81% o	One touch auto tuning function	Section 4.4
		Display current alarm and history records	Section 4.5
	<u>rd-o</u> F	Sequence display, external signal display, DO forced output, test operation, inertia estimated, software version display.	Section 4.6
Basic	P <u>80</u> (Display and setting of basic parameters.	
Gain/Filter	P <u>60</u> 1	Display and setting of Gain/Filter parameters.	
Extended parameters	P <u>[</u>]	Display and setting of extended parameters.	Section
I/O setting MODE	1 <u>06.</u> 9	Display and setting of I/O related parameters.	4.7
Pr related parameters	P <u>E</u> [Pr mode related parameters group 1	
Pr related parameters	P <u>F</u> []	Pr mode related parameters group 2	

4.3 Status display

- The servo status during operation can be displayed on the 5-digit 7-segment LED display.
- Press the "UP" and "DOWN" buttons to change the content arbitrarily.
- When the power is on, select the displayable symbol and press the "SET" button to show its data.
- The 7-segment LED display can show the last 5 digits of the 16 items data such as motor rotation speed.
- If the display value is 5 digits, its negative value is displayed in 5 seven-segment display and its decimals will light up. When the display value is 4 digits or less, the negative value is on leftmost seven-segment display.

• Example :

Examples are listed in the following table:

Item	Status	Display method
		7-segment LED display
Motor rotation speed	Forward rotation at 2500r/min	2588
	Reverse rotation at 3000r/min	-3888
Loaded motor inertia ratio	15.5 times	
Feedback pulse number of the motor (High 5-digit)	The value is 1234567890 High 5-digit → 1234.5	
Feedback pulse number of the motor (low 5-digit)	The value is 1234567890 Low 5-digit → 67890.	

Parameter wring completed	Write successfully	
Parameter wring failed	Writing fail when servo is on(SON on)	Rewrite after turning the SON off.
Parameter writing value is out of range	Parameter writing value is out of range	Rewrite parameter setting value.

PS : For detailed numerical display of panel data, please refer to the parameter numerical display example in section 4.7.

Note: When setting the panel parameters, each parameter has the upper and lower limits.

- (a) When the decimal data is modified, the modification should be within the upper and lower limits.
- (b) When the hexadecimal data is modified, each Hex value has its upper and lower limits.

Status overview

The servo status are as follows:

Status	symbol	Unit	Content	Range
Feedback pulse number of the motor (High 5-digit) (before E-Gears)	FPH. I	pulse	Feedback pulse number of the motor (High 5-digit) (before E-Gears) Ex : if feedback pulse number is 123456789 pulse, 1234 is displayed. Note1	-21474~ 21474
Feedback pulse number of the motor (low 5-digit) (before E-Gears)	FPL. I	pulse	Feedback pulse number of the motor (low 5-digit) (before E-Gears) Ex : if pulse number is 123456789 pulse, 56789 is displayed.	-99999 99999

			Note1	
Pulse number of pulse commands input (High 5-digit) (before E-Gears)	CPH. I	pulse	 Pulse number of pulse commands input (High 5-digit) (before E-Gears) Ex : if command pulse number is 123456789 pulse, 1234 is displayed. Note1 	-21474~ 21474
Pulse number of pulse commands input (low 5-digit) (before E-Gears)	CPL. I	pulse	 Pulse number of pulse commands input (low 5-digit) (before E-Gears) Ex : if command pulse number is 123456789 pulse, 56789 is displayed. Note1 	-99999 99999
Deviation pulse number (before E-Gears)	E. I	pulse	Pulse command input and feedback pulse deviation number (before E-Gears) Since the display can only shows 5 digits, it shows the actual last 5 digits	-99999 99999
feedback pulse number of the motor (High 5-digit) (after E-Gears)	FPH. O	pulse	Feedback pulse number of the motor (High 5-digit) (after E-Gears) Ex : if feedback pulse number is 123456789 pulse, 1234 is displayed. Note1	-21474~ 21474
Feedback pulse number of the motor (low 5-digit) (after E-Gears)	FPL. O	pulse	Feedback pulse number of the motor (low 5-digit) (after E-Gears) Ex : if pulse number is 123456789 pulse, 56789 is displayed. Note1	-99999 99999

Pulse number of pulse commands input (high 5-digit) (after E-Gears)	CPH. O	pulse	Pulse number of pulse commands input (high 5-digit) (after E-Gears) Ex : if command pulse number is 123456789 pulse, 1234 is displayed. Note1	-21474~ 21474
Pulse number of pulse commands input (low 5-digit) (after E-Gears)	CPL. O	pulse	Number of pulse commands input (low 5-digit) (after E-Gears) Ex : if command pulse is 123456789 pulse, 56789 is displayed. Note1	-999999~ 99999
Deviation pulse number(after E-Gears)	E. O	pulse	Deviation number of pulse command input and feedback pulse (before E-Gears) Since the display can only shows 5 digits, it shows the actual last 5 digits	-999999~ 999999
Pulse command input frequency	CPF	kHz	Input frequency of external pulse command	-6000~ 6000
Current speed of motor	r	rpm	show the current motor feedback speed	-6000~ 6000
Analog speed command/ voltage limit	F	V	 (1) In speed control mode, no analog input function and it shows 0. (2) In torque control mode, no analog input function and it shows 0. 	-10. 00~ +10. 00
Speed input command/limit	V	rpm	In speed control mode, it indicates analog input speed command. In torque control mode it indicates speed limit	-6000~ 6000
Analog torque command/ voltage limit	U	V	No analog input function in position control mode and speed control mode, and it shows 0.	0 ~ +10. 00

			No analog input function in torque	-10. 00~
			control mode, and it shows 0.	10. 00
Torque input command/limit	тс	%	In position control mode and speed control mode, it indicates torque limit , shows as TC.	0~ 300
oonintana,iintit			In torque control mode, it shows the torque command.	-300~300
Effective load rate	J	%	It indicates the load rate of continuous torque, which shows the effective load value by taking the rated torque as 100%	0~ 300
Peak load rate	b	%	It indicates the maximum torque peak that ever occurred, which shows the highest value in the past 15 seconds by taking the rated torque as 100%	0~ 300
DC bus voltage	Pn	V	It indicates the voltage between P-N of main circuit. "Lo-dC" is shown if it is less than normal value.	0~500
Load to motor inertia ratio	dC	times	The load to servo motor inertia ratio is displayed.	0. 0~300. 0
Instantaneous torque	т	%	It indicates the Instantaneous torque value and takes the rated torque as 100%, the generated torque is showed in Real time.	0~100
Regenerative load ratio	L	%	it shows permissible percentage of regenerative power.	0~100

The absolute pulse number relative to ZP encoder Z phase	pulse	The absolute pulse number of encoder Z phase, which the value in the origin is 0, and its coordinate is set to plus or minus 5000 pulse respectively, as shown in the figure below: 0 + 5000 + 4999 + 5000 + 4999 = 0 Z Z Z Z	-4999 ~ 5000
----------------------------------------------------------------	-------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------

Note 1: When the panel is showing the numerical data, if press the SET key, pulse number of pulse commands input (before or after E-Gears), feedback pulse number, and pulse deviation will be cleared, and this definition is same as the content of communication address 0x0951.

Change of status on display

By changing PA01, the 7-segment LED status display items can be changed when the power is on. The initial status display items are changed as follows according to the control mode.

Control mode	Item
Position	Feedback pulse number of the motor (low 5-digit)
Position/s	Feedback pulse number of the motor (low
peed	5-digit)/current speed of motor
Speed	Current speed of motor
Speed/tor que	Current speed of motor / torque command
Torque	Torque command
Torque/ position	Torque command/ feedback pulse number of the motor (low 5-digit)

4.4 One-touch Tuning Function

Name	Display	Description
One-touch Tuning		You can perform One-touch Tuning in this screen display. Refer to 5.3.2 for more details.

4.5 Alarm mode

It indicated alarm and alarm record. The last 2 digits show the Alarm NO.

Name	Display	Description
Current	AF	No alarm occurs.
alarm		The screen will blink when
		an over-voltage alarm
		occurs(AL.01).
	00 0 (The last alarm in the past is
	HU U I	Over-voltage (AL.01).
	0, 07	The 2nd alarm in the past is
Alarm	片: 입건	Low voltage(AL.02).
record	ה ח ה ח	The 3rd alarm in the past is
	82 UJ	Over current(AL.03).
	67 6 11	The 4th alarm in the past is
	HJ 64	Regenerated abnormal
		(AL.04).

٦	1 85	The 5th alarm in the past is Overload(AL.05).
89	5 86	The 6th alarm in the past is Over speed(AL.06).
	5 87	The 7th alarm in the past is Abnormal pulse control (AL.07).
		The 8th alarm in the past is Excessive deviation of position(AL.08).
	8 83	The 9th alarm in the past is Serial communication error (AL.09).
	3 13	The 10th alarm in the past is Overload 2(AL.10).

Function when alarm occurs

A: the screen can shows the current alarm no matter which mode the servo is in.

B: Other screens can still be read when an alarm occurs, and its fourth LED decimal point will blink(count from the right side).

C: the alarm can be cleared by following method when the root cause is eliminated

- (a). Restart the power.
- (b). press SET button in current alarm screen.
- (c). turn on the reset signal(RES).
- D. Use "UP" "DOWN" to scroll down to the next history record.

4.6 Diagnostic mode

Shihlin servo diagnosis mode operation shows in the following table.

Name	Display	Description	
Control status		Servo is not ready yet, The drive is under initializing, alarm occurs or the SON terminal is OFF.	
	rd-on	Servo is ready. When servo is ON and ready for operation.	
External I/O signal indication		It indicates the ON/OFF status of external input/output signals. The upper part of each segment shows the input signal, and the lower part shows the output signal. The input/output signal can be defined by PD group related parameters.	
DO forced output	do-on	Digital output signal can be forced ON/OFF.	
Test operation mode	LEZL !	When there is no command from an external device, JOG operation can be executed.	
Test position operation	resra	When there is no command from an external device, one time positioning operation can be done. This function will disable panel operation, and you can connect to the communication software and perform test by RS-485/USB.	
Test and estimate inertia analysis operation	[E5[3	This function can perform automatic estimation of load inertia ratio and automatic estimation of related gain values, It will disable panel operation,you can connect to the communication software and perform test by RS-485/USB.	

Factory test only.	H []	
Software version(Low)	SE-A2	It indicates the version series of SERVO software.
Software version(High)	200-0	It indicates the version number of the SERVO software.


The use of the diagnosis mode will introduce in detail as follows.

4.6.1 External I/O signal indicator.

This is to verify the ON/OFF states of SERVO AMP digital I/O signals.


(1) Operation

It indicates the screen of the display after power-on, and press the "MODE" key to go to the diagnostic screen.

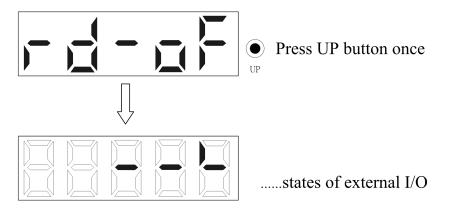

(2) Display content

Display of I/O pin definition.

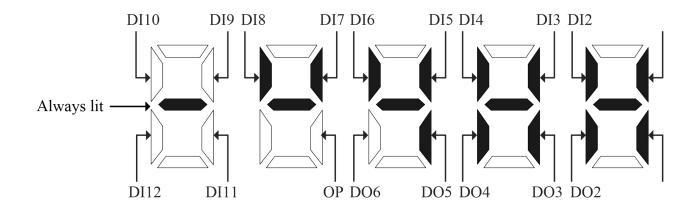

Display ON/OFF with 7-segment LED.

The upper part of each segment is the input signal (DI1~DI10), and the lower part is the output signal (DO1~DO6, OP) and the input signal DI11, DI12. Take the above picture as example, DI1~ DI8, DO1~DO5 are in ON status, DI9~DI12, DO6 and OP are in OFF status.


4.6.2 Forced output (DO forced output)

It can force ON/OFF the output signal without impacting the SERVO status. This function can be used for wiring inspection on output signal,etc.

- ★ To confirm that no alarm occurs and no external command received.
- ★ Ensure that SON and SG contacts are open when testing.

Operation


It indicates the screen of the display after power-on, press the "MODE" key to go to the diagnostic screen:

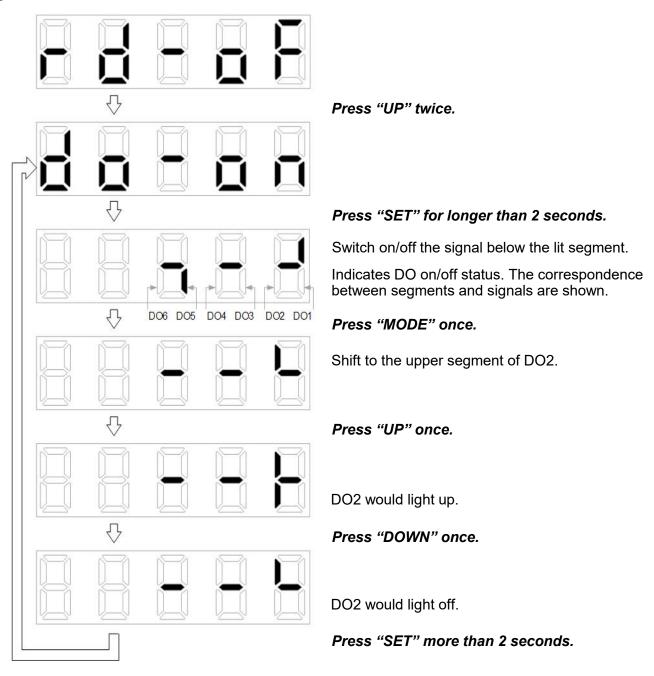

4.6.3 JOG operation

- JOG operation can be performed after confirming no alarm or warning message in * the servo.
- * Ensure that SON and SG contacts are open when testing.
- ★ Ensure that EMG, LSP, LSN are on , and if CN1 has no external wiring, you can perform this function by setting PD01.

Set JOG speed command by PC04, and set the acceleration time constant by PC01 and the deceleration time constant by PC02. Below picture shows the display screen after power-on. Please select JOG operation, test positioning operation, test estimation inertia analysis operation in following sequence and press the "MODE" button to go to the diagnosis screen.

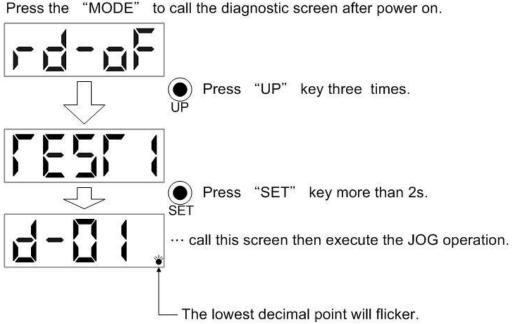

(1) Operation and Running.

To perform JOG operation, it's necessary to short the circuit between VDD and COM+ if internal power supply is used between EMG-SG, press and hold the "UP" "DOWN" button to start the servo, and release it to stop. The setting is described in the following table:

ltem	Set value	Default value	Setting range
Rotate speed [r/min]	PC04	300	0~6000
Acceleration and deceleration time	PC01, PC02	200	0~20000

Note: The JOG speed setting value of the panel is set by PC04.

Button description is as below:

Button	Content
"UP"	Press and hold UP button to run in the CCW direction. Release it to stop.
"DOWN"	Press and hold DOWN button to run in the CW direction. Release it to stop.

(2) Status display

SERVO status during JOG operation can be confirmed.

If you press the "MODE" button while JOG is in operation, the status screen is displayed. In this status screen, you can use"UP" "DOWN" button to execute JOG operation. Each time you press the "MODE" button, it moves to the next screen and back to the JOG operation screen after one turn. Refer to section 4. 3 for status display details.

The "UP" and "DOWN" buttons cannot be used to change the status in JOG operation mode.

(3) Exit JOG operation

 
During JOG operation, you can turn off the power once or press and hold the "SET" button for more than 2 seconds in the test operation screen to exit the JOG operation,

<u>Please refer to the description of step 3 in section 5.2.1 to understand how to use Shihlin</u> servo PC software to operate the JOG function.

4.6.4 Test positioning operation

- ★ To activate test positioning operation, the servo must connect to the Shihlin communication software via RS-485 or USB.
- ★ Test positioning operation can be performed when it is confirmed that there is no external command device and no alarm message from servo.
- ★ Ensure SON is OFF before test.
- ★ The motor will stop suddenly if the communication cable falls off during operation.
- ★ When the communication software enters the test positioning mode, the panel is showing the following figure:

– LED blinks



---- This screen display means the servo enters test positioning mode.

Refer to section 5. 2. 2 for detailed test positioning operation instruction.


4.6.5 Inertia estimation and tuning by communication software

- ★ To activate test positioning operation, the servo must connect to the Shihlin communication software via RS-485 or USB.
- ★ Test positioning operation can be performed when it is confirmed that there is no external command device and no alarm message from servo.

Operation. Running

When using inertia estimation operation, ensure the motor is correctly wired and select Automatic Gain Adjustment function in Shihlin communication software.

The instruction for auto-gain adjustment function is as follows:

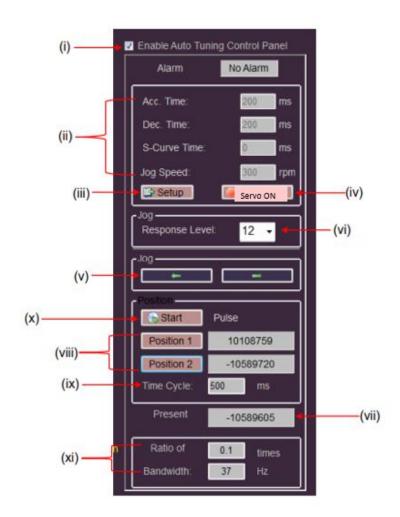


- (i) Click [Enable Auto Tuning Control Panel].
- (ii) Set speed acceleration time, deceleration time, S-curve acceleration and deceleration time and JOG speed.
- (iii) If no alarm occurs, Click [Setup] to write the setting value of step (2) to the drive.
- (iv) Click [Servo ON] and the servo motor will be ON.
- (v) Press <u></u>button to rotate the motor reversely. Release it to stop the motor.
- (vi) Press JOG \rightarrow to rotate the motor forwardly. Release it to stop the motor.
- (vii)To perform the response setting. The larger the value, the stronger the gain, which has the same function as PA03.
- (viii)To show the current feedback position of the motor.
- (ix) To control the motor to run forwardly or reversely. After the motor reaches the first target position, press position 1 and then press JOG, Set position 2 when the motor is in the 2nd target position, and the software will record the 2 target position.

- (x) The time interval is the static time of each positioning stops.
- (xi) After setting target position 1 and target position 2, and time interval, Press [Start] (S) and motor runs between Position1 &2 cyclically.
- (xii)After the motor runs a few operation cycles, the current "load inertia ratio" and "bandwidth"value will be estimated.
- (xiii)To display the current alarm status. If there is no alarm, it shows No Alarm, if there is an alarm, it shows the current alarm number.
- Caution
 - (1)You can directly set the response in the response setting menu if the response is not enough during operation, but it is recommended not to set the response too high instantly, and it should increase gradually.
 - (2)To judge whether the load inertia ratio has converged or the machine features have satisfied the customer's requirement, you can press stop to complete the preliminary inertia estimation and gain adjustment.
 - (3)You can cancel the automatic gain control panel option or close the window form directly to exit. At this time, the PC software writes the estimated load inertia ratio and response setting values to PB06 and PA03 respectively.

The servo calculates the best gain value automatically after the gain is estimated. The following table is the estimate item.

Name	Parameter abbreviation	Parameter code	Setting range	Unit	Default value	Control mode
Resonance suppression low-pass filter	NLP	PB03	0~10000	0. 1ms	17	Pt, Pr, S, T
Position feed-forward gain value	FFC	PB05	0~200	%	0	Pt, Pr
Servo motor Load inertia ratio	GD1	PB06	0~1200	0. 1 times	70	Pt, Pr, S
Position loop gain	PG1	PB07	4~1024	rad/s	45	Pt, Pr
Speed loop gain	VG1	PB08	40~9000	rad/s	183	Pt, Pr, S
Speed integral gain value	VIC	PB09	1~1000	ms	34	Pt, Pr, S

 ★ When the communication software enters the inertia estimation mode, the panel display the following figure:



 This screen display means the servo enters into inertia estimation analysis mode.
 The LED blinks

4.7 Parameter mode

4.7.1 16 bit parameter setting instruction

After changing the settings, some parameters are activated after restart the power.

(1) Operation instruction

The following is an example to illustrate the operation method after restarting when the control mode (PA01) is changed to the speed control mode.

Example 1: control mode(PA01)changes to speed control mode.

Press "MODE" button and enter PA01 parameter screen display.



Indicates PA01 ^O_{UP DOWN} Press UP or down button to change PA01 ^O_{SET} Press SET button twice



The rightmost parameter shows on the LED keeps blinking Press UP button twice



Change the setting value during blinking $\bigcirc_{\text{UP DOWN}} \odot$ Use UP Down button to change the setting $\bigcirc_{\text{SET}} \circ$ press SET button to activate the setting



Parameter setting is completed

Press "UP DOWN" to scroll down to next parameter.

If PA01 is changed, you must restart the power to activate the setting after the setting is changed.

• The MODE key converts to Shift function when setting the parameters.

Next section will introduce how to use the "MODE" "UP" and "DOWN" buttons to operate.

4.7.2 32 bit parameter setting instruction

Decimal parameter reading and writing method (positive number)

Example: PA19 is 1234567, then to change to 1434567.



Press "SET" once.



The lower 5 digits of PA19 are shown and the lowest decimal point indicates that this is low screen.

Press "MODE" once



The higher 2 digits of PA19 are shown and the second decimal point indicates that this is high screen.

Press "MODE" once



The screen is returned to the low screen.

Press "SET" once

The lowest digit display would be flickering.



Press "MODE" for 5 times.



The flickering digit would shift left to the second high digit.

é	
	11 11
	U U

Press "UP" twice.

The flickering digit would be changed to "4".

Press "SET" once to store the modification.

0 Decimal parameter reading and writing method (negative number)

Example: PA19 is 1234567, then to change to -1434567.





The lower 5 digits of PA19 are shown and the lowest decimal point indicates that this is low screen



Press "MODE" once.

Press "SET" once.

The higher 2 digits of PA19 are shown and the second decimal point indicates that this is high screen.



Press "SET" once.

The lowest digit of this screen would be flickering.



Press "MODE" twice.

The flickering digit shifts to the highest digit and the "-" sign appears.



Press "SET" once.

This screen will show "-1.2". The PA19 is -1234567 now.



Press "MODE" once.

Return to the screen of -1234567 lower 5 digits. The left 2 decimal points indicate that this number is negative.

Press "UP" once.



Scroll to the next parameter. (PA20)

• Hex parameter reading and writing method

Example: PE01 is 0x3760135 and then to change to 0x03740135.





Press "SET" once.

The lower 4 digits of PE01 are shown and the underline of highest digit indicates that this is low word.

Press "MODE" once.



The higher 4 digits of PE01 are shown and the up segment of highest digit indicates that this is high word.



Press "MODE" once.

It shows the lower word again.



Press "SET" once.

The lowest digit of PE01 would be flickering.



Press "SET" 4 times.

This flickering digit shifts to the lowest digit of high word.



Press "DOWN" twice.

The display shows the modification.

Press "SET" once to store the modification.

5. Running Operation

5.1 Check items Before Operation.

Check carefully on below listed items before the motor runs to avoid unnecessary damage to the motor.

- Check if the power terminals (L1, L2) of the servo drive are wired correctly.
- Servo motor power terminals (U, V, W) and U, V, W wiring phases on the servo drive must be consistent.
- Check if the ground terminal of the servo drive is correctly grounded.
- Check if there is any conductive material or inflammable material inside or near the drive.
- Check if the voltage of power supply is correct.
- Check if the control switch is OFF.

CAUTION

- Do not put heavy staff on the driver or wiring.
- Use twisted wire when wiring the regenerative resistor.
- Check if the appearance of the drive is obviously damaged.

• Do not operate the switch with wet hands, otherwise it may cause electric shock.

• Check each parameter before running. Otherwise, there may be unexpected actions occurs.

•The heat sink, regenerative resistor, servo motor, etc. may in a high temperature during power-on or in a short time after power off. Do not touch it to avoid burns.

5.2 No-load test


During the no-load test, first remove all loads connected to the servo motor (such as the unit or the coupling of the servo motor shaft or related accessories, etc.). After that, if the servo motor runs normally according to the normal operation procedure, you can connect the load back. The following will explain the test of the motor when there is no load.

5.2.1 No-load JOG test

- ★ JOG operation can be performed after confirmed no alarm or warning message in servo.
- ★ Ensure that SON and SG contacts are open when testing(SON OFF).
- ★ Ensure that EMG, LSP, LSN are on , and if CN1 has no external wiring, you can perform this function by setting PD01.


No-load JOG operation can be operated by the drive panel together with Shihlin communication software, this is to confirm whether the speed of motor and direction of rotation are as expected. You cannot modify the motor speed during JOG operation by the panel. If you must to modify it, you can do with Shihlin communication software via RS-485 or USB transmission. and it is recommended to perform JOG operation at a low speed. The following uses the panel operation mode to explain the JOG operation procedure.

- Step 1: After the servo drive and the servo motor are connected correctly, switch on the servo drive.
- Step 2: Use the "MODE" button on the panel to enter the diagnosis screen and press the UP button 3 times to enter TEST1 (JOG mode). At this time, press and hold SET button for 2 seconds to switch to d-01. screen (JOG operation).

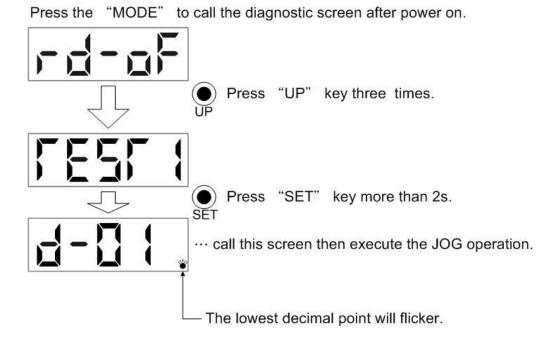

Step 3: During JOG operation, when pressing the "UP" or "DOWN" button, the servo motor will rotate in the CCW or CW direction. Motor will stop when release the button, and you can set PC04 to modify the JOG operation speed.

When using Shihlin communication software to perform JOG operation, the setting value and range of operation are as follows:

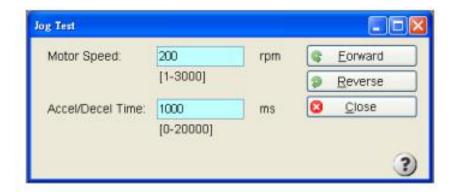

Note: When using the communication software for JOG operation, if the communication cable is disconnected during operation, the servo motor will decelerate to stop.

The button description as follows:

button	Content
Forward rotation	Press the button and runs the motor in CCW
reverse rotation	Press the button and runs the motor in CW
Finish	To finish JOG test.

Step 4: If the JOG operation is finished, turn off the power once or hold the "SET" button for more than 2 seconds in the test operation screen (d-01.) to exit the JOG operation mode.

5.2.2 No-load positioning test

For no-load positioning operation, please use RS-485 or USB to connect to Shihlin communication software. In order to confirm whether the speed and direction of rotation are as expected, it is recommended this operation is performed at a low speed. The positioning operation needs to set the number of revolutions and pulses. For example, as the motor rotate 1 circle takes 17-bit pulse (that is 131072 pulse), to set 10 and 1/2 circles, the wave number should set as 1376256 pulse. The following explains the use of positioning operation:

- Step 1: After the servo drive and the servo motor are connected correctly, switch on the servo drive.
- Step 2: Connect the computer and the CN4 terminal of the servo drive with a standard Mini USB cable. Select the USB communication and the correct address after connecting the Shihlin communication software.
- Step 3: Select "Test"/"Positioning Test" on the top of the communication software and enter the positioning test screen.
- Step 4: To perform positioning operation, first need to set the number of revolutions and pulses. If press the Forward Rotation button, servo motor will run in the CCW direction to the target number of revolutions and pulses. and if press Reverse Rotation button, the servo motor will run in the CW direction to the target number. The initial condition and setting range are as follows:

osition Test			0 8
Motor Speed:	200	rpm	C Forward
	[1-6000]		
Accel/Decel Time:	1000	ms	Reverse
	[0-20000]		Pause/Clear
Move Distance			
Pulse	8		
0			
[0~2147483647]		2	Close

Description of button as below:

Button	Function
"UP"	Press it once , it will run the motor in CCW direction until reaches target number of revolutions and pulse number
"DOWN"	Press it once and it will run the motor in CW direction until reaches target number of revolutions and pulse number.
Suspend/clear	Press it once, the motor will stop temporarily if the motor does not reach the target number of revolutions and pulses, and the motor will run the remaining number of revolutions or pulses if operation is enabled. If you press twice on suspend button, the remaining number of revolution or pulse is cleared.
Close	Positioning test finished.

Step5: when positioning operation is finished, press the CLOSE button to exit.

5.3 Tuning procedure.

•Don't do extremely adjustment and change of parameters, which will cause unstable operation.

5.3.1 Tuning method and type


With the auto gain adjustment function, the load inertia can be estimated quickly and accurately, and the appropriate servo gain of the motor under different loads can also be quickly searched. If the auto gain adjustment mode cannot meet the user's requirement, manual adjustment mode can be used.

The gain adjustment mode are as follows:

Tuning mode	PA02 Parameter setting	Load inertia estimation method	Auto-estimate parameters	User-defined parameters
Manual gain adjustment mode(PI control)	0000 0001	Fixed as value of PB06		GD1(PB06) PG1(PB07) VG1(PB08) VIC(PB09)
Auto- gain adjustment mode 1	0002	Continuously estimation	GD1(PB06) PG1(PB07) VG1(PB08) VIC(PB09)	ATUL(PA03)
Auto-gain adjustment mode 2	0003	Fixed as value of PB06	PG1 (PB07) VG1 (PB08) VIC (PB09)	ATUL(PA03) GD1(PB06)
Interpolation mode 1	0004	Continuously estimation	GD1(PB06) VG1(PB08) VIC(PB09)	ATUL(PA03) PG1 (PB07)
Interpolation mode 2	0005	Fixed as value of PB06	VG1 (PB08) VIC (PB09)	ATUL(PA03) GD1(PB06) PG1 (PB07)

★ PA02 cannot be written when SON-SG is short-circuited, please open-circuit SON-SG before setting.

Please refer to the below table for recommendations on the tuning sequence and mode.

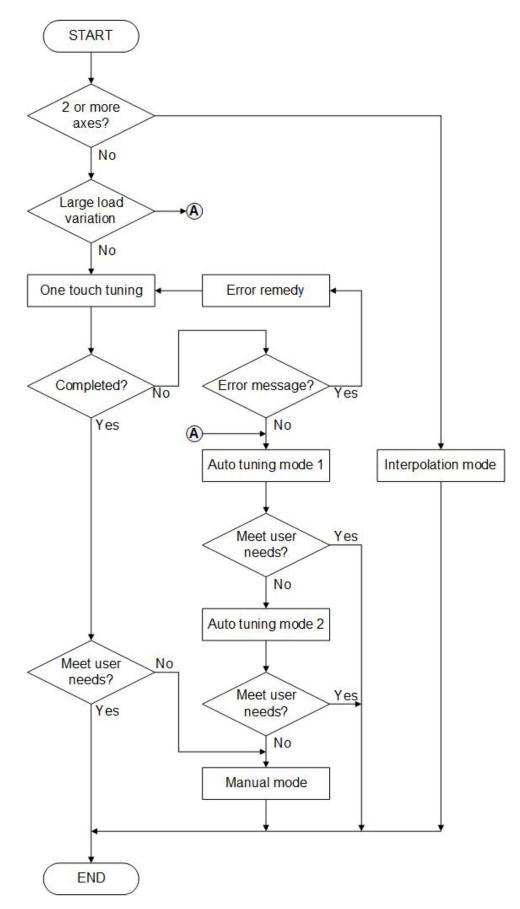

If the servo is in first use, it need run in JOG mode first to confirm no abnormal issue, after that you can use the auto-tuning function. To estimate the inertia ratio and search bandwidth, it is necessary to generate acceleration and deceleration commands for several rounds and make the inertia ratio estimation runs in a steady state.


5.3.2 One-touch Tuning Function

The one-touch gain tuning function can be performed by communication software or the panel. The related parameters that can automatically set by the one-touch tuning function are shown in the table below:

Parameter NO	parameter abbreviation	Parameter name
PA03	ATUL	Auto-tuning response level setting
PB01	NHF1	Frequency of machine resonance suppression filter 1
PB02	NHD1	Machine resonance suppression attenuation 1
PB03	NLP	Time constant of Resonance suppression low-pass filter
PB06	GD1	servo motor Load inertia ratio
PB07	PG1	Position loop gain
PB08	VG1	Speed loop gain
PB09	VIC	Speed integral gain
PB21	NHF2	Frequency of Machine resonance suppression filter 2
PB22	NHD2	Machine resonance suppression attenuation 2
PB27	ANCF	Auto resonance suppression mode
PB28	ANCL	Resonance suppression detection level
PB29	AVSM	Auto vibration suppression mode
PB30	VCL	Low-frequency vibration detection level
PB31	VSF1	Vibration suppression frequency 1
PB32	VSG1	Vibration suppression gain 1
PB33	VSF2	Vibration suppression frequency 2
PB34	VSG2	Vibration suppression gain 2
PB35	FRCL	Friction compensation level
PB36	FRCM	Friction compensation smoothing time constant
PB45	NHF4	Frequency of Machine resonance suppression filter 4
PB46	NHD4	Attenuation rate of Machine resonance suppression filter 4

5.3.2.1 One touch tuning function process.

One touch tuning function is simple and it has 2 ways to operate. In addition, it must be performed when the servo system runs normally.

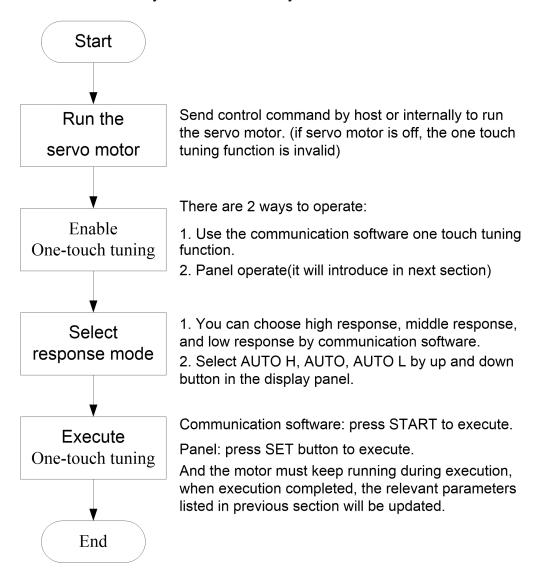

5.3.2.2 one touch tuning display conversion and instructions

(a) Use communication software

(i) Three response modes can be selected in the one touch tuning window of the communication software.

Use the OneTou	ich function w	hen servo r	notor operating.	C
Response mod	e — — —			
O High mode	е			
Respons	se mode for <mark>h</mark> i	gh rigidity n	nachines.	
Basic mod	le		Start	•
Respon	se mode for <mark>s</mark> t	andard ma		
O Low mode				
Respon	se mode for lo	w rigidity m	achines.	
- Error status —				

you can refer to below table for selecting response mode.

Response mode	Description
High response	For high stiffness systems
Middle response	For general stiffness systems.
Low response	For low stiffness systems.

⁽ii)Operate one touch tuning

Select response mode and press START to activate.

i. One touch tuning operation

Select response mode and press START to activate.

OneTouch	
Return to value before ac Return to	intial value
Use the OneTouch function	when servo motor operating. 🔇
Response mode	
O High mode	
Response mode for	high rigidity machines.
Basic mode	Start O
Response mode for	standard machines.
O Low mode	
Response mode for	low rigidity machines.
Error status	- Error List
Adjustment result	
Setting time	- ms
Overshoot amount	- pulse
	115

li. If an error occurs, the error code will display on the error status window. The execution progress will be displayed on the status window, and 100% means fully completed.

Pro	ogress	- • ×
	Progress in implementation:	20%
	Stop	

(iii)Clear and reset

It has two methods to clear and reset the tuning related parameters.

- I. Clear: the gain parameters reset to factory default setting.
- II. Reset: the gain parameters reset to the setting value before one touch tuning operation.

OneTouch		
Return to value before ac Return	n to intial <mark>va</mark> lue	
Use the OneTouch func	tion when servo mot	tor operating. ③
Response mode		
O High mode		
Response mode	for high rigidity mad	chines.
Basic mode Response mode	e for standard machi	Start O
O Low mode Response mode	for low rigidity mac	nines.
Error status		
Error code	_	Error List
CAdjustment result		
Setting time		ms
Overshoot amount		pulse

(b) Operate by using panel


(i) It has 2 methods to perform one touch tuning operation on the panel.

(i-1)Press MODE button to enter one touch tuning display (show AUTO), and hold SET button for 2 seconds, the LED will blink as below shows:




(i-2)In any screen, hold MODE and UP button at the same time for over 3 seconds will enter AUTO screen and LED will blink.


(ii)Press UP or DOWN button to choose one touch tuning response mode.

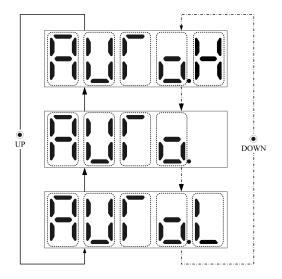


(iii)After selecting the response mode, press SET button to activate the one-touch tuning function and the execution progress will display on the screen.

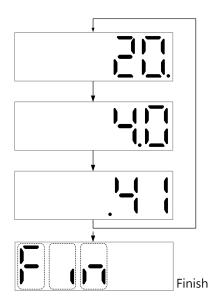

(iv)If you want to terminate the tuning during the adjustment, press the SET button to stop, the panel display and elimination process are as follows:

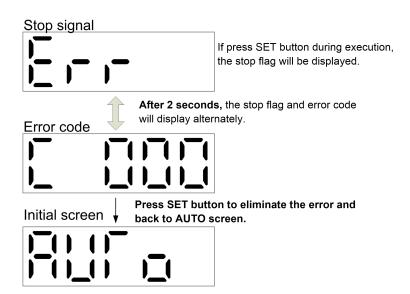


(v)If an error occurs during the adjustment process, the panel display and troubleshooting methods are as follows:

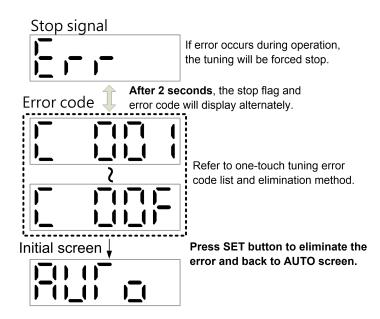

(vi)There are 2 options to clear and reset one-touch tuning related parameters.

- I. Reset to default value (clear mode).
- II. Reset to the value before adjust(back mode).

Press MODE key to enter One-touch tuning (show AUTO) and then press UP or DOWN button to clear or reset parameters, hold SET button for 2 seconds, the servo will activate the function and blink for 3 seconds.

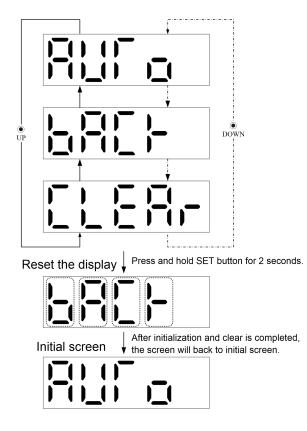

Code	Error code	Description	Solution
C000	cancellation during	press "stop" icon or "set" button	
	tuning		
C001	Position overshot excess	Position overshot exceeds PA12	Increase PA12 setting value
C002	SOV-OFF	Activated in SON-OFF mode	Activate one touch tuning in
			SON-ON mode
		Try to turn SON OFF during tuning	Don't turn SON OFF during tuning.
C003	Control mode abnormal	Tuning execution is under torque mode	Switch to position or speed mode
		Switched to other mode during	Do not switch to any mode during
		tuning	tuning
C004	Time out	Command period exceeds 30	Set the rotation cycle more than 30
0001		seconds	seconds.
		Motor speed is too low	More than 100 rpm is recommend
		Tuning interval is too short	Tuning interval more than 500mS
C005	Inertia estimation	Load to motor inertia estimation	When motor runs at 2000 rpm and
0000	abnormal	failure during tuning	3000 rpm, its accelerate and
			decelerate time should below 2
			seconds and 3 seconds.
			Motor rotation speed should be
			more than 250 rpm
			Load inertia should be less than 100
			times of rotation inertia.
			Big change for load and inertia ratio
			is not suitable for this tuning mode.
			The acceleration and deceleration
			torque should be more than 10% of
			the rated torque.
		Load inertia estimation or inertia	Adjust to semi-auto gain tuning
		ratio change enormously fail due to	mode, stop load inertia estimation
		resonance	and then start tuning.
			Select [PA02_ATUM]
			Set [PB06_GD1] by manually set
			load inertia ratio.
C00F	One touch function	An improper [PA38_AOP3]	Set the proper value of
	invalid	setting	[PA38_AOP3]

5.3.2.3 One touch tuning error code list and solutions

5.3.3 Auto tuning function

The auto-tuning function can estimate the load inertia ratio relative to servo motor rotor inertia in real time, and automatically set the best gain (GAIN value) for this environment accordingly. The gain adjustment of the servo drive can be performed easily and quickly by the auto-tuning function.

5.3.3.1 Auto-tuning function

Auto-gain tuning mode 1

This mode is the factory default setting. If the servo is set to this function (PA02=0002), it will estimate the load inertia ratio and set the servo gain value automatically. The only parameter that can be modified by the user are the response setting (PA03).

The parameters and settings related to this mode are as follows:

Parameter NO	Parameter abbreviation	Parameter name	the user can modify or automatically estimate the parameters
PA03	ATUL	Auto-tuning response level setting	user can modify
PB06	GD1	servo motor Load inertia ratio	auto-estimate
PB07	PG1	position loop gain	auto-estimate
PB08	VG1	gain adjustment of speed loop	auto-estimate
PB09	VIC	Speed integral gain	auto-estimate

When the servo is about to set the auto-gain tuning mode 1, it has to meet following conditions:

- When motor reaches 2000 rpm/3000 rpm, its accelerate and decelerate time should below 2 seconds / 3 seconds.
- Motor rotation speed is more than 250 rpm
- Load inertia must less than 100 times of rotation inertia.
- Big change for load and inertia ratio is not suitable for this tuning mode.
- The acceleration and deceleration torque is more than 10% of the rated torque

Auto gain tuning mode 2

When the servo motor cannot obtain correct estimated inertia in auto gain tuning mode 1, you can switch to auto gain tuning mode2. In this mode, you can set the parameter (PA02=0003), and load inertia ratio cannot be estimated automatically, it has to manually input to PB06 by the user with correct load inertia ratio value.


The related parameters setting is as follows:

Parameter number	Parameter abbreviation	Parameter name	the user can modify or automatically estimate the parameters
PA03	ATUL	Auto-tuning response level setting	User can modify
PB06	GD1	Servo motor Load inertia ratio	User can modify
PB07	PG1	Position loop gain	Auto-estimate
PB08	VG1	Gain adjustment of speed loop	Auto-estimate
PB09	VIC	Speed integral gain value	Auto-estimate

To activate auto gain tuning mode, you can refer to the following key points:

- To perform auto gain tuning mode 1, you need accelerate and decelerate the motor first, and the inertia ratio will estimate base on current and speed of the motor, the new load inertia ratio will update to PB06 and write into EEPROM(every 30 minutes).
- If the user knows the inertia ratio of the load to the motor, or when the inertia ratio cannot be accurately estimated (when the inertia ratio changes drastically), you can set PA02 to auto gain tuning mode 2, and write the known inertia ratio into PB06 manually. During the time, gain values keeps searching.
- With the value set by the inertia ratio and response level, the servo drive will adjust the optimal controller gain during acceleration and deceleration. The searched gain results will be written into the EEPROM every 30 minutes after turning on the power. When the servo is on, the current gain value saved in the EEPROM will be used as the initial value of the auto gain tuning mode.

Shihlin Servo has set the auto gain tuning mode 1 as the factory default setting. As long as the motor is accelerated and decelerated, the best controller gain will be automatically set. The user only needs to set the required response level to complete the entire process. The sequence is shown in below.

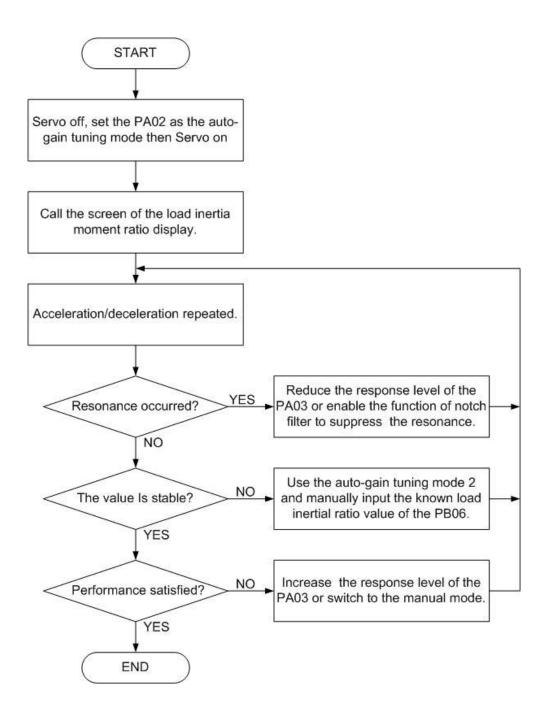

5.3.3.2 The response of auto tuning mode

PA03(response level setting) is for servo overall response level setting, and the response level will impact the whole system bandwidth. The higher response level, the shorter traceability and setting time to command is. But if the response setting is too high, the system will vibrate. It's recommended to set within the range which will not cause vibrate.

If the machine has resonated under the expected bandwidth, and yet the user wants to keep runs the servo in this bandwidth, The machine resonance suppression filter (PB01, PB02,

PB21, PB22) and suppress resonance suppression low-pass filter (PB03) can be used to suppress resonance, and sometimes response level can set a higher level in this condition.

You can refer to section 6. 3. 6 for more information about machine resonance suppression filter and Resonance suppression low-pass filter.

Paramete	r P	'AO	3	28
0	0	0	5	
			7	Response level setting

Respons e level	machine rigidity	Speed response frequency (Hz)	Respons e level	machine rigidity	Speed response frequency (Hz)
1		10.0	17		67. 1
2	Low	11. 3	18	-	75.6
3	response	12.7	19	Middle	85. 2
4	 _ ▲	14.3	20	response	95.9
5		16. 1	21	↑	108.0
6		18. 1	22		121.7
7		20. 4	23		137. 1
8		23.0	24		154.4
9		25. 9	25		173.9
10		29. 2	26		195. 9
11		32. 9	27		220. 6
12		37.0	28		248.5
13] ↓	41.7	29		279.9
14		47.0	30	↓↓	315.3
15	Middle	52.9	31		355. 1
16	response	59. 6	32	High response	400.0

For the response level setting, it is recommended to adjust response level from low response to high response gradually. The possibility of resonance will greatly increase if the default value is too high.

The proper load inertia ratio is a reference data, and its applicable range varies with different systems.

5.3.4 Manually tuning mode

If auto tuning function cannot achieve the requirement, you can use manually tuning mode to adjust gain parameters.

Manually tuning mode

In the position and speed mode, the choice of bandwidth is highly related with the rigidity of the machine and the environment. For machines that require high machining accuracy, it is necessary to set a high-frequency response system, however, increasing the response bandwidth might cause mechanical resonance, and you can use high rigidity machine to avoid.

When the response bandwidth is unknown, you can gradually increase the gain parameter values to increase the response bandwidth. Then, decrease the gain parameter values until machine resonance occurred. The following are the descriptions of the gain adjustment parameters.

name	parameter abbreviation	parameter code	setting range	unit	default value	control mode
Resonance suppression low-pass filter	NLP	PB03	0~10000	0. 1ms	17	ALL
Position feed-forward gain	FFC	PB05	0~200	%	0	Pt, Pr
servo motor load inertia ratio	GD1	PB06	0~1200	0. 1 times	70	ALL
position loop gain	PG1	PB07	4~1024	rad/s	45	Pt, Pr
Speed loop gain	VG1	PB08	40~9000	rad/s	183	ALL
Speed integral gain	VIC	PB09	1~1000	ms	34	ALL
Speed feed-forward gain	VFG	PB10	0~200	%	0	S, T

Position loop gain (PG1)

This parameter determines the response level of the position loop. Increasing PG1 can improve response frequency, traceability, settling time and position error, but a too high value will make machine vibrate and overshoot. The calculation is as follows:

$$\begin{array}{l} PG1 \ setting \ value \\ \leq \frac{VG1 \ setting \ value}{1 + ratio \ of \ load \ inertial \ to \ motor \ shaft} \times \frac{1}{4} \\ PG1 \ setting \ value \\ \approx \ speed \ loop \ bandwidth \\ \times \frac{1}{4} \end{array}$$

Speed loop gain(VG1)

This parameter determines the response level of the speed loop. Increasing VG1 can improves traceability to a speed command, but a too high value will make machine resonance. The Speed loop gain is usually 4~6 times larger than the position loop gain. As the position loop gain is greater than the speed loop gain, machine is likely to resonate or overshoot. The calculation is as follows:

Speed loop response frequency(Hz) = $\frac{VG1 \text{ setting value}}{(1 + \text{ ratio of load inertial to motor shaft}) \times 2\pi}$

Speed integral gain (VIC)

This parameter is to clear the fixed deviation of the corresponding command. The smaller the speed integral gain setting, the better the ability to eliminate the fixed deviation. However, when the load inertia is large and there are mechanical vibration elements, the small setting will cause resonance easily. The setting value can refer to the following calculation:

VIC setting value(ms) $\geq \frac{3000 \sim 5000}{VG1 \text{ setting value / } (1 + GD1 \text{ setting value } \times 0.1)}$

Resonance suppression low-pass filter (NLP)

The greater the load inertia, the lower the system bandwidth. At this time, if you want to maintain a higher bandwidth, you must increase the gain value. However, while increasing the gain, the machine will resonate. you can use the resonance suppression low-pass filter parameter to eliminate the resonance. The larger the setting, the better to improve the high-frequency noise, but too large setting will also cause the instability of the entire system, because the larger the setting, the more serious the phase lag will be. The recommended setting value can refer to the following calculation:

NLP setting value=VGI setting value*10 / $2 \pi * (1+GDI \text{ setting value*0. } 1)$

Position feed-forward gain (FFC)

It can reduce the position error and the position setting time, but if the setting is too large, it may cause overshoot under sudden acceleration and deceleration. A too large electronic gear ratio also may cause noise.

Speed feed-forward gain (VFG)

Setting a proper gain value will shorten the tracking time of speed command. Also, a too large setting will cause overshoots during the sudden acceleration/deceleration.

5.3.5 Interpolation mode

This mode is applicable on 2 or more axis servo drives, the controller gain parameter keeps in the automatic tuning function, the main content is as follows:

Interpolation mode 1: only the position gain value (PB07) can be set manually. The remaining gains (PB06, PB08, PB09) are automatically adjusted with PA03 settings.

Interpolation mode 2: The position gain (PB07) and load inertia ratio (PB06) can be adjusted manually, and the other gains (PB08, PB09) are automatically adjusted with the setting of PA03.

5.4 Position mode parameter setting and operation

(1) Turn on the servo drive

After turning on the servo drive, please switch off the DI SON signal, the servo drive display shows servo motor rotation speed 2 seconds later automatically.

(2) Test operation

Use JOG operation to confirm if the servo is running normally.

(3) Parameter setting

After wiring for position control mode, you need to set below parameters to perform basic positioning control function.

Parameter	Name	Setting value	content
PA01(note 1)	Control mode option	0000	Position control mode
PA02(note 2)	Auto tuning	0002	Auto gain mode 1
PA03	Auto-tuning response level setting	0012	Middle response
PA06	Electronic gear numerator	1	Set the numerator as "1"
PA07	Electronic gear denominator	1	Set the denominator as "1"
PA13	Command pulse option	Refer to sectior	8. 3 parameter description
PD15(note 1)	Digital input filter time option	2	Filter time constant is "4mS"

Note 1: Turn the power off and then turn on to activate the setting parameter.

Note 2: The parameter cannot be set when SON-SG is connected.

(4) Servo ON.

Below is the instruction to perform SERVO ON.

- (a)Turn on the control power supply of servo motor.
- (b)Turn on the servo on signal(SON) (SON-SG is short-circuited).
- Servo is ready to run when it's ON, and servo motor switches to SERVO LOCK.
- (c)When motor is stopped, AL.13 occurs if both LSP and LSN are OFF.

(5) Command pulse input

First make servo motor run at low speed and input command pulse after confirming the rotation direction and operation. PP, NP are forward rotation pulse command in open collector type. When line driver signals are applied, please choose PP-PG or NP-NG and use auto-tuning function or manually input controller parameters. To avoid the resonance, you can adjust PA03 to achieve the best speed response.

(6) Homing

It's necessary to check the direction and homing origin before start. Excuse homing if necessary.

(7) Stop

You can follow below steps to stop the motor.

(a) Servo ON signal (SON) OFF

Disconnect the PWM signal and the servo will switch to a non-blocking free run state.

(b) Alarm occurs

When alarm occurs, disconnect the PWM signal and activate the dynamic brake to stop the servo motor.

(c) Emergency stop(EMG) OFF

Disconnect the PWM signal and activate the dynamic brake to stop the servo motor , and the abnormal message will show.

(d) Turn off the LSP and LSN

LSP/LSN is ON, motor rotates forwardly/reversely. If turn it off, servo motor stops and servo locks.

5.5 Speed mode parameter setting and operation.

(1) Turn on the servo motor

After turning on the servo drive, please switch off the DI SON signal, the servo drive panel will show servo motor rotation speed 2 seconds later automatically.

(2) Test operation

Use JOG operation to confirm if the servo is running normally.

(3) Parameter setting

After wiring for speed control mode, you need to set below parameters to perform basic speed control function.

Parameter	Name	Setting value	Content
PA01(note 1)	Control mode option	0002	Speed control mode
PC05	Internal speed command 1	1000	Speed command 1 is 1000 rpm
PC06	Internal speed command 2	1500	Speed command 2 is 1500 rpm
PC07	Internal speed command 3	2000	Speed command 3 is 2000 rpm
PC01	Acceleration time constant	1000	Acceleration time constant is 1000ms
PC02	Deceleration time constant	500	Deceleration time constant is 500ms
PC03	S-curve acceleration/deceleration time constant	0	Disabled
PD15(note 1)	Digital input filter time option	2	Filter time constant is "4ms"

Note 1: Turn the power off and then turn on to activate the parameter setting.

(4) Servo ON

Below is the instruction to perform servo on.

(a)Switch on the power supply of servo motor.

- (b)Turn SON signal(SON) ON (SON-SG is short-circuited) Servo is ready to operate when it's ON, servo motor will switch to SERVO LOCK.
- (c)When motor is stopped, AL.13 occurs if both LSP and LSN are OFF.

(5) Start

Choose the speed command by SP1 or SP2 signal, and options are as follows:

(Note) externa	al input signal	Speed command	
SP2	SP1		
0	0	N/A(ZERO)	
0	1	Inner speed command 1(PC05)	
1	0	Inner speed command 2(PC06)	
1	1	Inner speed command 3(PC07)	

After choosing the speed command, the servo motor starts to rotate when ST1 or ST2 is on. The instruction to choose forward and reverse rotation direction are as follows:

(Note)external in	put rotation direction	Rotation direction
ST2	ST1	Internal speed command
0	0	Stop(servo locked)
0	1	CCW
1	0	CW
1	1	Stop(servo locked)

NOTE: 0: OFF(STx-SG is open-circuited) 1: ON(STx-SG is short-circuited)

First confirm the rotation direction at low speed, adjust the direction by input signal if needed. In status display panel, you can confirm the motor rotation speed, command pulse number, inertia ratio and so on.

You can also use auto-tuning function or manually input control parameters. To avoid the resonance, you can adjust PA03 to achieve the best speed response.

(6) Stop

You can follow below steps to stop the motor.

- (a) Servo ON signal (SON) OFF Disconnect the PWM signal and the servo switch to a non-blocking free run state.
- (b) Alarm occurs

When alarm occurs, disconnect the PWM signal and activate the dynamic brake to stop the servo motor.

- (c) Emergency stop(EMG) OFF Disconnect the PWM signal and activate the dynamic brake to stop the servo motor, and the abnormal message will show.
- (d) Turn off the LSP and LSN When LSP/LSN is ON, motor rotates forwardly/reversely. If turn it off, servo motor will stop and servo will be locked.
- (e) Servo motor will decelerate to stop if ST1 and ST2 are both ON or OFF.

5.6 Torque mode parameter setting and operation

(1) Turn on servo drive.

After turning on the servo drive, please switch off the DI SON signal, the servo drive display will show TC(torque command) 2 seconds later automatically.

(2) Test operation

Use JOG operation to confirm if the servo is running normally.

(3) Parameter setting

After wiring for torque control mode, you need to set below parameters to perform basic torque control and speed limit function.

Parameter	Name	Setting value	content
PA01(Note 1)	Control mode option	0004	Torque control mode
PC05	Internal speed limit 1	1000	Internal speed limit 1 is 1000 rpm
PC06	Internal speed limit 2	1500	Internal speed limit 2 is 1500 rpm
PC07	Internal speed limit 3	2000	Internal speed limit 3 is 2000 rpm
PC01	Acceleration time constant	1000	Acceleration time constant is 1000ms
PC02	Deceleration time constant	500	Deceleration time constant is 500ms
PC03	S-curve acc. /dec. time constant	0	Disabled
PD15	Digital input filter time option	2	Filter time constant is "4ms"
PA05	Internal torque limit 1	50	Maximum torque 50% as a limit

(4)Servo ON

Below is the instruction to perform servo on.

- (a)Turn on the control power supply of servo motor.
- (b)Turn SON signal(SON) ON (SON-SG is short-circuited) Servo is ready to operate when it's ON, and servo motor will switch to SERVO LOCK.
- (c) Disable LSP and LSN function.

(5) Start

Use SP1 and SP2 to choose speed limit value. When RS1/RS2 is ON, motor runs forwardly or reversely and generate torque. In order to check the rotation direction, the motor should run at low speed first. please check the input signal if the direction is incorrect.

(6) Stop

You can follow below steps to stop the motor.

- (a) Servo ON signal (SON) OFF
 Disconnect the PWM signal and the servo switch to a non-blocking free run state.
- (b) Alarm occurs

When alarm occurs, disconnect the PWM signal and activate the dynamic brake to stop the servo motor.

- (c) Emergency stop(EMG) OFF Disconnect the PWM signal and activate the dynamic brake to stop the servo motor , and the abnormal message will display.
- (d) Turning on/off RS1 and RS2 simultaneously can enable the motor to free run state.

6. Control function

6.1 Control mode option

Shihlin servo drive has 4 basic control modes, which includes position(terminal input) mode, position(internal register) mode, speed mode, and torque mode. The drive can use single control mode (fixed one mode) and dual mode, the control mode and description are as follows:


	Mode	code	PA01 setting	description
	Position control (terminal input)	Pt	0000	Drive receives the external position pulse command which is input from terminal , then runs the motor to reach the target position.
Single mode	Position control (inner register)	Pr	0010	The drive receives the position command which is provided by the internal register (64 groups of registers). and runs the motor to the target position. The DI signal can be used to select the register number.
	Speed control	S	0002	The drive receives the speed command and runs the motor to the target speed. The speed command can be selected by the DI signal(7 groups of register)
	Torque control	т	0004	The drive receives torque command which is provided by three groups of internal torque commands and runs the motor to the target torque.
	Position mode(terminal input)-speed mode	Pt-S	0001	Pt/S is switched mutually via the signal of DI(LOP).

	Position mode(terminal input)-torque mode	Pt-T	0005	Pt/T is switched mutually via the signal of DI(LOP).
Dual mode	Position mode(internal register)-speed mode	Pr-S	0011	Pr/S is switched mutually via the signal of DI(LOP).
	Position mode(internal register)-torque mode	Pr-T	0015	Pr/T is switched mutually via the signal of DI(LOP).
	Speed mode-torque mode	S-T	0003	S/T is switched mutually via the signal of DI(LOP).

+ After PA01 is been set, you should restart the power to activate it.

6.2 Torque control mode

Torque mode usually used in where torque control is required, such as winding machines, printing machines, injection molding machines, etc. The torque control of SDC servo is from the internal register to control the torque of the servo motor. The basic torque control structure is as follows:

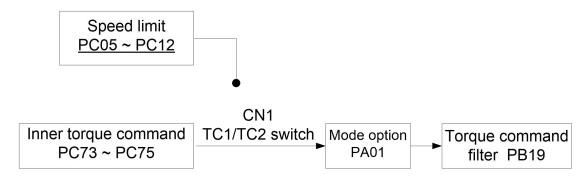

First select torque control mode in mode selection menu, and then you can choose 3 groups of internal register parameters by signals of TC1 and TC2 as torque command.

6.2.1 Torque command

6.2.1.1 Torque command option

Input torque command is 3 groups of torque command set by internal register parameter values.

Torque command code) Input nal	Torque command	Range	Relate parameter
command code	TC2	TC1	-		parameter
ТСМ	0	0	N/A		
TC1	0	1	Internal torque command 1	-300 ~ 300	PC73


TC2	1	0	Internal torque command 2	-300 ~ 300	PC74
TC3	1	1	Internal torque command 3	-300 ~ 300	PC75

Note 0: OFF(TCx-SG is open-circuited) 1: ON(TCx-SG is short-circuited)

6.2.2 Torque command smoothing

With a proper filter time constant of torque command setting, you can run the servo motor smoothly in response to a sudden change of torque command. The parameter description is as follows.

Name	Parameter code	Setting range	Unit	Default value	Control mode	
Torque command filter time constant	PB19	0~5000	ms	0	т	

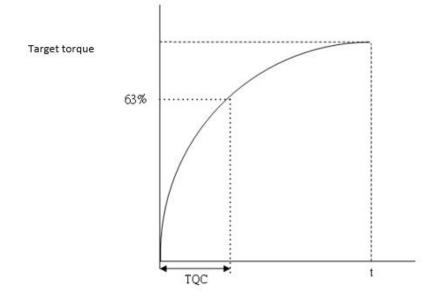

6.2.3 Torque limit of torque control mode

When the torque control mode is performed, there are mainly 2 parameters to control the torque limit function. The description is as follows:

Item	Parameter Abbreviation	Parameter Setting code range		Unit	Default value	Control mode
Inner torque limit 1	TL1	PA05	0~100	%	100	All
Inner torque limit 1	TL2	PC25	0~100	%	100	All

The TL1 signal function of terminal CN1 is described as follows:

ltem	Parameter Abbreviation	Description	Control mode
Inner torque limit option	TL1	When this signal is used, first set PD02 ~ PD09 or PD21~PD24. When the circuit between TL1-SG is short-circuited, it will enable inner torque limit 2 (PC25)	All

Only when setting parameters PD02~PD09 or PD21~PD24 is used as the internal torque limit selection (TL1), the internal torque limit 2 (PC25) can be selected, and there will be two kinds of different results when Switching according to the TL1 of the digital input DI.

(Note) Digital input signal	Effective torque limit value		
TL1			
0	The setting value of PA05		
1	PC25 > PA05 => PA05 PC25 < PA05 => PC25		

Note 0: OFF(TL1-SG is open-circuited) 1: ON (TL1-SG is short-circuited)

6.2.4 The speed limit of torque mode

In torque control mode, the internal SP1,SP2,SP3 can perform speed limit function and there are a total 8 kinds of speed limits for users to adjust manually. The following table lists the speed limit methods.

DI options	Speed limit	(Note) input signal			Crossed limit	Limit	Related
Dioptions	code	SP2		SP1	 Speed limit 	range	parameter
		0		0	N/A(ZERO)		
Speed options	SC1	0		1	Internal	-6000 ~	PC05
when SP3 is	501	U		1	speed limit 1	6000	
invalid(default	SC2	1		0	Internal	-6000 ~	PC06
value)		I		0	speed limit 2	6000	
value)	SC3	1		1	Internal	-6000 ~	PC07
	000	I			speed limit3	6000	
	Speed						Related
	command	SP3	SP2	SP1	Speed limit	Range	parameter
	code						parameter
		0	0	0	N/A(ZERO)		
	SC1	0	0	1	Internal	-6000 ~	PC05
					speed limit 1	6000	
	SC2	0	1	0	Internal	-6000 ~	PC06
					speed limit 2	6000	
SP3 is valid	SC3	0	1	1	Internal	-6000 ~	PC07
					speed limit3	6000	
	SC4	1	1 0	0	Internal	-6000 ~	PC08
		•			speed limit 4	6000	
	SC5	1	0	1	Internal	-6000 ~	PC09
	000	-			speed limit 5	6000	
	SC6	1	1	0	Internal	-6000 ~	PC10
					speed limit 6	6000	
	SC7	1	1	1	Internal	-6000 ~	PC11
	001				speed limit 7	6000	

Note 0: OFF(SPx-SG is short-circuited) 1: ON (SPx-SG is short-circuited)

Before using SC4~SC7 function, make sure to enable the DI SP3 by PD02 ~PD09 setting.

The internal speed limit parameters introduce as follows:

Name	Parameter code	Setting range	Unit	Default value	Control mode
Internal speed limit1	PC05			100	
Internal speed limit2	PC06			500	T
Internal speed limit3	PC07	0	rpm	1000	
Internal speed limit 4	PC08	~ Instant permissible		200	
Internal speed limit 5	PC09	speed		300	
Internal speed limit 6	PC10			500	
Internal speed limit 7	PC11			800	

6.3 Speed control mode


Speed mode is usually used in where precise speed control is required, such as CNC machine, drilling machine, etc. The speed control of SDC servo is performed by the internal register with the following 2 ways:

The first way is to manually set the 7 different required speeds in the 7 command registers (PC05~PC11) before starting the operation, and then use the digital input DI in CN1 to set any three pins to switch as SP1, SP2, SP3.

The second one is to change the value in speed command register by communication.

Shihlin servo also provides S-curve acceleration and deceleration to deal with the problem of non-continuous speed when switching registers, the motor can run smoothly when switching to different speed. In closed-loop system, this device is equipped with PI controller, At the same time, two operation modes (manual and automatic) are also provided for users to choose.

In manual mode, all the parameters can be set, thus all the auto or auxiliary functions are disabled. In auto gain tuning modes, the servo drive performs estimation of the load inertia and sets the related parameters. In this case, the parameter values you set are regarded as the default values. This simple mode provides the user a robust system function for this device, which is different from the adaptability rule that requires a longer learning time in the automatic operation mode. Simple operation mode can suppress external load interference and mechanism resonance in real time, and tolerate change in load inertia.

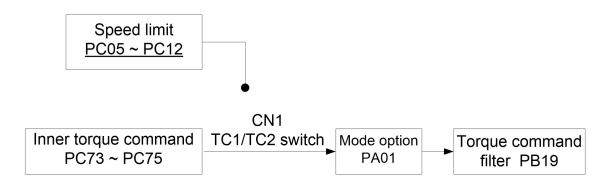

The speed command value is written in the parameters by the user and then switched by the digital input terminal DI. It is recommended that the user use an S-curve smoother and a low-pass filter when operating in the speed mode, which can effectively suppress the irregularity of the motor during operation.

6.3.1 Selection of speed command

DI options	Speed limit	(Note) Input signal			Speed limit	Limit range	Related parameter
optione	code	SP2	SP2 SP1				parameter
Speed		0		0	N/A(ZERO)		
options when	SC1	0		1	Internal speed command 1	-6000 ~ 6000	PC05
SP3 is invalid(de fault	SC2	1		0	Internal speed command 2	-6000 ~ 6000	PC06
value)	SC3	1		1	Internal speed command 3	-6000 ~ 6000	PC07
	Speed comm and code	SP3	SP2	2 SP1	Speed limit	Range	Related parameter
		0	0	0	N/A (ZERO)		
	SC1	0	0	1	Internal speed command 1	-6000 ~ 6000	PC05
SP3 is valid	SC2	0	1	0	Internal speed command 2	-6000 ~ 6000	PC06
	SC3	0	1	1	Internal speed command 3	-6000 ~ 6000	PC07
	SC4	1	0	0	Internal speed command 4	-6000 ~ 6000	PC08
	SC5	1	0	1	Internal speed command 5	-6000 ~ 6000	PC09
	SC6	1	1	0	Internal speed	-6000 ~ 6000	PC10

The input speed command is 7 types of speed command set by internal parameters.

				command 6		
SC7	1	1	1	Internal speed command 7	-6000 ~ 6000	PC11

(Note) 0: OFF(SCx-SG is open-circuited) 1: ON (SCx-SG is short-circuited)

 Before using SC4~SC7 function, you should enable DI SP3 function by PD02~PD09 or PD21 setting.

6.3.2 Speed command Smoothing

If the motor input command changes rapidly, the motor will have vibration, noise and even overshoot. The user can set the three smooth operation parameters for smoothing process to suppress the negative influence caused by the sudden change of the input command. First of all, the speed acceleration time constant can adjust the slope of the motor when starting to run to the speed set by the user, the speed deceleration time constant can adjust the slope from running to static, and the S-curve acceleration and deceleration time constant can improve the motor stability when starting and stopping.

ltem	Parameter abbreviation	Parameter code	Setting range	unit	default value	control mode
Acceleration time constant	STA	PC01	0~20000	ms	200	S, T
Deceleration time constant	STB	PC02	0~20000	ms	200	S, T
S-curve acc. /dec. time constant	STC	PC03	0~10000	ms	0	Pr, S, T

The description of the 3 parameters are as follows:


Speed acceleration time constant

This parameter is the acceleration time when the motor speed changes from 0 rpm to the rated motor speed, which is set as the acceleration time constant. For example, the rated

speed of the servo motor is 3000 rpm, and this parameter is set as 3000 (3s). At this time, the time for the motor to accelerate from 0 rpm to 3000 rpm is 3 seconds. When the speed command is set as 1000 rpm, it takes 1 second for the motor to change from 0 rpm to 1000 rpm.


Speed deceleration time constant

When the motor speed is decelerated from the rated speed to 0 rpm, the required deceleration time is the deceleration time constant. For example, the servo motor runs at 3000 rpm, this parameter is set as 3000(3s), then the time for the motor to decelerate from 3000 rpm to 0rpm is 3 seconds. When the motor is running at 1000 rpm, it takes 1 second to decelerate from 1000 rpm to 0 rpm.

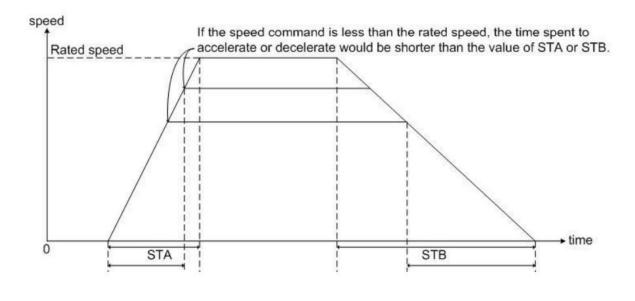



The S-curve acceleration and deceleration method is using three-stage acceleration and deceleration curve to smooth the motor when it starts and stops. Proper setting of STC can improve the stable state of the motor when starting and stopping. The initial S-curve acceleration and deceleration constant is set as 0 seconds. It's recommended to enable this function when using speed mode.

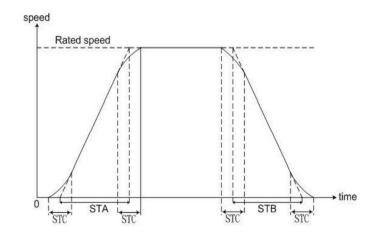


Parameters STA, STB, STC can be set independently. Even if STC is 0, a trapezoidal acceleration and deceleration is still available.

Speed command low-pass filter time constant

Item	Parameter abbreviation	Parameter code	Setting range	Unit	Default value	Control mode
Speed command low-pass filter time constant	SFLT	PB18	0~1000	ms	0	S, T

The larger the value is, the smoother the command curve will be, but the response will also become slower. If it is set as 0, it means that this function is disabled.

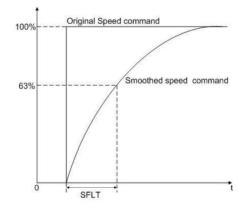

6.3.3 Torque limit of speed control mode

When using the speed mode, the main parameters related to the torque limit function are PA05 and PC25. The table below shows these two parameters.

ltem	Parameter abbreviation	Parameter code	Setting range	Unit	Default value	Control mode
Internal torque limit value1	TL1	PA05	0~100	%	100	Pt, Pr, ST
Internal torque limit value 2	TL2	PC25	0~100	%	100	Pt, Pr, S, T

When setting parameters PD02~PD09 is used for the internal torque limit selection (TL1), the internal torque limit 2 (PC25) can be selected, and according to the status of TL1, the following different situations will occur.


TL Signal	The valid value of torque limit
0	PA05 setting
1	PC25 > PA05 => PA05
	PC25 < PA05 => PC25

Note 0: OFF(TL-SG is open-circuited) 1: ON (TL-SG is short-circuited)

ltem	Signal abbrevia tion	Description	Control mode
Torque limiting control	TLC	When the torque reaches the internal torque limit, TLC and SG will be conductive, but TLC-SG will be off when the SON signal is off.	Pt, Pr, S

6.3.4 Adjustment of speed loop gain

There are many gains in the speed loop need to be adjusted. The method of adjusting can be set as automatically or manually adjustment by PA02. If it is set to automatic adjustment, the inertia ratio and gain value will be continuously estimated. When it's set to manual mode, the load inertia and gain value of the system must be input correctly by the user, and all its automatic or auxiliary functions will be turned off. The structure diagram of the speed loop is shown in below:

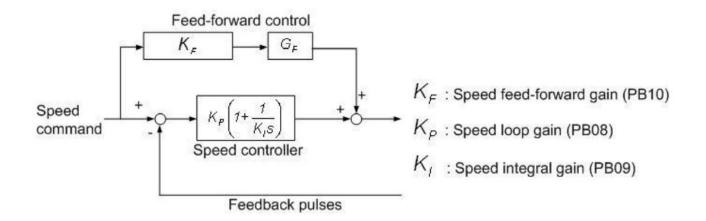

In the speed control loop, some gain adjustment related parameters are summarized as follows:


Item	Parameter abbreviation	Parameter code	Setting range	Unit	Default value	Control mode
Gain tuning mode setting	ATUM	PA02	0000h~0004h	N/A	0002h	Pt, Pr, S, T
Auto-tuning response level setting	ATUL	PA03	1~32	N/A	10	Pt, Pr, S, T
Speed loop gain	VG1	PB08	40~9000	rad/s	183	Pt, Pr, S
Speed integral gain	VIC	PB09	1~1000	ms	34	Pt, Pr, S
Speed feed-forward gain	VFG	PB10	0~200	%	0	S

Auto gain tuning mode

The servo drive will adjust to the optimal controller gain during acceleration and deceleration. And detail introduction can refer to section 5. 3. 2.

Manual mode

When PA02 is set to 0000 or 0001, the main related gain values are speed loop gain (PB08), speed integral gain (PB09), and speed feed-forward gain (PB10). When PA02 is set as 0001, the servo automatically enable the interference compensator function, which can reduce torque ripple, overshoot (overshoot), and speed ripple. It is suitable to use in systems with load changes frequently, but the users should avoid to use in a system with an inertia ratio greater than 10 times. The gain value also needs to be adjusted according to the situation during operation. The diagram as below:

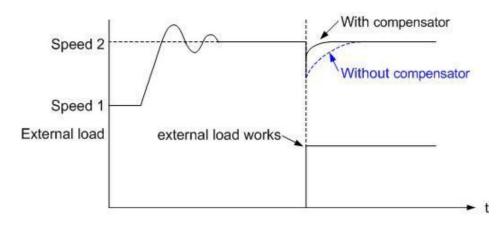

Parameters used in manual mode

Speed loop gain

Increasing the value of this parameter will increase the speed loop bandwidth, but if the setting is too large, it will cause the system vibration. It is recommended to estimate a base value in the automatic mode at first, and then slowly increase the value until the system vibrates.

Speed integral gain

Decreasing the value of this parameter will increase the low-frequency stiffness of the speed loop and reduce the steady-state error. But setting too low may cause the phase lag worse, and may cause system instability.

Speed feed-forward gain

The speed feed-forward gain can reduce the phase lag error and increase the ability of traceability. When the setting value is close to 100, the dynamic tracking error will be very small, and the pre-compensation will be the most completed. If the setting is too low, the improvement effect of the system is not obvious. If the setting value is too large, the system will easily vibrate.

6.3.5 Resonance suppression unit

(1) Automatic high-frequency resonance suppression

Due to the limitation of the mechanism, when the response bandwidth of the control system is too high, it may cause the mechanism to resonate, and this may cause damage on the mechanism. This phenomenon can usually be improved by strengthening the rigidity of the mechanism or reducing the bandwidth of the system, but it may increase the cost and reduce the response. In order to allow users to suppress resonance without increasing the cost and reducing the bandwidth, this servo drive provides the way of Automatic High-frequency Resonance Suppression. its related parameters , setting ranges and default values are shown in the table below. It mainly provides five sets of resonance suppression filters and one set of low-pass filters to suppress resonance for the user to operate manually or automatically as below instructions.

Item	Parameter abbreviation	Parameter code	Set range	Unit	Default value	Command mode
Auto resonance suppression mode	ANCF	PB27	0~2	N/A	1	All
Resonance suppression detection level	ANCL	PB28	1~300	%	50	All
Machine resonance suppression filter 1	NHF1	PB01	10~4000	Hz	1000	All
Machine resonance suppression attenuation 1	NHD1	PB02	0~32	dB	0	All
Machine resonance suppression filter 2	NHF2	PB21	10~4000	Hz	1000	All
Machine resonance suppression attenuation 2	NHD2	PB22	0~32	dB	0	All
Machine resonance	NHF3	PB25	10~4000	Hz	1000	All

suppression filter 3						
Machine resonance suppression attenuation 3	NHD3	PB26	0~32	dB	0	All
Machine resonance suppression filter 4	NHF4	PB45	10~4000	Hz	1000	All
Machine resonance suppression attenuation 4	NHD4	PB46	0~32	dB	0	All
Machine resonance suppression filter 5	NHF5	PB47	10~4000	Hz	1000	All
Machine resonance suppression attenuation 5	NHD5	PB48	0~32	dB	0	All
Resonance suppression low-pass filter	NLP	PB03	0~10000	0. 1ms	17	All

Manual mode

The driver provides five groups of filters and one group low-pass filters to manually suppress resonance, the first is PB01, PB02; the second is PB21, PB22; the third is PB25, PB26; the fourth is PB45, PB46; the fifth is PB47, PB48; the low-pass filter is PB03, where PB01, PB21, PB25, PB45, PB47 are suppression frequencies, PB02, PB22, PB26, PB46, PB48 are resonance attenuation rates, and PB03 is time constant.

If the resonance frequency is known, the user can set the frequency of the filter and increase the attenuation rate in sequence until there is no resonance phenomenon (Note 2), or slowly increase the low-pass filter time constant (reduce the low-pass filter bandwidth) until no resonance phenomenon, but this method will reduce the response bandwidth of the system.

Auto mode


The driver provides three groups of filters for users to perform automatic resonance suppression, the first is PB01 and PB02; the second is PB21 and PB22, and the fourth is PB45 and PB46. Among them, PB01, PB21 and PB45 are suppression frequencies, and PB02 PB22 and PB46 are resonance attenuation rates.

When resonance occurs, the user can set PB27 to 1 or 2 to enable the automatic suppression function when the resonance frequency is unknown, the driver will automatically detect the resonance frequency and attenuation rate and set the detected results to the first group, the second group and the fourth group of filters (Note 1). and if PB27 is set to 1, it will automatically be change back to 0 after finished automatic detection; if PB27 is set to 2, it will keep detect resonance and suppress it. For other details about PB27, please refer to the table below.

When PB27 is set to 1 or 2, if the resonance still exists, please check whether one of the parameters of PB02, PB22 and PB46 is 32. If yes, the resonance phenomenon cannot be suppressed by the filter, and it is recommended to reduce the system frequency and re-estimate it. If it is less than 32 and greater than 0, it means that the automatic detection mode has detected the resonance frequency, but the resonance may still exists due to insufficient attenuation rate (Note 1), users can increase the attenuation rate by himself (Note 2). If PB02, PB22 and PB46 are 0, it means that the resonance frequency is not detected, which may due to the detection level (PB28) is too high, and it is recommended to lower the level and then set PB27 to 1 or 2 to perform detection again. The complete automatic resonance suppression flow chart as follows:

Note 1. The attenuation rate detected by the drive is the most suitable one, which may not the best one. It can ensure the stable operation of the system

Note 2. Be careful when manually adjust the attenuation rate, due to if the setting is too large, it may cause the system unstable.

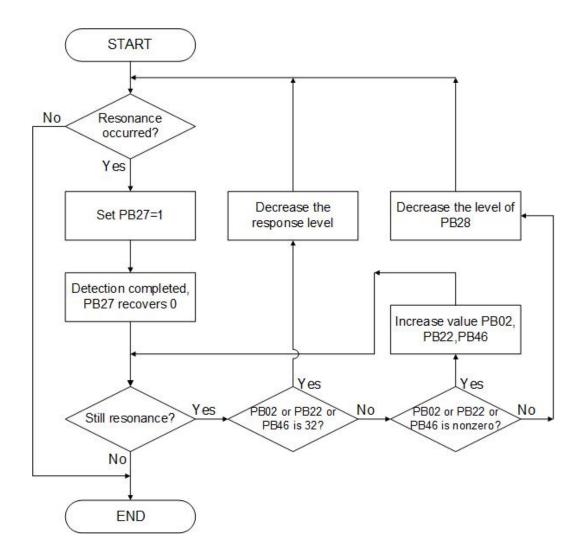

During the auto mode execution, the PB27 value would be changed. The following table explains it.

PB27 tr	ansien	it status	Description
0	\rightarrow	1	Clear PB01, PB02, PB21, PB22, PB45, PB46 values, enable this auto mode.
0	÷	2	Clear PB01, PB02, PB21, PB22, PB45, PB46 values, keep this auto mode running.
1	\rightarrow	0	Store PB01, PB02, PB21, PB22, PB45, PB46 value, disable this auto mode.
1	\rightarrow	1	The auto mode is not yet finished.
1	<i>→</i>	2	Hold PB01, PB02, PB21, PB22, PB45, PB46 values, keep this auto mode running.
2	\rightarrow	0	Store PB01, PB02, PB21, PB22, PB45, PB46 value, disable this auto mode.
2	\rightarrow	1	Clear PB01, PB02, PB21, PB22, PB45, PB46 values, enable this auto mode.
2	\rightarrow	2	The auto mode is not yet finished.

(2) Automatic low-frequency vibration suppression

When the command changes instantaneously, the motor and the load will not be synchronized due to insufficient rigidity of the drive system, it will make mechanical vibrate during motor positioning, and causes problems such as inaccurate motor positioning and bad product yield rate. Usually this problem can be improved by reducing the bandwidth of the system, but the response will be worse. In order to suppress vibration without reducing the bandwidth, this servo drive provides an Automatic Low-frequency Vibration Suppression option, its related parameters, setting ranges, and default values are shown in the following table. It mainly provides two groups of low frequency vibration filters for user to operate manually or automatically.

Item	Parameter abbreviate	Parameter code.	Setting range	Unit	Default value	Control mode
Auto vibration suppression mode	AVSM	PB29	0~1	N/A	0	Pt, Pr
Low-frequency vibration detection level	VCL	PB30	1~8000	pulse	50	Pt, Pr
Vibration suppression frequency 1	VSF1	PB31	1~3000	0. 1Hz	100	Pt, Pr
Vibration suppression gain 1	VSG1	PB32	0~15	N/A	0	Pt, Pr
Vibration suppression frequency 2	VSF2	PB33	1~3000	0. 1Hz	100	Pt, Pr
Vibration suppression gain 2	VSG2	PB34	0~15	N/A	0	Pt, Pr

Manual mode

This servo drive provides two groups of suppression filters for users to manually operate, the first group is PB31, PB32; the second group is PB33, PB34. In which, PB31 and PB33 are suppression frequencies, and PB32 and PB34 are suppression gains. If the vibration

frequency is known, the user can set the vibration frequency to PB31, PB33, and set PB32, PB34 to 1, Set to 1 is to enable the suppression function, and set to 0 is to disable the suppression function. To improve the position response you can increase the gain the value. The higher the value, the better the response (Note 1).

Auto mode

The driver provides two groups of filters for users to automatically suppress low-frequency vibration. The first group is PB31 and PB32; the second group is PB33 and PB34, in which PB21 and PB25 are suppression frequencies, and PB22 and PB26 are resonance attenuation rates. When low-frequency vibration occurs, you can set PB29 to 1 to enable the automatic suppression function when the vibration frequency is unknown. and the driver will automatically detect the vibration frequency and set the detected results to PB31, PB33 and set PB32 and PB34 to 1 to enable the suppression function. And PB29 will be automatically set back to 0 after the automatic detection. The other detailed description of PB29 is as follows.


When PB29 is set to 1, please check whether PB32 and PB34 are both 0 if the vibration still exists. If yes, it means the vibration frequency has not been detected, due to vibration detection level (Note 2) is too high. And the level can be lowered and the detection can be performed again; if it is not 0, it means that the vibration frequency is detected incorrectly because of the vibration detection level may be too low to judge the noise as vibration. You can increase the level and re-detect. the complete automatic suppression flow chart is as follows.

Note 1: Too large gain may cause the motor runs not smoothly.

Note 2: The swing detection level is the peak-to-peak value of vibration, and the unit is pulse.

	PB29 flow chart							
PB29 current value	PB28 modified value	Function						
0	1	Clear PB31~34, enable auto mode.						
1	0	Store current PB31~34, close auto mode.						
1	1	Clear PB31~34, enable auto mode.						

The vibration suppression flowchart of auto mode.

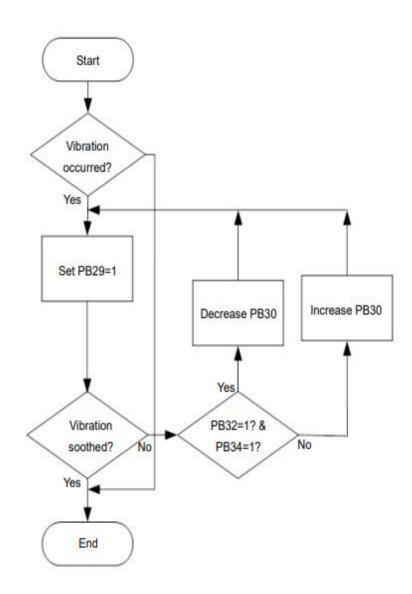

6.3.6 Gain switch function

Shihlin servo drive provides gain switch function when servo motor is running or stop. It can be used through DI pins which are set to make gain switch function valid. If users want to use this function, manual gain tuning mode must be chosen (PA02 is set as $\Box\Box\Box$ or $\Box\Box\Box$ 1), otherwise, the gain switch function cannot be used.

It has below applicable occasions:

- (1). servo gain setting is too large and makes big noise, you can use the gain switch function to reduce the system gain.
- (2). When the load inertia ratio changes greatly during operation, to ensure the stability of the servo system, you can use the gain switch function to change the inertia ratio or gain value.
- (3). In order to make the servo system have a higher response or shorten the setting time, you can use the gain switch function to increase the gain

The related parameters and the detail descriptions for gain switch function are listed below:


ltem	Parameter abbreviation	Paramete r code	Setting range	Unit	Default value	Control mode
Servo motor Load inertia ratio	GD1	PB06	0~1200	0. 1 times	70	Pt,Pr,S
Position loop gain	PG1	PB07	4~1024	rad/s	45	Pt,Pr
Speed loop gain	VG1	PB08	40~9000	rad/s	183	Pt,Pr,S
Speed integral gain	VIC	PB09	1~1000	ms	34	Pt,Pr,S
Gain switch option	CDP	PB11	0000h~ 0008h	N/A	0000H	Pt,Pr,S
Gain switch condition value	CDS	PB12	0~400000 0	Set according to parameter	10	Pt,Pr,S
Gain switch time constant	CDT	PB13	0~1000	ms	1	Pt,Pr,S
Servo motor Load inertia ratio 2	GD2	PB14	0~1200	0. 1 times	70	Pt,Pr,S
Position loop gain change	PG2	PB15	10~500	%	100	Pt,Pr

ratio						
Speed loop gain change ratio	VG2	PB16	10~500	%	100	Pt,Pr,S
Speed integral gain change ratio	VIC2	PB17	10~500	%	100	Pt,Pr,S

The following will explain the related parameters for gain switching.

- (1). The four parameters , which are servo motor load inertia ratio, position, speed loop gain value, and speed integral gain value GD1, PG1, VG1, VIC (PB06~PB09). They are adjusted in the same way as the manual mode parameters, but its value may be changed during gain switching.
- (2). Gain switch option CDP(PB11)

 This parameter is to set the condition of gain switching by changing the lowest digit of the parameter to select the condition. It triggers the gain switch by external digital input(DI) signal, from which you can set PD02~ PD09, PD21~PD24 to enable gain switching.



- x=0: Disable the gain switching.
- x=1: Activate the gain switching when CDP is ON.
- x=2: Activate the gain switching when position command frequency is equal to or higher than CDS setting.
- x=3: Activate the gain switching when position deviation pulse is equal to or higher than CDS setting.
- x=4: Activate the gain switching when motor speed is equal to or higher than CDS setting.
- x=5: Activate the gain switching when CDP is OFF.
- x=6: Activate the gain switching when position command frequency is less than or equal to CDS setting.
- x=7: Activate the gain switching when position deviation pulse is less than or equal to SDS setting.

- x=8: Activate the gain switching when servo motor speed is less than or equal to CDS setting.
- (3). Value of gain switching condition CDS(PB12)

The setting value of gain switching condition (kpps, pulse, rpm) changes according to the setting of CDP (PB11). When set to $\Box \Box \Box \Box$, the parameter is frequency (kpps), when set to $\Box \Box \Box \Box 3$, it is pulse number (pulse), when it is set to $\Box \Box \Box 4$, it is rotation speed (rpm). The unit of the setting value will change according to switching item.

PB11 setting	Switch condition	Unit
0002	Position command frequency is equal to or higher than CDS setting.	kpps
	Position deviation pulse is equal to or higher than CDS setting	pulse
	Motor speed is equal to or higher than CDS setting	rpm
	Position command frequency is less than or equal to CDS setting.	kpps
0007	Position deviation pulse is less than or equal to CDS setting	pulse
	Motor speed is less than or equal to CDS setting	rpm

(4). Time constant of gain switching CDT(PB13)

The gain switching time constant is to smooth the gain switching. It is used to set the time constant when the CDP and CDS conditions are switched. When the gain is switched, if the gain difference is too large, you can use this parameter to suppress the vibration.

(5). Servo motor Load inertia ratio 2 GD2 (PB14)

This parameter can be set to switch the motor load inertia ratio. If the load inertia ratio does not change during operation, set it to the same value as GD1 (PB06).

(6). The change rate of position gain 2, speed gain 2, and speed integral gain during gain switching.

When performing the gain switching operation, the original servo gain value(%) will be changed to the ratio setting by PG2, VG2, and VIC.


Below are examples to illustrate the gain switching operation.

Example 1: digital input signal use as switching trigger.

1). Relevant parameters setting:

Item	Parameter abbreviation	Parameter code	Default value	Unit
Servo motor Load inertia ratio	GD1	PB06	10	0. 1time
Position loop gain	PG1	PB07	100	rad/s
Speed loop gain	VG1	PB08	500	rad/s
Speed integral gain	VIC	PB09	100	ms
Gain switch option	CDP	PB11	0001	N/A
Gain switch time constant	CDT	PB13	10	ms
Servo motor Load inertia ratio 2	GD2	PB14	20	0. 1time
Position loop gain change ratio	PG2	PB15	80	%
Speed loop gain change ratio	VG2	PB16	120	%
Speed integral gain change ratio	VIC2	PB17	150	%

(2). The sequence of gain switch

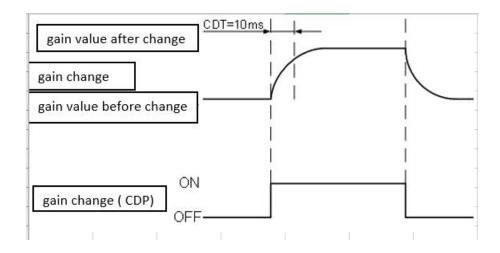

3 . The states of parameters change


ltem	CDP OFF		CDP ON		CDP OFF
Servo motor Load inertia ratio	10	\rightarrow	20	\rightarrow	10
Position loop gain	100	\rightarrow	80	\rightarrow	100
Speed loop gain	500	\rightarrow	600	\rightarrow	500
Speed integral gain	100	\rightarrow	150	\rightarrow	100

Example 2: Position deviation pulse as switch source

Item	Parameter abbreviation	Parameter code	Default value	Unit
Servo motor Load inertia ratio	GD1	PB06	10	0. 1time
Position loop gain	PG1	PB07	100	rad/s
Speed loop gain	VG1	PB08	500	rad/s
Speed integral gain	VIC	PB09	100	ms
Gain switch option	CDP	PB11	0003	N/A
Gain switch condition value	CDS	PB12	100	pulse
Gain switch time constant	CDT	PB13	10	ms
Servo motor Load inertia ratio 2	GD2	PB14	20	0. 1times
Position loop gain change ratio	PG2	PB15	80	%
Speed loop gain change ratio	VG2	PB16	120	%
Speed integral gain change ratio	VIC2	PB17	150	%

1. Relevant parameter setting

(2). The sequence of gain switching

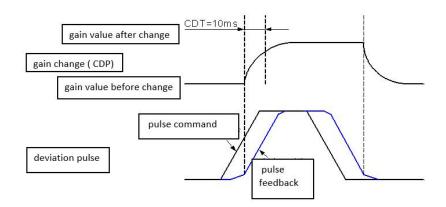

3 . The states of parameters change

ltem	CDP OFF		CDP ON		CDP OFF
Servo motor Load inertia ratio	10	\rightarrow	20	\rightarrow	10
Position loop gain	100	\rightarrow	80	\rightarrow	100
Speed loop gain	500	\rightarrow	600	\rightarrow	500
Speed integral gain	100	\rightarrow	150	\rightarrow	100


6.4 Position control mode

The position control mode is used in where precise positioning is required, such as industrial machinery, processing machines, and so on. There are two ways to input position control mode commands: one is terminal input mode, and the other is internal register input mode. The terminal input mode is to receive the pulse command from the host controller to control the positioning of the servo motor, and the internal register input mode is to manually input 63 groups of position command values (please refer to Chapter 7), and then define the POS1~POS6 to switch the corresponding position command. Below table will introduce the setting of terminal input and internal register input.

ltem	Parameter abbreviation	Parameter code	Setting range	Unit	Default value	Control mode	Description
Control mode setting value	STY	PA01 (*)	0000h ~ 1116h	N/A	0000h	ALL	Control mode setting value: $\begin{array}{c c c c c c } u & z & y & x \\ \hline x & z & y & x \\ \hline x & z & y & x \\ \hline x & z & y & x \\ \hline x & z & y & x \\ \hline x & z & y & x \\ \hline x & z & y & x \\ \hline x & z & y & z \\ \hline mode & setting \\ \hline x & z & y & z \\ \hline mode & setting \\ \hline x & z & y & z \\ \hline x & z & y & z \\ \hline x & z & y & z \\ \hline x & z & y & z \\ \hline x & z & y & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z & z \\ \hline x & z & z \\ \hline x &$

After PA01 is been set, you should restart the power to activate it.

(*)The modification of PA01 would be valid by power off once and power on again.

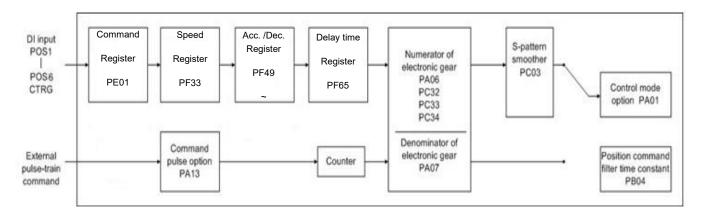

Note: The S-pattern smooth is invalid when the external pulse-train commands are applied.

 When the external input pulse signal function is activated, the S-curve smoother can not be used.

6.4.1 External pulse command(Pt command)

The pulse command in this mode is provided by an external device. You should set PA01 to 0000 and then restart power. There are three types of input waveform in this mode for users to set by themselves. The pulse trigger type can also be set to positive logic or negative logic. Positive logic means that the servo drive recognizes the pulse valid by the rising edge, on the other hand, negative logic means the falling edge. The related parameters and setting methods are as follows:

ltem	Parameter code	Setting range	Unit	Default value	Control mode	Description
Function mode option 3(command	PA13	0000h ~	N/A	0000h	Pt	Set external input pulse type 0 z y x

pulse option)	0312h	x: input pulse train
		format select
		x=0:forward/reverse rotation pulse train
		x=1: pulse train+sign
		x=2: AB phase pulse train.
		<u>y: input pulse-train</u> logic select
		y=0:positive logic
		y=1:negative logic
		<u>z: The setting of input</u> <u>pulse filter.</u>
		z=0: the maximum input pulse frequency is 500kpps. (applicable frequency is between 200kpps-500kpps)
		z=1: the maximum input pulse frequency is 200kpps. (applicable frequency is below 200kpps)
		z=2: the maximum input pulse frequency is 2Mpps. (applicable frequency is between 500kpps ~2Mpps)
		z=3: the maximum input pulse frequency is 4Mpps.

			(applicable frequency is
			between
			2MPPS~4MPPS)

After this parameter is been set, you should restart the power to activate it.

Pulse	logic and format	Forward rotation	Reverse rotation
	AB phase pulse train	PP	
Negative logic	Pulse train + sign	PP L	H
	Forward/reverse rotation pulse train	PP	
	AB phase pulse train	PP	
Positive logic	Pulse train+ sign	PP	
	forward/reverse rotation pulse train	PP	

If pulse input is line drive type, the maximum frequency is 4Mpps. If pulse train is open collector type, the maximum frequency is 200Kpps.

6.4.2 Internal position command (Pr command)

• You can refer to detail in chapter 7.

The source of the PR position command is parameters (PE01~PE98), (PF01~PF30), which is 64 groups of build-in position command registers. By external I/O (CN1, POS1 ~ POS6 and CTRG), one of the 64 groups can be selected as a position command as shown in the following table:

Position	POS6	POS5	POS4	POS3	POS2	POS1	CTRG	Related
command	1 000	1000	1004	1000	1 002	1001	onto	parameter
PO	0	0	0	0	0	0	↑	PE01
FU	0	0	0	0	0	0	I	PE02
P1	0	0	0	0	0	1	↑	PE03
FI	0	0	0	0	0	I	I	PE04
~								~
P50	1	1	0	0	1	0	^	PF03
F30		I	0	0	I		I	PF04
P51	1	1	0	0	1	1	^	PF05
F31		I	0	0	I		I	PF06
~								~
P63	1	1	1	1	1	1	*	PF29
F03					I			PF30

POS1~POS6 status: 0(POSx-SG is open-circuited), 1(POSx-SG is short-circuited).


CTRG: the moment of open-circuit to short-circuit.

Absolute and incremental position registers are widely used, which is equivalent to a simple program, users can easily complete periodic operation.

6.4.3 Position command smoothing

It is used to set the filter time constant of the position command. With an appropriate parameter setting, the motor can run smoothly even when it encounters abruptly position command changes.

Item	Parameter code	Setting range	Unit	Default value	Control mode
Position command filter time constant	PB04	0~20000	ms	3	Pt, Pr

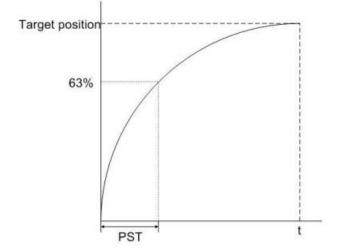


In addition, acceleration and deceleration speed smoothing can be used to make the servo motor run more smoothly. See the table below for the speed smoothing related parameter of position acceleration and deceleration.

ltem	Parameter abbreviation	parameter code	Setting range	Unit	Default value	Control mode
S-curve acceleration and deceleration time constant.	STC	PC03	0~10000	ms	0	Pr, S, T

Note: you can refer to chapter 7 for the acceleration and deceleration time in PR.

Acceleration and deceleration speed smoothing can effectively improve the feature of motor acceleration and deceleration. When the motor load inertia increases, or when the inertia changes significantly, the motor will not run smoothly due to the inertia and friction. Users can increase the setting of the STC (PC03) to effectively improve this.

In Pt mode, when position command is determined by external pulse, the parameters STA (PC01), STB (PC02), and STC (PC03) will be invalid, due to the external input pulse command has been determined by the host controller, which is to provide the continuity of speed and angular acceleration.

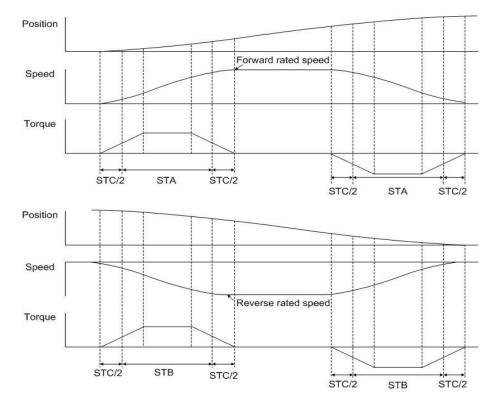

As can be seen in the above figure, for the forward rotation or reverse rotation command from position command ,its acceleration and deceleration time is decided by (PF49~PF64).

If the internal register is used for position command, to make the motor run more smoothly, it is recommended that the user set the acceleration and deceleration time(PF49~PF64) and the S-curve acceleration and deceleration time constants(PC03) by themselves.


Note: Please refer to Chapter 7 for above ACC and DEC settings.

6.4.4 Electronic gear

Users could set different electronic gear ratios to enable the mechanism to move different distances. The relevant parameters are presented below:

ltem	Parameter abbreviation	Parameter code	Setting range	Unit	Default value	Control mode
Electronic gear numerator	СМХ	PA06	1~2 ²⁶	N/A	1	Pt, Pr
Electronic gear denominator	CDV	PA07	1~2 ²⁶	N/A	1	Pt, Pr
Electronic gear numerator 2	CMX2	PC32	1~2 ²⁶	N/A	1	Pt
Electronic gear numerator 3	CMX3	PC33	1~2 ²⁶	N/A	1	Pt
Electronic gear numerator 4	CMX4	PC34	1~2 ²⁶	N/A	1	Pt

When setting the electronic gear ratio, the incorrect setting will cause unexpected fast rotation, so you must set them in SERVO OFF. The electronic gear ratio must be set within the range of 1/50 <(CMX/CDV) <64000, otherwise the motor may cannot run normally. The relationship between the electronic gear ratio numerator & denominator and the command can be seen in the figure below.

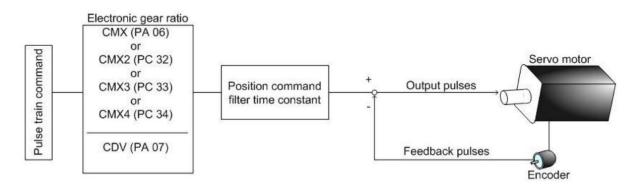

There are four groups of electronic gear ratio numerators for users to switch. You can set the 2 DI input register as CM1 and CM2 to switch. Please refer to the following table for detail.

Item	CM1	CM2	Control mode
Electronic gear numerator 1 (PA06)	0	0	Pt
Electronic gear numerator 2 (PC32)	1	0	Pt
Electronic gear numerator 3 (PC33)	0	1	Pt
Electronic gear numerator 4 (PC34)	1	1	Pt

• 0: CMx-SG is open-circuited,1: CMx-SG is short-circuited.

Calculation of electronic gear ratio


Before calculating the electronic gear ratio, the user must understand the specifications of the system, such as the resolution of the motor encoder is 17bit Pulse/rev, the deceleration ratio of the mechanism, the gear ratio and so on.

The electronic gear ratio calculation is as follows:

E-gear ratio = Resolution of motor encoder / (Load distance per revolution(angle) / Distance pulse to be shifted entered by user)

If there is a deceleration ratio between the motor and the loads, multiply a turn of motor shaft /mechanism turns.

The following is an example to illustrate how to set the electronic gear ratio.

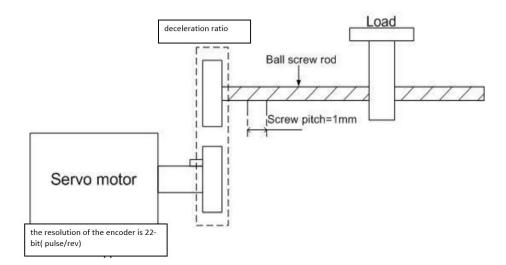

From the figure above, it shows that the load (ball screw rod) has a moving distance of 1mm in one turn, and the motor resolution is 17-bit Pulse/rev. if you want the load axis to rotate 5µm, the calculation is as below.

Electronic gear ratio = 131072 / 200


In this way, it can be known that when the numerator of the electronic gear ratio is set to 131072, and the denominator is set to 200. and the ball screw will be shift a 5-µm distance with a position pulse command.

6.4.5 Torque limit of position loop

Same as section 6. 3. 3.

6.4.6 Position loop gain.

As the position loop contains speed loop, if the user uses the manual mode to adjust the position loop, it's necessary to set the speed gain related parameters first (refer to section 6. 3. 5), and then set the position proportional gain and the position feed forward gain. The position loop gain can be set as a value of $1/4 \sim 1/6$ speed loop gain. The user can also use the auto-tuning mode to automatically set the position and speed-related gains. The position loop diagram is shown as below:

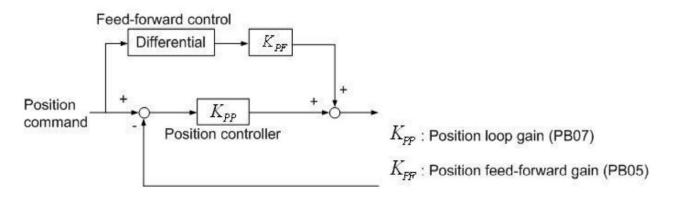

The relevant parameters of position gain adjustment are listed below:

Item	Parameter abbreviation	Parameter code	Setting range	Unit	Default value	Control mode
Auto tuning mode option	ATUM	PA02	0000h~0004h	N/A	0002h	Pt, Pr, S, T
Auto-tuning response level setting	ATUL	PA03	1~32	N/A	10	Pt, Pr, S, T
Position feed-forward gain	FFC	PB05	0~200	%	0	Pt, Pr
Position loop gain	PG1	PB07	4~1024	rad/s	45	Pt, Pr

When the position loop gain PG1 (PB07) is set too large, although the bandwidth and response gets faster, the motor will run back and forth with vibration. This is not allowed in the precise position control application, you must decrease the PG1 value until no vibration.

If the bandwidth is limited by the machine, which makes the position feedback cannot track the position command and cannot meet the reasonable position error requirements, you can use the position feed-forward gain to reduce the dynamic error of the position tracking. In other words, using position feed-forward gain will increase the position setting time relatively.

The position feed-forward gain adjustment method is set from low to high. Theoretically, setting it to 1 should be the best. If the setting is too large, it may cause vibration. The position feed-forward value should be reduced to be used when there is no vibration.

6.5 Dual control mode.

To meet the user's need to switch control modes frequently ,Shihlin Servo also provides five dual-mode for users. PA01 can change the dual mode setting, see the table below:

	Mode name	Mode code	Parameter PA01 setting	Description
	Position with external	Pt-S	1001h	Pt/S is switched mutually via
	command - speed	FI-O	100111	the signal of DI.
	Position with external	Pt-T	1005h	Pt/Tis switched mutually via the
	command - torque	F (- 1	100511	signal of DI.
Dual	Position with inner register	Pr-S	1011h	Pr/S is switched mutually via
mode	command - speed	F1-0	IOTIN	the signal of DI.
	Position with inner register	Pr-T	1015h	Pr/T is switched mutually via
	command - torque	F 1= 1	101311	the signal of DI.
	Speed torque	S-T	1003h	S/T is switched mutually via the
	Speed - torque	3-1	100311	signal of DI.

When using the dual mode, the assignment of digital input DI and digital output DO is very important. To avoid insufficient DI/DO pin in position mode, you can use external input pulses.

If the digital input DI pin of switching mode is LOP pin assignment, you can set DI as LOP and enable it. The description is as follows:


ltem	Parameter code	I/O assignment	CN1 assignment	Description	Control mode
Control mode switch	LOP	DI	CN1-21(default)	To select control mode when in position/speed control dual mode(Note)Control LOPLOPmode0position1speedTo select control mode when in speed/torque control dual mode.(note)Control LOPLOPmode0speed1torque	Described according to different control mode
				to select control mode when	

		ii	in torque/position control		
			Dual mode.		
			(note)	Control	
			LOP	mode	
			0	torque	
			1	position	
		N	Note		
		C):OFF(LOP-S	G is open-	
			circuited)		
		1	:ON(LOP-SG	is	
			short-circui	ted)	


ST1 and RS2 are defined as the same pin in DI. When in speed and torque dual mode, if LOP is switched to speed mode and this pin will automatically switched to ST1 function, If LOP is switched to torque mode, and this pin will automatically switched to RS2 function.

6.5.1 Position/speed dual mode

There are two position/speed modes: Pt/S and Pr/S. The user can switch between them by the LOP terminal of the digital input DI pin. When PA01 is set to the terminal input or the internal register input in the position mode, the switching sequence diagram of the speed mode is shown as below:

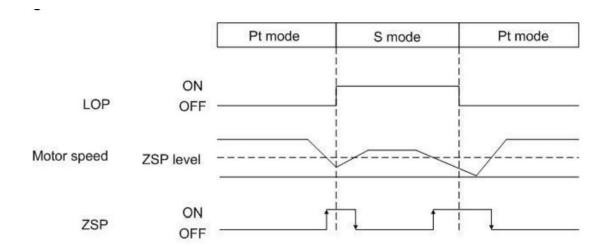


The mode cannot be switched if the motor is running at high speed,. When ZSP is on, the control mode can be switched, and it is recommended that the user wait for the motor stops completely before switching the mode.

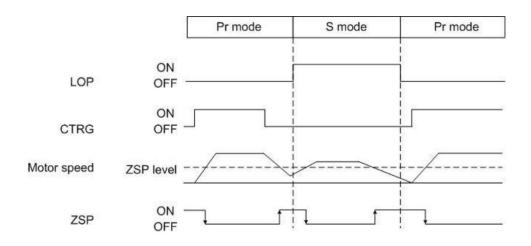

6.5.2 Speed/torque dual mode

Before using the speed/torque dual mode, please set PA01 to 1003H. The user can switch the speed/torque mode through the LOP terminal of the digital input DI pin. Since the DI terminal ST1 (ST2) in speed mode is automatically changed to RS2 (RS1) when switching to the torque mode, the rotation direction of the motor will be reversed when switching between speed/torque mode. The following is the sequence flow of the speed/torque mode:

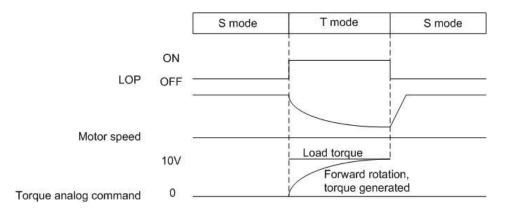


It is recommended to switch speed/torque mode after the motor is completely stopped.

6.5.3 Torque/position dual mode.

There are two torque/position dual modes: T/Pt and T/Pr. The user can set PA01 to 1005 (T/Pt mode) or 1015 (T/Pr mode).

If the motor is running at high speed, the mode cannot be switched. When ZSP is on, the control mode can be switched.

The user can switch the torque/position dual mode through the LOP signal of the DI pin. When switching to the position mode with internal register command, the CTRG signal need to be switched from OFF \rightarrow ON, you can refer to the following sequence chart for details:

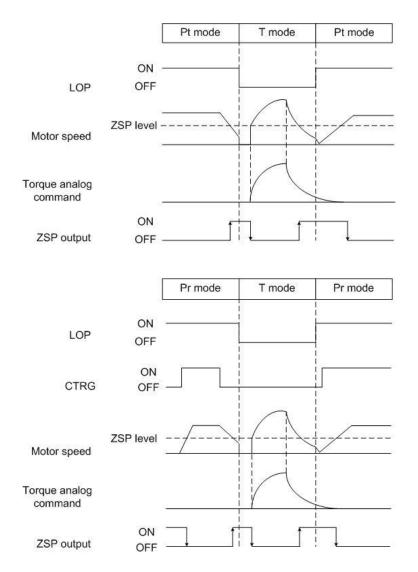

It is recommended that the user wait for the motor to completely stop before performing mode switch.

6.6 Other functions

•Before wiring, turn off the power and wait for 20 minutes or more until the charge LED is off, and check the residual voltage by meter. Otherwise, an electric shock may occur.

•Please use designated products for peripheral devices to avoid fire or CAUTION malfunction.

6.6.1 Selection of regenerative resistor

• It's forbidden to use regenerative resistor and servo drive except for below specified combinations, otherwise, a fire disaster may occur.

If the torque direction of the motor is opposite to the rotation direction, the motor will switch to a power generator, The energy will be transferred from the load to the drive. To avoid the P-N voltage excess, it need regenerative protection function to stabilize the voltage within 370V which is a safe value to avoid IGBT module and capacitor damage. The function is mainly composed of IGBT and resistor. The regenerative energy is consumed by the resistor and its resistance need to be checked when using it. The regenerative protection function is controlled by the regenerative transistor and it should be checked before operation. If the regenerative transistor is damaged, stop the motor urgently to avoid continuous energy regeneration which will damage the drive.

The driver has a built-in regenerative resistor for users. If the regenerative energy is too large, it is recommended not to use the built-in regenerative resistor, use an external regenerative resistor to prevent the built-in regenerative resistor from overheating or failing to consume energy to damage the drive.

For drive above 400W (inclusive), its terminal P-C has a built-in regenerative resistor. If you need to use a larger external regenerative resistor, you can connect the external regenerative resistor to the P-C terminal. (the original one cannot connect to P-C terminal).

The following table shows the specifications of built-in regenerative resistors provided by Shihlin Servo models:

Drive(W)	-	on of built-in ve resistors	The Minimum resistance	Consumption power of of built-in resistor (W)				
2	Resistance(Ω)	Capacitor(W)	permissible (Ω)					
100		N/A						
200			N/A					
400	100	20	100	10				
750	40	40	40	20				
1000	40	40	40	20				

- Please set the resistance value (PA10) and capacity (PA11) of the regenerative resistor correctly, otherwise it may affect this function.
- The regenerative capacity processed by the built-in regenerative resistor is the average value of the regenerative capacity, and its value is 50% of its rated capacity; Same rule as the external regenerative resistor.

When the regenerative capacity exceeds the regenerative capacity of the built-in regenerative resistor, an external regenerative resistor should be used. When connecting external regenerative resistor, select regenerative resistors with the same resistance. If you increase the capacitor of the resistor in series or parallel connection, make sure that its resistance meet the requirement. To reduce the temperature, you can use regenerative resistor with thermal switch or by forced cooling. Regarding the load of the resistor, you can consult the manufacturer for detail.

When Choosing the external regenerative resistor, the resistance value is suggested in the above table. To easily estimate the required capacity of the regenerative resistor, below is the instruction for selecting the external regenerative resistor capacity:

(a) Without external load

If the motor is running forwardly or reversely, the regenerated energy from brake will first return to the capacitor of the DC bus, and when the voltage of the capacitor exceeds a certain value, the regenerative resistor will consume excess recharge energy. The selection method of regenerative resistor is as follows; The following table provides the calculation of regenerative energy. Users can refer to and calculate the regenerative resistance they need to choose.

Drive	e(W)	Motor	Rotor inertia J (x10 ⁻⁴ kg*m²)	No-load rated speed to static regenerative energy Es(joule)	Ec(joule) capacitor regenerative energy Ec(joule)	maximum motor speed. (rpm)
	100	SME-L01030 • □ □ □	0. 052	0. 26	4. 05	3000
low	200	SME-L02030	0. 161	0. 79	4. 05	3000
inerti	400	SME-L040300000	0. 27	1. 37	8. 40	3000
а	750	SME-L075300000	1. 07	5. 28	15. 45	3000
	1K	SME-L100300000	1. 89	9. 33	15. 45	3000

The capacity of regenerative resistor is calculated as follows:

$$P_{BR} = 2 \times ((N+1) \times E_{S} - E_{C})/T$$

N: The Load inertia ratio T: Duty cycle(Defined by user)

Assuming that the load inertia is N times the motor inertia, when decelerating from 3000 rpm to 0, the regenerative energy is $(N+1)\times Es$. The regenerative resistance need consume (N+1) × Es-Ec Joules. Assuming that the duty cycle is T sec, then the required regenerative resistor power =2× ($(N+1) \times Es-Ec$) / T. the calculation as follows:

Step	Item	Calculation and instruction
1	Choose the duty cycle T	User input(repeat operation cycle)
2	Set speed Wr	User input or read from display
3	Set load to motor inertia ratio N	User input or read from display(Dc) (PA01=0002 is valid)
4	Calculate the maximum regenerative energy Es	Es = J × Wr²/ 182 (if it's rated speed, you can check in the table)
5	Set the consumable regenerative energy Ec	Refer to the above table
6	Calculate the capacity for regenerative resistor	2 × ((N+1) × Es- Ec) / T

Note: J: motor inertia(unit: **kg*m**²), Wr: maximum speed of operation cycle(unit: rpm)

Example 1

Taking the low inertia 400W model as an example, the duty cycle T = 1 sec, the maximum speed is 3000 rpm, and the load inertia is 20 times to the motor inertia, then the required power of the regenerative resistor = $2 \times ((20 + 1) \times 1.37 - 8.4) / 1 = 40.74W$. Therefore, an external regenerative resistor above 40.74w is required.

Note: Since the maximum speed of 3000 rpm is with rated speed of 400W, it can be found from the table on the previous page that Es = 1.37 J.


Generally, when the external load inertia is not large, the built-in regenerative resistor is sufficient. When the regenerative resistor is too small, its accumulated energy and temperature will increase. When the temperature exceed a certain value, it may cause the brake resistor to burn out.

You can refer to section 14. 2 when using an external regenerative resistor.

(b) When there is external torque and the motor does the negative work

Usually, the motor does positive work and the motor's torque direction is identical to the rotation direction. However, in some case, if the external load exceed motor torque, external energy returns to the servo drive and generate regenerative energy.

The following figure shows an example, when the motor is at a constant speed, the external load torque is positive in most of the time and a large amount of energy is quickly transferred to the regenerative resistor.

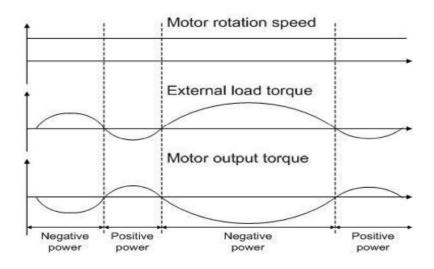

Negative work by external load torque : TL×ω

In which TL: external load torque(Unit Nt-m), W: rotation speed(Unit rad/s)

Users should try to calculate in the safest situation for safety.

For example: When the external load torque is +50% of the rated torque and the speed reaches 3000 rpm, for the 400W model (rated torque: 1. 27Nt-m), the users need to connect an external brake resistor which power is $2 \times (0.5 \times 1.27) \times (3000 \times 2 \times \pi/60) = 399W,100\Omega$.


Note: 1rpm = $2\pi / 60$ (rad/s)

6.6.2 Operation of electromagnetic brake


The electromagnetic brake operation is based on: (1)When the MBR is OFF, it means that the electromagnetic brake is disabled and the motor is locked; (2)When the MBR is ON, it means that the electromagnetic brake is operating and the motor can run freely.The electromagnetic brake can be set by PC40 and PC16 to activate. The PC40 controls the delay output time when the electromagnetic brake interlock signal (MBR) is turning on after the initial delay time of SON ON, and PC16 sets delay time from the SON signal OFF to the electromagnetic brake interlock signal (MBR) turn off. Usually electromagnetic brakes are used in the Z-axis (vertical axis) direction to reduce the large amount of heat generated by the continuous resistance of the servo motor and extend the life of the motor. To avoid unnecessary malfunction, the electromagnetic brake must be operated after the servo is turned off. The brake signal controls the solenoid valve to attract magnetism and provides power to turn on the electromagnetic brake.

- The brake signal controls solenoid valve, makes a loop with external 24V power supply, provides power for electromagnetic brake, and turns on it.
- Brake coil has no polarity.
- It is forbidden to use the internal +24V power supply (VDD) of the driver as the motor brake power supply
- If the MBR DO signal is not applied, you should follow the MBR brake control sequence diagram.
- ◆ To enable DO MBR function, PA01 need to be set to 01 □□.

The operation sequence of electromagnetic brake is as below.

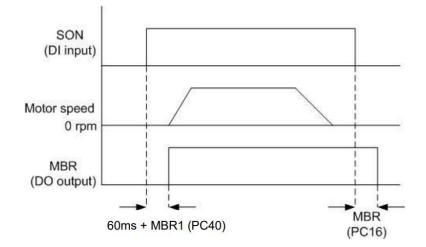

Wiring diagram of electromagnetic brake:

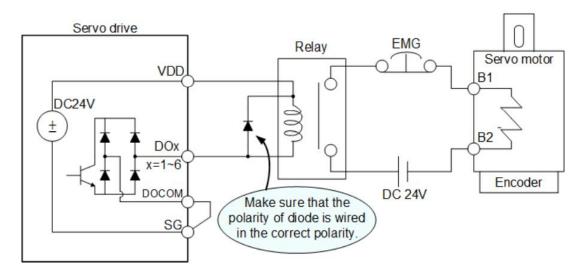

Specification of electromagnetic brake

	SME series					
Motor model name	L01030B	L02030B/ L04030B	L07530B	L10030B		
Electromagnetic brake type		Spring br	ake type			
Rated voltage (V)	DC 24V					
Power consumption (W)	7.2	7.6	8	10		
Rated current (A)	0.3	0. 32	0. 33	0. 42		
Friction Torque(N \cdot m)	0.3	1. 3	2.5	3. 2		

▲ Caution:

The electromagnetic brake is only used for the safety when the motor is stopped and cannot be used for deceleration.

7. PR (procedure) sequence control introductions

7.1 PR introduction

PR (Procedure) program: In the PR, the PR program is the smallest unit of the command. It contains one or more programs and there are 64 groups of programs can be programmed. They are a group of homing programs (PATH#0) and sixty-three groups of PR programs (PATH#01~PATH#63). There are three different ways to trigger the program.

Standard trigger: Use POS1~POS6 to specify the triggering program, and triggered by CTRG[↑].

Event trigger: The program is triggered by the rising or falling edge of EV1~EV4, and refer to the parameters setting of PF83 and PF84.

Software trigger: The program can be triggered by writing the required trigger number into PF82 when servo is started.

7.2 DI/DO and sequences


DI Signal

CTRG, SHOM, STOP, POS1~POS6, ORGP, LSP, LSN, EV1~EV4.

DO Signal

CMDOK, MC_OK, INP(In-position ready), ALM, OVF(Position command overflow), SWPL(Software positive limit reached), SWNL(Software negative limit reached).

The sequence of INP, CMDOK and MC-OK is as below:

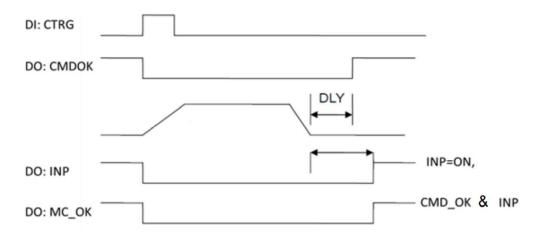

PR command trigger method description

	Command source	Description
STANDARD	DI: CTRG↑+POS1~6	Use DI: use POS1~6 to specify the program number,and triggered by rising edge of CTRG Applicable occasions: PC or PLC issues commands via DI.
DEDICATED	DI: STOP, SHOM	DI: When STOP is activated, the command will be held DI: When SHOM is activated, it will perform homing
EVENT	DI: EV1~EV4	DI: The status change of EV1~EV4 is used as a trigger. Set the program number triggered by OFF→ ON with PF83. Set the program number triggered by ON→ OFF with PF84. Applicable occasions: sensor, trigger the preset program
SOFTWARE	PF82	In the case of servo start, directly write the program number in PF82 to trigger the program. Panel and PC communication software can be used. Applicable occasions: PC controls the servo drive via communication.

7.3 Parameter setting of PR

Target speed: PF33~PF48, total 16 groups.

	15~0 BIT
PF33~PF48	Target speed: 1 ~ 3000 (<i>rpm</i>)

Acceleration/deceleration time: PF49 ~ PF64,total 16 groups.

	15~0 BIT
PF49~PF64	Acceleration/deceleration time constant: 1 ~ 65500 (ms)

Delay time: PF65 ~ PF80,Total 16 groups

	15~0 BIT
PF49~PF64	Delay time: 1 ~ 32767 (<i>ms</i>)

Relevant parameters of PR

	Parameter description
PA04	Homing mode setting
PA08	Homing high speed option 1
PA09	Homing low speed option 2
PE01	Homing path definition
PE02	Origin offset value definition
PF81	Protection trigger deceleration time
PF82	PR command trigger register(software)
PF86	Software forward limit
PF87	Software reverse limit
PE03~PE98	PATH#01~ PATH#48 parameter settings
PF01~PF30	PATH#49~PATH#63 parameter settings

Definition of PR program path

There are a total of 126 parameters which is PE03~PE98 & PF01~PF30 to set 63 groups of PR programs (PATH#01~PATH#63). PATH#01 can be set by PE03 and PE04, PATH#02 can be set by PE05 and PE06. . . PATH#48 can be set by PE97 and PE98, PF#49 can be set by PF01 and PF02. . . PATH#63 can be set by PF29 and PF30. Therefore, each 63 groups of PR programs have two parameters to set its functions. The following introduce the 63 groups of PR programs, take the parameters PE03 and PE04 of PATH#01 as example, and the settings of the rest of the PR programs follow the same rule.

The first parameter of each PR program is the function setting parameter, the second parameter is the data setting parameter, the definition of the function setting parameter as shown in the following table: (take PATH#01 as an example)

	31~28	27~24	23~20	19~16	15~12	11~8	7~4	3~0 BIT
PE03	-	-	_	_	-	_	_	TYPE
PE04	DATA(32bit)							

In which, the TYPE determines the path form and function, its definition is as follows:

TYPE=1 is constant speed control, TYPE=2 is position control, TYPE=3 is AUTO position control, TYPE=7 is program jump, TYPE=8 is parameter writing, TYPE=A is indexing position control, and TYPE=2 or 3 are both position control, the difference is that TYPE=3 can automatically execute the next program, so there are five different control types including constant speed, positioning, program jump, parameter writing and index positioning.

Constant speed control(TYPE=1): its parameter definition shows in below table(take PATH#01 for example)

	31~28	27~24	23~20	19~16	15~12	11~8	7~4	3~0 BIT
PE03	х	х	DLY	х	DEC	ACC	OPT	1
PE04	DATA(32	2bit):Targe	et speed(U	NIT is det	ermined v	vith the OF	PT setting	.)

When this command is executed, the motor starts to accelerate (or decelerate) at current speed (not necessarily as 0) to reach the target speed and keep running.

The definition of OPT option shows as follows:

OPT option						
Bit 7	Bit 6	Bit 5	Bit 4			
(0/8)	(0/4)	(0/2)	(0/1)			
×	UNIT	AUTO	INS			
X		(auto execute)	(interrupt)			

* DI:STOP and software limit is acceptable.

INS: If set as INS, it means the current PR will immediately replace the previous PR.

AUTO: When it reaches target speed, the next program will be automatically loaded.

UNIT: Bit 6=0 unit is 0.1 rpm, Bit 6=1unit is PPS (Pulse Per Second).

ACC/DEC: The value range is 0~F which can be set as the ACC/DEC time number, and its definition is as follows:

ACC/DEC Value	F	E	D	С	В	 4	3	2	1	0
Relative parameters	PF64	PF65	PF64	PF63	PF62	 PF53	PF52	PF51	PF50	PF49

DLY: the value range is 0~F which can be set as delay time number, and its definition is as follows:

DLY value	F	E	D	С	В	 4	3	2	1	0
Relative parameters	PF80	PF79	PF78	PF77	PF76	 PF69	PF68	PF67	PF66	PF65

Position control : When TYPE=2, finish and then stop. When TYPE=3, the motor would automatically execute the next path after finished.(take PATH#01 for example)

	31~28	27~24	23~20	19~16	15~12	11~8	7~4	3~0 BIT		
PE03	x	x	DLY	SPD	DEC	ACC	OPT	2 或 3		
PE04	DATA(32bit): Target position: Unit: pulse									

The definition of OPT option is as follow:

	OPT option									
Bit 7 Bit 6 Bit 5 Bit 4 (0/8) (0/4) (0/2) (0/1)										
CMD (Comma	ind type)	OVLP (overlap)	INS (Interrupt)							

		CMD options
BIT 7	BIT 6	Description
0	0	Absolute positioning command (position command=DATA)
0	1	Relative positioning command (Position command=current feedback+DATA)
1	0	Incremental positioning command(position command=the end of previous command+ DATA)

* DI:STOP and software limit is acceptable!

INS: If set as INS, it means the current PR will immediately replace the previous PR.

OVLP: Allow overlap to the next path. Set DLY to 0 when it is used.

CMD: The calculation of the position command ending is shown in the above table.

ACC/DEC: The value range is 0~F which can be set as the acceleration/deceleration time number, and its definition is as follows:

ACC/DEC value	F	E	D	С	В	 4	3	2	1	0
Relative parameters	PF64	PF65	PF64	PF63	PF62	 PF53	PF52	PF51	PF50	PF49

SPD: The value range is 0~F which can set as the target speed number, and its definition is as follows:

SPD value	F	Е	D	С	В	 4	3	2	1	0
Relative parameters	PF48	PF47	PF46	PF45	PF44	 PF37	PF36	PF35	PF34	PF33

DLY:the value range is 0~F which can be set as delay time number, and its definition is as follows:

DLY value	F	Е	D	С	В	 4	3	2	1	0
Relative parameters	PF80	PF79	PF78	PF77	PF76	 PF69	PF68	PF67	PF66	PF65

Program jump: When TYPE=7, it can jump to the specified PR program number. (Take PATH#01 as an example)

	31~28	27~24	23~20	19~16	15~12	11~8	7~4	3~0 BIT			
PE03	х	x	DLY	х	х	х	OPT	7			
PE04	04 PATH_NO: specified PR program number,range(1~63), if set as 0, it stops.										

PATH_NO: Number of target jumping path.

The definition of OPT option is as follows:

	OPT	option					
Bit 7	Bit 6	Bit 5	Bit 4				
(0/8) (0/4) (0/2) (0/1)							
, y	Y	X	INS				
X	Х	Х	(Interrupt)				

INS: If set as INS, it means the current PR will immediately replace the previous PR.

DLY:the value range is 0~F which can be set as delay time number, and its definition is as follows:

DLY value	F	E	D	С	В	 4	3	2	1	0
Relative parameters	PF80	PF79	PF78	PF77	PF76	 PF69	PF68	PF67	PF66	PF65

Parameter writing: when TYPE=8, it enable to write specified parameter(take PATH#01 for example).

	31~28	27~24	23~20	19~16	15~12	11~8	7~4	3~0 BIT			
PE03	x	SOUR	DLY	Target writing parameter OPT 8							
PE04	4 Source (constant value or parameter number)										

The definition of OPT option is as follows:

		OPT option	
Bit 7	Bit 6	Bit 5	Bit 4
(0/8)	(0/4)	(0/2)	(0/1)
x	ROM	AUTO	INS
	(Write in ROM)	(Automatic execution)	(Interrupt)

INS: If set to INS, it means the current PR will immediately replace the previous PR.

AUTO: Execute the next PR path when the current PR is completed.

ROM: When BIT6=0, it means the parameter will not saved in EEPROM, when Bit 6=1, it means the parameter will saved in EEPROM in the meantime.

Target writing parameter: the group and number of the writing parameter can be set.

	Target parameter						
Bit 16~19	Bit 12~15 Bit 11~8						
Parameter							
group	_						
A→1	Parameter nur	mber(Decimal)					
B→2	P□05→05						
C→3	P□45	5→45					
D→4	P□98	3→98					
E→5	P⊡77	′→77					
F→6							

(For example: if the writing target parameter is PF34, you can set as 634)

DLY: the value range is $0 \sim F$, it can be set as delay time number, and its definition is as follows:

DLY value	F	Е	D	С	В	 4	3	2	1	0
Relative parameters	PF80	PF79	PF78	PF77	PF76	 PF69	PF68	PF67	PF66	PF65

SOUR: It is set to choose the data source. The data source setting can choose between Constant and Parameter Value.

	SOUR	option		Description			
Bit 27	Bit 26 (SOUR)	Bit 25	Bit 24	Data source	Write destination		
x	0	х	х	Constant	P□XX		
x	1	х	х	P□XX	P□XX		

 \Box : Parameter group(A~F) XX: Parameter number

Source: it has different definition according to SOUR setting as shown in the following table.

				Sour	rce				
	31~28	27~24	23~20	19~16	15~12	11~8	7~4	3~0 bit	
SOUR =0	Consta	Constant							
SOUR =1	Rsvd (0)x00000))			P_Grp	P_id	x	

P_Grp, P_idx: The specified writing parameter group and number

Constant: constant data to be written.

If the written value exceeds the parameter value range, AL.63 will be displayed. If P_Grp is out of range, AL.61 will be displayed. If P_Idx is out of range, AL.62 will be displayed. If some parameters cannot be written in when SON is ON, AL.64 will be displayed and the next PR command will stop executing automatically.

Index positioning: When TYPE=A, it can be applied in turret or rotation table.

(Take PATH#01 for example)

	31~28	27~24	23~20	19~16	15~12	11~8	7~4	3~0 BIT
PE03	х	OPT2	DLY	SPD	DEC	ACC	OPT	A
PE04	DATA (0~41943	04): inde	ex coordi	nate con	nmand,	unit pu	llse

The definition of OPT is as follows:

	OPT option		
Bit 7	Bit 6	Bit 5	Bit 4
(0/8)	(0/4)	(0/2)	(0/1)
00: Always forward (CC	W)		
01: Always reverse(CW)	OVLP	INS
10:Shortest path.		(overlap)	(interrupt)
(Judging by current loca	tion and target location)		

INS: If set as INS, it means the current PR will immediately replace the previous PR.

OVLP: it allows to overlap the next PR command. Set DLY as 0 when it is used.

ACC/DEC: the value range is 0~F and it can be set as acceleration / deceleration time number, its definition is as follows:

ACC/DEC value	F	E	D	С	В	 4	3	2	1	0
Relative parameters	PF64	PF65	PF64	PF63	PF62	 PF53	PF52	PF51	PF50	PF49

SPD: the value range is 0~F and it can be set as target speed number, its definition is as below:

SPD value	F	Е	D	С	В	 4	3	2	1	0
Relative parameters	PF48	PF47	PF46	PF45	PF44	 PF37	PF36	PF35	PF34	PF33

DLY: the value range is 0~F and it can be set as delay time number, its definition is as follows:

DLY value	F	E	D	С	В	 4	3	2	1	0
Relative parameters.	PF80	PF79	PF78	PF77	PF76	 PF69	PF68	PF67	PF66	PF65

The definition of OPT2 option is as follows:

OPT2 option										
Bit 27	Bit 26	Bit 25	Bit 24							
(0/8)	(0/4)	(0/2)	(0/1)							
x	x AUTO S_LOW									

- S_LOW: The speed unit options.
- S_LOW =0 means the speed unit 0.1 rpm.
- S_LOW =1 means the speed unit 0.01 rpm.

S_LOW =2 means the speed unit 1 rpm.

AUTO: Executes the next PR path when the current PR completes

DATA:Set each indexing positioning coordinate value.

DATA format
Pulse: 0~1048575

Homing definition: set by PE01 and PE02.

	31~28	27~24	23~20	19~16	15~12	11~8	7~4	3~0 BIT		
PE01	BOOT	х	DLY	х	DEC1	ACC	PATH			
PE02	ORG_C	ORG_DEF (32 bit)								

PATH: set the action after homing, and its definition is shown in the table below:

	PATH option							
Bit 4~7	Bit 0~3	Description						
0	0	Stop after homing.						
0	1	Execute PATH#01 after homing.						
0	2	Execute PATH#02 after homing.						
~	~	~						
3	E	Execute PATH#62 after homing						
3	F	Execute PATH#63 after homing.						

ACC: the value range is 0~F and it can be set as acceleration time number, its definition is as follows:

ACC value	F	Е	D	С	В	 4	3	2	1	0
Relative	PF64	DE65	PF64	DE63	PE62	DE53	PE52	DE51	PF50	
parameters	1104	1105	1104	1105	1102	 1100	11.52	1131	1130	1143

DEC1: the value range is 0~F, and it can be set as the first deceleration time number, its definition is shown as below:

ACC value	F	E	D	С	В	 4	3	2	1	0
Relative	PF64	PF65	DE6/	DE63	DE62	PF53	DE52	DE51	DE50	
parameters	F104	FIUS	FT 04	FIUS	FIUZ	 FT 33	FIJZ	FIJI	FIJU	F149

The second deceleration time is same as the deceleration time of STP in PF81.

DLY: the value range is 0~F and it can be set as delay time number, its definition is as follows:

DLY value	F	Е	D	С	В	 4	3	2	1	0
Relative parameters	PF80	PF79	PF78	PF77	PF76	 PF69	PF68	PF67	PF66	PF65


BOOT: To set whether to execute the homing when the servo is started for the first time

	BOOT option
Bit 28~31	Description
0	NOT execute homing when servo starts for the first time
1	Execute homing when servo starts for the first time

ORG_DEF: the coordinate value of the origin and it may not be 0.

ORG_DEF format
Pulse: (−2 ³¹) ~ (2 ³¹ -1)

The homing does not have the SDA servo origin stop function to return to the origin! Since the motor must decelerate to stop after the origin is found (origin signal or Z pulse), and the stop position must be a short distance beyond the origin as shown in the figure below:

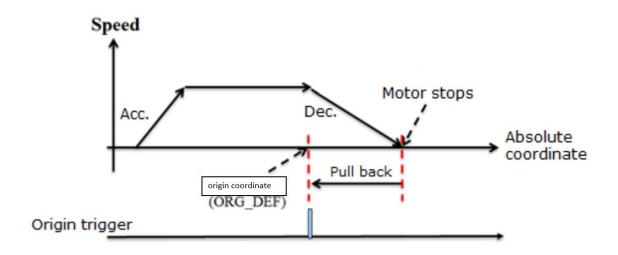

If returning to the origin is not needed, set PATH to 0.

If returning to the origin is needed, set PATH=A, and it will execute PATH#A automatically after homing and set absolute positioning command =ORG_DEF.

The homing does not define an offset value (Offset), but uses PATH to specify a path as the offset value! It is recommended to use absolute positioning command for this path, and the command value = offset (value of absolute coordinates).

7.4 PR sequence status

In PR, all 63 groups of programs can be set to five control types: constant speed, positioning, path jump, parameter writing and index positioning. With this 63 program to perform various control combinations according to the settings, SDC servo PR provides three sequences. Every PR could be linked to the other PR with one of 3 sequences: AUTO (automatically execute the next program), interrupt (INS) and overlap (OVLP). Among them, AUTO and interrupt can be set in the all five control types, but the overlap function can only be used for switching position functions. The following is an description of the three different sequences:

Sequential command: If INS and OVLP is not set in PR, the program will follow the original setting sequence. If the previous program has set to AUTO sequences, the next program will add the delay time setting after the previous program completion.


Overlapping command: if the previous and next program are both positioning control program, overlap function can be set in the previous program to enable overlapping to the next positioning control, which will make the two positioning control be transited smoothly, and reduce the vibration during transition.

Interrupt command: It indicates that the current PR will immediately replace or combined by another command. The result of the final command will vary according to different control types.

Sequential command: Use the AUTO function to generate a fixed sequence of program command combinations.


PATH#12 (AUTO positioning control, incremental positioning path : 104857600 pulse, delay time: 200ms) \rightarrow PATH#13(Positioning control, absolute positioning: 0 pulse).

As shown in the figure below, which is a typical sequential command of positioning control followed by positioning control. In positioning control, the delay time starts counting after the positioning is completed.

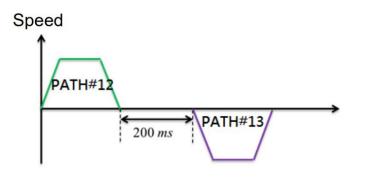

PATH#12(AUTO constant speed control, target speed : 2000 rpm, delay time: 200ms) \rightarrow PATH#13 (Positioning control, absolute positioning:0 pulse)


As shown in the figure below, it is a typical sequential command of constant speed control followed by positioning control. In speed control, the delay time will start counting after the positioning is completed

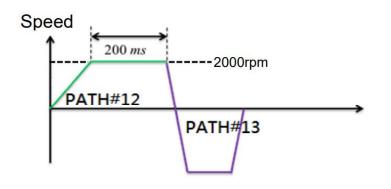

Overlapping command: In the sequential command, if positioning control is followed by positioning control, the previous positioning will control the overlapping of the next positioning control commands. Overlap is that the acceleration of next command overlaps the deceleration of previous command immediately, and this 2 positioning control can be smoothly transited.

PATH#12(AUTO positioning control, overlapping, incremental positioning path: 104857600 pulse, target speed: 500 rpm, ACC: 400 ms) \rightarrow PATH#13(Positioning control, incremental positioning path: 104857600 pulse, target speed: 700 rpm, delay time: 0 ms, DEC: 200 ms).

From the figure below, it can be observed that the two positioning commands can be transited very smoothly by the overlap function, and the speed jitter during program switching is reduced.

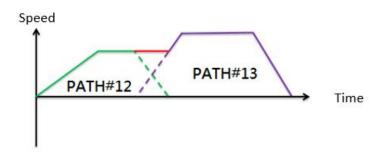


INS command: it can be set in any control type, and it is set in the next program. SDC PR contains internal INS and external INS.


Internal INS: which is a sequential command and its next program has set interrupts. The biggest difference from the sequential command is the definition of the delay time. The delay time of sequential commands is calculated from reaching the target position or target speed, but internal INS is calculated from the beginning of the previous program, as shown in the following example.

PATH#12(AUTO positioning control, incremental positioning path: 10485760 pulse, target speed: 600 rpm, delay time: 1500 ms, ACC: 200 ms, DEC: 200 ms) \rightarrow PATH#13(Positioning control, with INS command, incremental positioning path: -10485760 pulse, target speed: 600 rpm, delay time: 0 ms, ACC: 200 ms, DEC: 200 ms).

The execution result of this program is shown in the figure below, and it makes the entire control program to manage time easily with the internal interruption.

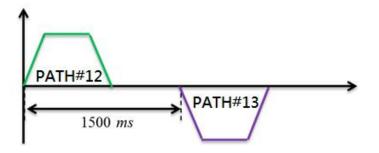


The delay time of internal INS should not be less than the completion time of the program, otherwise it will interrupt by the next program before the previous program is completed, as shown in the figure below:

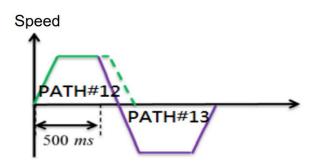


External INS: The biggest difference between internal and external INS is that the latter part is triggered by the program with INS. The former is planned by sequential commands, but the latter is executed by external triggers. In addition, the delay time setting in the previous program is invalid when the external interrupt occurs. As shown in below example:

PATH#12(AUTO positioning control, incremental positioning path: 10485760 pulse, target speed: 600 rpm, delay time: 1500 ms, ACC: 200 ms, DEC: 200 ms) \rightarrow PATH#13(Positioning control, with INS, incremental positioning path: -10485760 pulse, target speed: 600 rpm, delay time: 0 ms, ACC: 200 ms, DEC: 200 ms).

The above is a preset program control flow, if an external DI triggers PATH#07 during 400ms operation (positioning control, with INS, absolute positioning coordinate: 0 pulse, target speed: 3000 rpm, delay time: 0 ms, ACC: 200 ms, DEC: 200 ms), the execution result of the program is shown in below. Once the external INS occurs, the external INS program will replace the original sequential command and execute immediately, so the external interruption can be used for an emergency treatment.

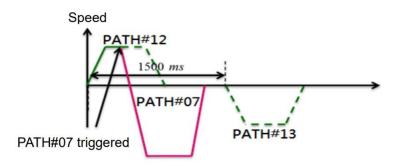

In addition, if a new program is externally triggered during a program is in progress and it is not set as interruption, you must wait for the complete of the executing program before starting the triggered program, as shown in the figure below

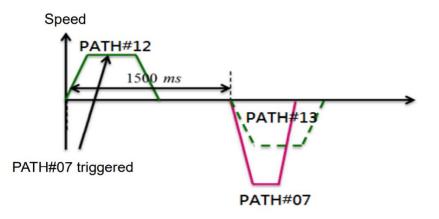

8. Parameter setting

8.1 Parameter definitions

From the perspective of safety and frequency of use, Shihlin drive parameters have below types: basic parameters, gain/filter parameters, expansion parameters, and input/output setting parameters. When you want to adjust parameter reading and writing permissions, you can modify the setting of PA42 to change the setting of expansion parameters.

The following are the precautions of parameter setting.

1. Parameter type classification

In section 8.2, parameters are classified into a parameter list according to its function for the users to use conveniently. For detailed parameter descriptions you can refer to section 8.3.

2. Special symbols for parameter codes

(
) the setting is vanished once power off.

(*) the setting is valid after restart the power, such as PA01.

(▲) the parameter cannot be changed when Servo ON, such as PA07. And there are 2 ways to switch off the servo.

- (1) Turn off the SON DI signal.
- (2) Change the SON signal setting to 0 in software terminal function by modifying PD16, but ensure to reset PD16 after completion of the modification.

Below is the group classification according to different functions.

Parameter group	Main content.
Basic parameter	When the servo drive is used for position control, you need to set
(No PA□□)	this parameter group.
Gain, filter parameter	When using manual tuning gain adjustment, you need to set this
(No PB□□)	parameter group.
Expansion setting	This is the main parameter group used when speed control and
parameter	torque control mode is used.
(No PC□□)	

Input /output setting	Used when the output/input signal of the servo drive is changed.
parameter	
(No PD□□)	
Pr path parameter 1	Related parameter group 1 for Pr position path planning.
(No PE□□)	
Pr path parameter 2	Related parameter group 2 for Pr position path planning.
(No PF□□)	

The description of control mode as follows.

	Mode name	Mode code	Description
Single mode	Position mode(external input)	Pt	Drive receives the external position pulse command which is input from terminal , then runs the motor to reach the target position.
node	Position mode(internal register input)	Pr	The drive receives the position command which is provided by the internal register (64 groups of registers), and runs the motor to the target position. The DI signal can be used to select the register number.
	Speed mode.	S	The drive receives the speed command and runs the motor to the target speed. The speed command can be selected by the DI signal(7 groups of register).
	Torque mode.	т	The drive receives torque command which is provided by three groups of internal torque commands and runs the motor to the target torque.
		Pt-S	Pt/S is switched mutually via the signal of DI.
		Pt-T	Pt/T is switched mutually via the signal of DI.
	Dual mode	Pr-S	Pr/S is switched mutually via the signal of DI.
		Pr-T	Pr/T is switched mutually via the signal of DI.
		S-T	S/T is switched mutually via the signal of DI.

8.2 List of Parameters

The parameters of Shihlin servo are mainly classified into five categories, they are PA parameter group ~ PF parameter group. PA parameters are basic parameters, such as control mode selection, automatic tuning, etc. The PB parameters are gain and filter parameters. Setting the PB parameters can make the servo motor to run in a more stable state. PC parameters are expansion parameters, which include parameters for speed mode, torque mode, and communication setting. PD parameters are input and output setting parameters, which are mainly used to set the parameters of DI and DO function. PE and PF parameters are Pr path planning related parameter. The following table will list all the parameters of Shihlin servo drive for users to query conveniently.

NO	Abbreviation	Name	Default	Unit	Control mode				
NO	Appreviation	Name	value	Unit	Pt	Pr	S	Т	
PA01(*)	STY	Control mode setting	1000h	N/A	0	0	0	0	
PA02(▲)	ATUM	AUTO tuning mode setting	0002h	N/A	0	0	0	0	
PA03	ATUL	Auto-tuning response level setting	10	N/A	0	0	0	0	
PA04	HMOV	Homing mode	0000h	N/A		0			
PA05	TL1	Internal torque limit 1	100	%	0	0	0	0	
PA06	CMX	Electronic gear numerator	1	N/A	0	0			
PA07(▲)	CDV	Electronic gear denominator	1	N/A	0	0			
PA08	HSPD1	Homing high speed option 1	100	rpm		0			
PA09	HSPD2	Homing high speed option 2	20	rpm		0			
PA10	RES1	Regenerated resistor value	Depend on	Ohm	0	0	0	0	
PA11	RES2	Regenerated resistor capacity	model	Watt	0	0	0	0	
PA12	INP	In-position range	1310	Pulse	0	0			
PA13(*)	PLSS	Command pulse option	0000h	N/A	0				

(1) Basic parameters

NO	Abbreviation	Name	Default	Unit	Cor	ntrol	mode	
NO	Appreviation	Name	value	Unit	Pt	Pr	S	Т
PA14(*)	ENR	Encoder output pulses	10000	Pulse/rev	0	0	0	0
PA15	CRSHA	Motor crash protect	250	%	0	0	0	0
		level(torque percentage)						
PA16	CRSHT	Motor crash protect level	500	ms	0	0	0	0
		(protection time)						
PA17	OVL	Output overload DO	120	%	0	0	0	0
		warning level						
PA18	OVS	Over speed warning level	6300	rpm	0	0	0	0
PA19	OVPE	Position deviation excess	3* 2 ¹⁷	pulse	0	0		
		output level						
PA20(*)	OVPL1	Position pulse frequency	4500	KHz	0			
		excess level 1						
PA21(*)		Reserved						
PA22(*)	DBF	Dynamic brake control	0	N/A	0	0	0	0
PA23(∎)	MCS	Memory write-inhibit	0	N/A	0	0	0	0
		function						
PA24		Reserved						
~PA27								
PA28(*)	ABS	Absolute encoder	0000h	N/A	0	0	0	0
		settings						
PA29(∎)	CAP	Absolute homing position	0000h	N/A	0	0	0	0
PA30(∎)	UAP	Update encoder absolute	0	N/A	0	0	0	0
		position						
PA31	APST	Absolute coordinate	0000h	N/A	0	0	0	0
		system status						
PA32	APR	Encoder absolute	0	pulse	0	0	0	0
		position (Single-turn						
		pulse number)						
PA33	APP	Encoder absolute	0	rev	0	0	0	0
		position (number of						
		revolutions)						
PA34(*)	ABSM	I/O communication of	0	N/A	0	0	0	0
		absolute system					<u> </u>	<u> </u>
PA35(*)	FNO1	Function option 1	0000h	N/A	0	0	0	0
PA36(*)	FNO2	Function option 2	0000h	N/A	0	0	0	0

NO	Abbrovistice	Nome	Default	Unit	Control		mode	
NO	Abbreviation	Name	value	Unit	Pt	Pr	S	Т
PA37(*)	FNO3	Function option 3	0000h	N/A	0	0	0	0
PA38	AOP3	One touch gain tuning function option	0000h	N/A	0	0	0	
PA39(*)	POL	Motor rotation direction option	0000h	N/A	0	0	0	0
PA40(▲)	SPW	Special parameter write option	0000h	N/A	0	0	0	0
PA41	POSPD	Max. speed setting of pulse output	6300	rpm	0	0	0	0
PA42(*)	BLK	Parameter write-inhibit	0000h	N/A	0	0	0	0
PA43(*)	ENB	Encoder type(read only)	N/A	N/A	0	0	0	0
PA44(*)	EGM	Electronic gear ratio option	0	N/A	0	0		
PA45(▲)	FBP	Position command pulse setting per turn	10000	Pulse	0	0		
PA46	ATST	One touch gain tuning option (factory setting, inhibit to use)	0000h	N/A	0	0	0	
PA47	TLP	Positive torque limit value	5000	0. 1%	0	0	0	0
PA48	TLN	Negative torque limit value	5000	0. 1%	0	0	0	0
PA49 ~PA50		Reserved						
PA44(*)	EGM	Electronic gear ratio option	0	N/A	0	0		
PA45(▲)	FBP	Position command pulse setting per turn	10000	Pulse	0	0		
PA46	ATST	One touch gain tuning option (factory setting, inhibit to use)	0000h	N/A	0	0	0	
PA47	TLP	Positive torque limit value	5000	0. 1%	0	0	0	0
PA48	TLN	Negative torque limit value	5000	0. 1%	0	0	0	0
PA49 ~PA50		Reserved						

(2) Gain, filter parameters

NO	Abbroviation	Nomo	Default	Unit	Со	ntrol	mo	de
NO	Abbreviation	Name	value	Unit	Pt	Pr	S	Т
PB01	NHF1	Frequency of	1000	Hz	0	0	0	0
		Machine resonance						
		suppression filter 1						
PB02	NHD1	Attenuation rate of	0	dB	0	0	0	0
		machine resonance						
		suppression filter 1						
PB03	NLP	Resonance	17	0. 1ms	0	0	0	0
		suppression low-pass						
		filter						
PB04	PST	Position command	3	ms	0	0		
		filter time constant						
PB05	FFC	Position feed-forward	0	0. 0001	0	0		
		gain						
PB06	GD1	Servo motor load	70	0. 1 time	0	0	0	
		inertia ratio						
PB07	PG1	Position loop gain	45	rad/s	0	0		
PB08	VG1	Speed loop gain	183	rad/s	0	0	0	
PB09	VIC	Speed integral gain	34	ms	0	0	0	
PB10	VFG	Speed feed-forward	0	%			0	
		gain						
PB11(*)	CDP	Gain switch option	0000h	N/A	0	0	0	
PB12	CDS	Gain switch condition	10	kpps/rpm/puls				
FDIZ	003	Gain Switch Condition	10	е	0	0	0	
PB13	CDT	Gain switch time	1	ms	0	0	0	
		constant		115				
PB14	GD2	Servo motor load	70	0. 1time	0	0	0	
		inertia ratio 2		0. Tume				
PB15	PG2	Position loop gain	100	%	0	0		
		change ratio		70				
PB16	VG2	Speed loop gain	100	07	0	0	0	
		change ratio		%				
PB17	VIC2	Speed integral gain	100	<u>0</u> ′	0	0	0	
		change ratio		%				

NO	Abbrovistion	Nome	Default	11	Со	Control mo		
NO	Abbreviation	Name	value	Unit	Pt	Pr	S	Т
PB18	SFLT	Speed command	0	ms			0	0
		low-pass filter smooth						
		time constant						
PB19	TQC	Torque command	0	ms				0
		filter time constant						
PB20	SJIT	Speed feedback filter	0	0. 1ms	0	0	0	0
		time constant						
PB21	NHF2	Frequency of	1000	Hz	0	0	0	0
		machine resonance						
		suppression filter 2						
PB22	NHD2	Attenuation of	0	dB	0	0	0	0
		machine resonance						
		suppression filter 2						
PB23(▲)	IGE	Current gain	0	N/A	0	0	0	0
		enhancement						
		function						
PB24	VDC	Speed differential	980	N/A	0	0	0	
		compensation						
PB25	NHF3	Frequency of	1000	Hz	0	0	0	0
		machine resonance						
		suppression filter 3						
PB26	NHD3	Attenuation of	0	dB	0	0	0	0
		machine resonance						
		suppression filter 3						
PB27	ANCF	Auto resonance	0	N/A	0	0	0	0
		suppression mode						
		setting						
PB28	ANCL	Auto resonance	50	%	0	0	0	0
		suppression detection						
		level						
PB29	AVSM	Auto low frequency	0	N/A	0	0		
		vibration suppression						
		mode						
PB30	VCL	Low-frequency	50	pulse	0	0		
		vibration detection						
		level setting						

NO	Abbrovietien	Nome	Default	11	Со	ntrol	ol mo	
NO	Abbreviation	Name	value	Unit	Pt	Pr	S	T
PB31	VSF1	Low frequency vibration suppression frequency setting 1	100	0. 1Hz	0	0		
PB32	VSG1	Low frequency vibration suppression gain 1	0	N/A	0	0		
PB33	VSF2	Low frequency vibration suppression frequency setting 2	100	0. 1Hz	0	0		
PB34	VSG2	Low frequency vibration suppression gain 2	0	N/A	0	0		
PB35	FRCL	Friction compensation level	0	%	0	0	0	
PB36	FRCT	Friction compensation smoothing time constant	0	ms	0	0	0	
PB37	FRCM	Friction compensation mode option	0	N/A	0	0	0	
PB38	FFCT	Position feed forward filter time constant	0	ms	0	0		
PB39 ~PB43		Reserved						
PB44	PPD	Position loop compensation gain	0	rad/s	0	0		
PB45	NHF4	Frequency of machine resonance suppression filter 4	1000	Hz	0	0	0	0
PB46	NHD4	Attenuation of machine resonance suppression filter 4	0	dB	0	0	0	0
PB47	NHF5	Frequency of machine resonance suppression filter 5	1000	Hz	0	0	0	0
PB48	NHD5	Attenuation of machine resonance	0	dB	0	0	0	0

		suppression filter 5						
PB49	DOB	External interference	0	N/A	0	0	0	0
		compensation gain						
PB50	MVF	Position command	0	ms	0	0		
		average filter time						
		constant						
PB51		Reserved for factory						
~PB26		test only.						
PB57(*)	TOF	z-axis torque	0	0. 1%	0	0	0	0
		compensation						

(3) Expansion parameters

NO	Abbreviation	Name	Default	Unit	Cor	trol	mo	de
NO	Appreviation	Name	value	Unit	Pt	Pr	S	Т
PC01	STA	Acceleration time constant	200	ms		0	0	0
PC02	STB	Deceleration time constant	200	ms		0	0	0
PC03	STC	S-curve	0	ms		0	0	0
		acceleration/deceleration time						
		constant						
PC04	JOG	JOG speed command	300	rpm	0	0	0	0
PC05	SC1	Internal speed command 1	100	rpm			0	0
PC06	SC2	Internal speed command 2	500	rpm			0	0
PC07	SC3	Internal speed command 3	1000	rpm			0	0
PC08	SC4	Internal speed command 4	200	rpm			0	0
PC09	SC5	Internal speed command 5	300	rpm			0	0
PC10	SC6	Internal speed command 6	500	rpm			0	0
PC11	SC7	Internal speed command7	800	rpm			0	0
PC16	MBR	Electromagnetic brake	100	ms	0	0	0	0
		sequence output time						
PC17	ZSP	Zero speed signal	50	rpm	0	0	0	0
		acknowledged range						
PC18(*)	COP1	Stop option and power	0010h	N/A	0	0	0	0
		interruption and restart option						
PC19(*)	COP2	Alarm record clear option	0000h	N/A	0	0	0	0
PC20(*)	SNO	Servo drive communication	1	N/A	0	0	0	0
		device number						

NO	Abbreviation	Name	Default	Unit	Со	ntrol	mo	de
NO	Appreviation	Name	value	Unit	Pt	Pr	S	Т
PC21(*)	CMS	Communication mode option	0	N/A	0	0	0	0
PC22(*)	BPS	Communication protocol option	0010h	N/A	0	0	0	0
PC23	SIC	Serial communication timeout option	0	S	0	0	0	0
PC24(*)	DMD	Drive status display option	0000h	N/A	0	0	0	0
PC25	TL2	Internal torque limit 2	100	%	0	0	0	0
PC26 ~ PC31		Reserved						
PC32	CMX2	Electronic gear numerator 2	1	N/A	0			
PC33	CMX3	Electronic gear numerator 3	1	N/A	0			
PC34	CMX4	Electronic gear numerator 4	1	N/A	0			
PC37(*)	DTA9	AL.09 initialization delay judgement time	0	ms	0	0	0	0
PC38	FNO4	Function option4	0000h	N/A	0	0	0	0
PC39	LPS	Low-pass filter setting option	0000h	N/A	0	0	0	0
PC40	MBR1	Electromagnetic brake enable delay time	0	ms	0	0	0	0
PC41	MP1A	Object parameter PC57 mapping	0000h	N/A	0	0	0	0
PC42	MP2A	Object parameter PC58 mapping	0000h	N/A	0	0	0	0
PC43	MP3A	Object parameter PC59 mapping	0000h	N/A	0	0	0	0
PC44	MP4A	Object parameter PC60 mapping	0000h	N/A	0	0	0	0
PC45	MP5A	Object parameter PC61 mapping	0000h	N/A	0	0	0	0
PC46	MP6A	Object parameter PC62 mapping	0000h	N/A	0	0	0	0
PC47	MP7A	Object parameter PC63 mapping	0000h	N/A	0	0	0	0
PC48	MP8A	Object parameter PC64 mapping	0000h	N/A	0	0	0	0
PC49	MS1A	Object status display 1 mapping	0000h	N/A	0	0	0	0
PC50	MS2A	Object status display 2 mapping	0000h	N/A	0	0	0	0

NO	Abbroviction	Nomo	Default	11	Cor	ntrol	mo	de
NO	Abbreviation	Name	value	Unit	Pt	Pr	S	Т
PC51	MS3A	Object status display 3 mapping	0000h	N/A	0	0	0	0
PC52	MS4A	Object status display 4 mapping	0000h	N/A	0	0	0	0
PC53	MS5A	Object status display 5 mapping	0000h	N/A	0	0	0	0
PC54		Reserved						
~PC56								
PC57	MP1	Mapping parameter #1	0000h	N/A	0	0	0	0
PC58	MP2	Mapping parameter #2	0000h	N/A	0	0	0	0
PC59	MP3	Mapping parameter #3	0000h	N/A	0	0	0	0
PC60	MP4	Mapping parameter #4	0000h	N/A	0	0	0	0
PC61	MP5	Mapping parameter #5	0000h	N/A	0	0	0	0
PC62	MP6	Mapping parameter #6	0000h	N/A	0	0	0	0
PC63	MP7	Mapping parameter #7	0000h	N/A	0	0	0	0
PC64	MP8	Mapping parameter #8	0000h	N/A	0	0	0	0
PC65	MS1	The content value of mapping	0	N/A	0	0	0	0
		status 1						
PC66	MS2	The content value of mapping	0	N/A	0	0	0	0
		status 2						
PC67	MS3	The content value of mapping	0	N/A	0	0	0	0
		status 3						
PC68	MS4	The content value of mapping	0	N/A	0	0	0	0
		status 4						
PC69	MS5	The content value of mapping	0	N/A	0	0	0	0
		status 5						
PC70		Reserved						
~PC72								
PC73	TQ1	Internal torque command 1	100	%				0
PC74	TQ2	Internal torque command 2	100	%				0
PC75	TQ3	Internal torque command 3	100	%				0

(4) Input/output setting parameters

NO	Abbroviction	Nama	Default	11	Cor	ntrol	mo	de
NO	Abbreviation	Name	value	Unit	Pt	Pr	S	Т
PD01(*)	DIA1	Input signal automatic ON	0000h	N/A	0	0	0	0
		option 1						
PD02(*)	DI1	Input signal option 1	0001h	N/A	0	0	0	0
PD03(*)	DI2	Input signal option 2	000Dh	N/A	0	0	0	0
PD04(*)	DI3	Input signal option 3	0003h	N/A	0	0	0	0
PD05(*)	DI4	Input signal option 4	0004h	N/A	0	0	0	0
PD06(*)	DI5	Input signal option 5	0002h	N/A	0	0	0	0
PD07(*)	DI6	Input signal option 6	000Fh	N/A	0	0	0	0
PD08(*)	DI7	Input signal option 7	0012h	N/A	0	0	0	0
PD09(*)	DI8	Input signal option 8	0019h	N/A	0	0	0	0
PD10(*)	DO1	Output signal option 1	0003h	N/A	0	0	0	0
PD11(*)	DO2	Output signal option 2	0008h	N/A	0	0	0	0
PD12(*)	DO3	Output signal option 3	0002h	N/A	0	0	0	0
PD13(*)	DO4	Output signal option 4	0005h	N/A	0	0	0	0
PD14(*)	DO5	Output signal option 5	0001h	N/A	0	0	0	0
PD15(*)	DIF	Digital input filter setting	2	N/A	0	0	0	0
PD16(∎)	IOS	Digital input control source	0000h	N/A	0	0	0	0
		option						
PD17(*)	DOP1	LSP, LSN stop mode option	0000h	N/A	0	0	0	
PD18(*)	DOP2	CR signal clear setting	0000h	N/A	0	0		
PD19(*)	DOP3	Alarm code output option	0000h	N/A	0	0	0	0
PD20(*)	DOP4	Operation option when the	0000h	N/A	0	0	0	0
		alarm reset signal is						
		short-circuited						
PD21(*)	DI9	Input signal option 9	0018h	N/A	0	0	0	0
PD22		Reserved						
~ PD24								
PD25(∎)	ITST	Communication control digital	0000h	N/A	0	0	0	0
		input status						
PD26(*)		Reserved						
PD27(*)	DOD	Definition of output signal	0004h	N/A	0	0	0	0
		contact						
PD28	МСОК	Operation option of DO:	0000h	N/A		0		
		MC_OK						

NO	NO Abbreviation Name	Default	Unit	Con	trol	mo	de	
NO	Appreviation	Name	value	Unit	Pt	Pr	S	Т
PD29	DID	Software DI A/B contact setting	0000h	N/A	0	0	0	0
PD30		Reserved						
PD31		Reserved						
PD32(*)	SDLY	Servo ON delay time	0	N/A	0	0	0	0
PD33	SFDO	Software DO register	0000h	N/A	0	0	0	0

(5) PR position path programming parameters 1

	Abbroviction	Nama	Defeultivelue	11	Со	ntrol	mo	de
NO	Abbreviation	Name	Default value	Unit	Pt	Pr	S	Т
PE01	ODEF	Definition of homing	00000000h	N/A		0		
PE02	ODAT	Origin offset value definition	0	N/A		0		
PE03	PDEF1	PATH#1 definition	00000000h	N/A		0		
PE04	PDAT1	PATH#1 data	0	N/A		0		
PE05	PDEF2	PATH#2 definition	00000000h	N/A		0		
PE06	PDAT2	PATH#2 data	0	N/A		0		
PE07	PDEF3	PATH#3 definition	00000000h	N/A		0		
PE08	PDAT3	PATH#3 data	0	N/A		0		
PE09	PDEF4	PATH#4 definition	00000000h	N/A		0		
PE10	PDAT4	PATH#4 data	0	N/A		0		
PE11	PDEF5	PATH#5 definition	00000000h	N/A		0		
PE12	PDAT5	PATH#5 data	0	N/A		0		
PE13	PDEF6	PATH#6 definition	00000000h	N/A		0		
PE14	PDAT6	PATH#6 data	0	N/A		0		
PE15	PDEF7	PATH#7 definition	00000000h	N/A		0		
PE16	PDAT7	PATH#7 data	0	N/A		0		
PE17	PDEF8	PATH#8 definition	00000000h	N/A		0		
PE18	PDAT8	PATH#8 data	0	N/A		0		
PE19	PDEF9	PATH#9 definition	00000000h	N/A		0		
PE20	PDAT9	PATH#9 data	0	N/A		0		
PE21	PDEF10	PATH#10 definition	00000000h	N/A		0		
PE22	PDAT10	PATH#10 data	0	N/A		0		
PE23	PDEF11	PATH#11 definition	00000000h	N/A		0		
PE24	PDAT11	PATH#11 data	0	N/A		0		
PE25	PDEF12	PATH#12 definition	00000000h	N/A		0		

PE26	PDAT12	PATH#12 data	0	N/A		0		
					Со	ntrol	mo	de
NO	Abbreviation	Name	Default value	Unit	Pt	Pr	S	Т
PE27	PDEF13	PATH#13 definition	00000000h	N/A		0		
PE28	PDAT13	PATH#13 data	0	N/A		0		
PE29	PDEF14	PATH#14 definition	00000000h	N/A		0		
PE30	PDAT14	PATH#14 data	0	N/A		0		
PE31	PDEF15	PATH#15 definition	00000000h	N/A		0		
PE32	PDAT15	PATH#15 data	0	N/A		0		
PE33	PDEF16	PATH#16 definition	00000000h	N/A		0		
PE34	PDAT16	PATH#16 data	0	N/A		0		
PE35	PDEF17	PATH#17 definition	00000000h	N/A		0		
PE36	PDAT17	PATH#17data	0	N/A		0		
PE37	PDEF18	PATH#18 definition	00000000h	N/A		0		
PE38	PDAT18	PATH#18 data	0	N/A		0		
PE39	PDEF19	PATH#19 definition	00000000h	N/A		0		
PE40	PDAT19	PATH#19 data	0	N/A		0		
PE41	PDEF20	PATH#20 definition	00000000h	N/A		0		
PE42	PDAT20	PATH#20 data	0	N/A		0		
PE43	PDEF21	PATH#21 definition	00000000h	N/A		0		
PE44	PDAT21	PATH#21 data	0	N/A		0		
PE45	PDEF22	PATH#22 definition	00000000h	N/A		0		
PE46	PDAT22	PATH#22 data	0	N/A		0		
PE47	PDEF23	PATH#23 definition	00000000h	N/A		0		
PE48	PDAT23	PATH#23 data	0	N/A		0		
PE49	PDEF24	PATH#24 definition	00000000h	N/A		0		
PE50	PDAT24	PATH#24 data	0	N/A		0		
PE51	PDEF25	PATH#25 definition	00000000h	N/A		0		
PE52	PDAT25	PATH#25 data	0	N/A		0		
PE53	PDEF26	PATH#26 definition	00000000h	N/A		0		
PE54	PDAT26	PATH#26 data	0	N/A		0		
PE55	PDEF27	PATH#27 definition	00000000h	N/A		0		
PE56	PDAT27	PATH#27 data	0	N/A		0		
PE57	PDEF28	PATH#28 definition	00000000h	N/A		0		
PE58	PDAT28	PATH#28 data	0	N/A		0		
PE59	PDEF29	PATH#29 definition	00000000h	N/A		0		
PE60	PDAT29	PATH#29 data	0	N/A		0		

PE61	PDEF30	PATH#30 definition	00000000h	N/A		0		
	A In In	Nama	Defeation	11	Co	ntrol	mo	de
NO	Abbreviation	Name	Default value	Unit	Pt	Pr	S	Т
PE62	PDAT30	PATH#30 data	0	N/A		0		
PE63	PDEF31	PATH#31 definition	00000000h	N/A		0		
PE64	PDAT31	PATH#31 data	0	N/A		0		
PE65	PDEF32	PATH#32 definition	0000000h	N/A		0		
PE66	PDAT32	PATH#32 data	0	N/A		0		
PE67	PDEF33	PATH#33 definition	00000000h	N/A		0		
PE68	PDAT33	PATH#33 data	0	N/A		0		
PE69	PDEF34	PATH#34 definition	00000000h	N/A		0		
PE70	PDAT34	PATH#34 data	0	N/A		0		
PE71	PDEF35	PATH#35 definition	00000000h	N/A		0		
PE72	PDAT35	PATH#35 data	0	N/A		0		
PE73	PDEF36	PATH#36 definition	00000000h	N/A		0		
PE74	PDAT36	PATH#36 data	0	N/A		0		
PE75	PDEF37	PATH#37definition	00000000h	N/A		0		
PE76	PDAT37	PATH#37 data	0	N/A		0		
PE77	PDEF38	PATH#38 definition	00000000h	N/A		0		
PE78	PDAT38	PATH#38 data	0	N/A		0		
PE79	PDEF39	PATH#39 definition	00000000h	N/A		0		
PE80	PDAT39	PATH#39 data	0	N/A		0		
PE81	PDEF40	PATH#40 definition	00000000h	N/A		0		
PE82	PDAT40	PATH#40 data	0	N/A		0		
PE83	PDEF41	PATH#41 definition	00000000h	N/A		0		
PE84	PDAT41	PATH#41 data	0	N/A		0		
PE85	PDEF42	PATH#42 definition	00000000h	N/A		0		
PE86	PDAT42	PATH#42 data	0	N/A		0		
PE87	PDEF43	PATH#43 definition	00000000h	N/A		0		
PE88	PDAT43	PATH#43 data	0	N/A		0		
PE89	PDEF44	PATH#44 definition	00000000h	N/A		0		
PE90	PDAT44	PATH#44 data	0	N/A		0		
PE91	PDEF45	PATH#45 definition	00000000h	N/A		0		
PE92	PDAT45	PATH#45 data	0	N/A		0		
PE93	PDEF46	PATH#46 definition	00000000h	N/A		0		
PE94	PDAT46	PATH#46 data	0	N/A		0		
PE95	PDEF47	PATH#47 definition	00000000h	N/A		0		

PE96	PDAT47	PATH#47 data	0	N/A		0		
NO	Abbreviation	Nomo	Default value	Unit	Control mod		de	
NO	Appreviation	Name	Delault value	Unit	Pt	Pr	S	Т
PE97	PDEF48	PATH#48 definition	00000000h	N/A		0		
PE98	PDAT48	PATH#48 data	0	N/A		0		
PE99		Reserved						

(6) PR position path programming parameters 2

		News	Default	11	Cor	ntrol	mod	le
NO	Abbreviation	Name	value	Unit	Pt	Pr	S	Т
PF01	PDEF49	PATH#49 definition	00000000h	N/A		0		
PF02	PDAT49	PATH#49 data	0	N/A		0		
PF03	PDEF50	PATH#50 definition	0000000h	N/A		0		
PF04	PDAT50	PATH#50 data	0	N/A		0		
PF05	PDEF51	PATH#51 definition	00000000h	N/A		0		
PF06	PDAT51	PATH#51 data	0	N/A		0		
PF07	PDEF52	PATH#52 definition	00000000h	N/A		0		
PF08	PDAT52	PATH#52 data	0	N/A		0		
PF09	PDEF53	PATH#53 definition	00000000h	N/A		0		
PF10	PDAT53	PATH#53 data	0	N/A		0		
PF11	PDEF54	PATH#54 definition	00000000h	N/A		0		
PF12	PDAT54	PATH#54 data	0	N/A		0		
PF13	PDEF55	PATH#55 definition	00000000h	N/A		0		
PF14	PDAT55	PATH#55 data	0	N/A		0		
PF15	PDEF56	PATH#56 definition	00000000h	N/A		0		
PF16	PDAT56	PATH#56 data	0	N/A		0		
PF17	PDEF57	PATH#57 definition	00000000h	N/A		0		
PF18	PDAT57	PATH#57 data	0	N/A		0		
PE19	PDEF58	PATH#58 definition	00000000h	N/A		0		
PF20	PDAT58	PATH#58 data	0	N/A		0		
PF21	PDEF59	PATH#59 definition	00000000h	N/A		0		
PF22	PDAT59	PATH#59 data	0	N/A		0		
PF23	PDEF60	PATH#60 definition	0000000h	N/A		0		
PF24	PDAT60	PATH#60 data	0	N/A		0		
PF25	PDEF61	PATH#61 definition	00000000h	N/A		0		
PF26	PDAT61	PATH#61 data	0	N/A		0		

NO	Abbreviation	Neme	Default	Unit	Сог	ntrol	mod	le
NÜ	Appreviation	Name	value	Unit	Pt	Pr	S	Т
PF27	PDEF62	PATH#61 definition	00000000h	N/A		0		
PF28	PDAT62	PATH#62 data	0	N/A		0		
PF29	PDEF63	PATH#63 definition	00000000h	N/A		0		
PF30	PDAT63	PATH#63 data	0	N/A		0		
PF31		Reserved						
PF32		Reserved						
PF33	POV1	Speed setting of internal position command 1	50	rpm		0		
PF34	POV2	Speed setting of internal position command 2	10	rpm		0		
PF35	POV3	Speed setting of internal position command 3	200	rpm		0		
PF36	POV4	Speed setting of internal position command 4	300	rpm		0		
PF37	POV5	Speed setting of internal position command 5	500	rpm		0		
PF38	POV6	Speed setting of internal position command 6	800	rpm		0		
PF39	POV7	Speed setting of internal position command 7	1000	rpm		0		
PF40	POV8	Speed setting of internal position command 8	1200	rpm		0		
PF41	POV9	Speed setting of internal position command 9	1500	rpm		0		
PF42	POV10	Speed setting of internal position command 10	1800	rpm		0		
PF43	POV11	Speed setting of internal position command 11	2000	rpm		0		
PF44	POV12	Speed setting of internal position command 12	2200	rpm		0		
PF45	POV13	Speed setting of internal position command 13	2400	rpm		0		
PF46	POV14	Speed setting of internal position command 14	2700	rpm		0		
PF47	POV15	Speed setting of internal position command 15	3000	rpm		0		

NO	Abbreviation	Name	Default	Unit	Со	ntrol	mo	de
NO	Appreviation	Name	value	Unit	Pt	Pr	S	Т
PF48	POV16	Speed setting of internal	3000	rpm		0		
		position command 16						
PF49	POA1	Acceleration/deceleration	200	ms		0		
		time of internal position						
		command 1						
PF50	POA2	Acceleration/deceleration	300	ms		0		
		time of internal position						
		command 2						
PF51	POA3	Acceleration/deceleration	500	ms		0		
		time of internal position						
DESO	DO 11	command 3	000					
PF52	POA4	Acceleration/deceleration	600	ms		0		
		time of internal position						
		command 4	000					
PF53	POA5	Acceleration/deceleration	800	ms		0		
		time of internal position command 5						
PF54	POA6	Acceleration/deceleration	900	ms		0		
1134		time of internal position	300	1115				
		command 6						
PF55	POA7	Acceleration/deceleration	1000	ms		0		
		time of internal position						
		command 7						
PF56	POA8	Acceleration/deceleration	1200	ms		0		
		time of internal position						
		command 8						
PF57	POA9	Acceleration/deceleration	1400	ms		0		
		time of internal position						
		command 9						
PF58	POA10	Acceleration/deceleration	1600	ms		0		
		time of internal position						
		command 10						
PF59	POA11	Acceleration/deceleration	2000	ms		0		
		time of internal position						
		command 11						

NO	Abbreviation	Name	Default	Unit	Со	ntrol	mo	de
NO	ADDIEVIATION	INAILIE	value	Omt	Pt	Pr	S	Т
PF60	POA12	Acceleration/deceleration time of internal position command 12	2500	ms		0		
PF61	POA13	Acceleration/deceleration time of internal position command 13	3000	ms		0		
PF62	POA14	Acceleration/deceleration time of internal position command 14	4000	ms		0		
PF63	POA15	Acceleration/deceleration time of internal position command 15	5000	ms		0		
PF64	POA16	Acceleration/deceleration time of internal position command 16	6000	ms		0		
PF65	DLY1	Delay time after position 1 reached	0	ms		0		
PF66	DLY2	Delay time after position 2 reached	100	ms		0		
PF67	DLY3	Delay time after position3 reached after position reached	200	ms		0		
PF68	DLY4	Delay time after position 4 reached	300	ms		0		
PF69	DLY5	Delay time after position 5 reached	500	ms		0		
PF70	DLY6	Delay time after position 6 reached	600	ms		0		
PF71	DLY7	Delay time after position 7 reached	800	ms		0		
PF73	DLY9	Delay time after position 9 reached	1200	ms		0		
PF74	DLY10	Delay time after position 10 reached	1500	ms		0		
PF75	DLY11	Delay time after position 11 reached	2000	ms		0		

NO	Abbreviation	Name	Default	Unit	Со	ntrol	mo	de
NO	Appreviation	Name	value	Unit	Pt	Pr	S	Т
PF76	DLY12	Delay time after position 12 reached	2300	ms		0		
PF77	DLY13	Delay time after position 13 reached	2500	ms		0		
PF78	DLY14	Delay time after position 1 reached	3000	ms		0		
PF79	DLY15	Delay time after position 14 reached	4000	ms		0		
PF80	DLY16	Delay time after position 15 reached	5000	ms		0		
PF81	PDEC	Deceleration time for auto-protection	00000000h	ms	0	0	0	0
PF82(∎)	PRCM	PR command trigger register	0	N/A		0		
PF83	EVON	PR number triggered by event rising edge	0000h	N/A		0		
PF84	EVOF	PR number triggered by event falling edge	0000h	N/A		0		
PF85(∎)	PMEM	PATH#1 to PATH#2 memory invalid	0000h	N/A	0	0	0	0
PF86	SWLP	Positive software limit	2 ³¹ -1	pulse	0	0		
PF87	SWLN	Negative software limit	-2 ³¹ +1	pulse	0	0		
PF88		Reserved						
PF89(*)	BLSF	Backlash compensation option	0	N/A	0	0		
PF90	BLSP	Backlash compensation setting(before E gears)	0	pulse	0	0		
PF91	BLST	Backlash compensation time constant setting	0	0.1m s	0	0		
PF92 ~ PF99		Reserved.						

To facilitate the user to operate the Shihlin servo with relevant parameters and set appropriate parameters in different modes, below listed the parameters by its categories.

	Tor	que control relevant para	meters					
Parameter	Abbreviation	Eurotion of noromotor	Default	Unit	Con	trol	mo	de
code	Appreviation	Function of parameter	value	Unit	Pt	Pr	S	Т
PA01(*)	STY	Control mode setting	1000h	N/A	0	0	0	0
PA05	TL1	Internal torque limit 1	100	%	0	0	0	0
PC05	SC1	Internal speed command 1	100	rpm			0	0
PC06	SC2	Internal speed command 2	500	rpm			0	0
PC07	SC3	Internal speed command 3	1000	rpm			0	0
PC08	SC4	Internal speed command 4	200	rpm			0	0
PC09	SC5	Internal speed command 5	300	rpm			0	0
PC10	SC6	Internal speed command 6	500	rpm			0	0
PC11	SC7	Internal speed command7	800	rpm			0	0
PC25	TL2	Internal torque limit 2	100	%	0	0	0	0
PC73	TQ1	Internal torque command 1	100	%				0
PC74	TQ2	Internal torque command 2	100	%				0
PC75	TQ3	Internal torque command 3	100	%				0
PA47	TLP	Positive torque limit value	5000	0.1%	0	0	0	0
PA48	TLN	Negative torque limit value	5000	0.1%	0	0	0	0

	:	Speed control relevant para	ameters					
Parameter	Abbreviation	Function of parameter	Default	Unit	Con	trol	mo	de
code	ADDIEVIATION	Function of parameter	value	Unit	Pt	Pr	S	Т
PA01(*)	STY	Control mode setting	1000h	N/A	0	0	0	0
PA05	TL1	Internal torque limit 1	100	%	0	0	0	0
PA14(*)	ENR	Encoder output pulses	10000	pulse/re	0	0	0	0
				V				
PB18	SFLT	Speed command low-pass	0	ms			0	0
		filter smooth time constant						
PC05	SC1	Internal speed command 1	100	rpm			0	0
PC06	SC2	Internal speed command 2	500	rpm			0	0
PC07	SC3	Internal speed command 3	1000	rpm			0	0
PC08	SC4	Internal speed command 4	200	rpm			0	0
PC09	SC5	Internal speed command 5	300	rpm			0	0
PC10	SC6	Internal speed command 6	500	rpm			0	0
PC11	SC7	Internal speed command7	800	rpm			0	0
PC25	TL2	Internal torque limit 2	100	%	0	0	0	0
PA47	TLP	Positive torque limit	5000	0.1%	0	0	0	0
PA48	TLN	Negative torque limit	5000	0.1%	0	0	0	0

	Р	osition control relevant par	ameters					
Parameter code	Abbreviation	Parameter function	Default value	Unit		on mo	de	1
		-			Γι		3	
PA01(*)	STY	Control mode setting	1000h	N/A	0	0	0	0
PA04	HMOV	Homing mode	0000h	N/A		0		
PA05	TL1	Internal torque limit 1	100	%	0	0	0	0
PA06	СМХ	Electronic gear numerator	1	N/A	0	0		
PA07 (▲)	CDV	Electronic gear denominator	1	N/A	0	0		
PA13 (*)	PLSS	Command pulse option	0000h	N/A	0			
PA14 (*)	ENR	Encoder output pulses	10000	Pulse/rev	0	0	0	0
PA39(*)	POL	Motor rotation direction option	0000h	N/A	0	0	0	0
PC25	TL2	Internal torque limit 2	100	%	0	0	0	0
PC32	CMX2	Electronic gear numerator 2	1	N/A	0			
PC33	СМХЗ	Electronic gear numerator 3	1	N/A	0			
PC34	CMX4	Electronic gear numerator 4	1	N/A	0			
PE01	ODEF	Definition of homing	00000000h	N/A		0		
PE02	ODAT	Origin offset value definition	0	N/A		0		
PE03~		Refer to section 8. 3 for PR						
PE98		related definition.			0	0		
PF01		Refer to section 8. 3 for PR						+
~PF87		related definition.			0	0		
PA47	TLP	Positive torque limit	5000	0.1%	0	0	0	0
PA48	TLN	Negative torque limit	5000	0.1%	0	0	0	0

Parameter	Abbreviation	Parameter function	Default value	Unit		oni mo		I
					Pt	Pr	S	Т
PF89(*)	BLSF	Backlash compensation option	0	N/A	0	0		
PF90	BLSP	Backlash compensation setting(before E gears)	0	pulse	0	0		
PF91	BLST	Backlash compensation time constant setting	0	0.1ms	0	0		

F	ilter smoothin	g and resonance suppression relev	vant para	meters	;			
Parameter code	Abbreviation	Parameter function	Default value	Unit		on mo		
coue			value		Pt	Pr	S	Т
PB01	NHF1	Frequency of Machine resonance suppression filter 1	1000	Hz	0	0	0	0
PB02	NHD1	Attenuation rate of machine resonance suppression filter 1	0	dB	0	0	0	0
PB03	NLP	Resonance suppression low-pass filter	17	0.1ms	0	0	0	0
PB04	PST	Position command filter time constant	3	ms	0	0		
PB19	TQC	Torque command filter time constant	0	ms				0
PB20	SJIT	Speed feedback filter time constant	0	0.1ms	0	0	0	0
PB21	NHF2	Frequency of machine resonance suppression filter 2	1000	Hz	0	0	0	0
PB22	NHD2	Attenuation of machine resonance suppression filter 2	0	dB	0	0	0	0
PB23(▲)	IGE	Current gain enhancement function	0	N/A	0	0	0	0
PB25	NHF3	Frequency of machine resonance suppression filter 3	1000	Hz	0	0	0	0
PB26	NHD3	Attenuation of machine resonance suppression filter 3	0	dB	0	0	0	0

Parameter			Default		С	on	tro	,
code	Abbreviation	Parameter function	value	Unit	I	mo	de	
coue			value		Pt	Pr	S	Т
PB27	ANCF	Auto resonance suppression mode setting	0	N/A	0	0	0	0
PB28	ANCL	Auto resonance suppression detection level	50	%	0	0	0	0
PB29	AVSM	Auto low frequency vibration suppression mode	0	N/A	0	0		
PB30	VCL	Low-frequency vibration detection level setting	50	pulse	0	0		
PB31	VSF1	Low frequency vibration suppression frequency setting 1	100	0.1Hz	0	0		
PB32	VSG1	Low frequency vibration suppression gain 1	0	N/A	0	0		
PB33	VSF2	Low frequency vibration suppression frequency setting 2	100	0.1Hz	0	0		
PB34	VSG2	Low frequency vibration suppression gain 2	0	N/A	0	0		
PB35	FRCL	Friction compensation level	0	%	0	0	0	
PB36	FRCT	Friction compensation smoothing time constant	0	ms	0	0	0	
PB37	FRCM	Friction compensation mode option	0	N/A	0	0	0	
PB38	FFCT	Position feed forward filter time constant	0	ms	0	0		
PC01	STA	Acceleration time constant	200	ms		0	0	0
PC02	STB	Deceleration time constant	200	ms		0	0	0
PC03	STC	S-curve acceleration/deceleration time constant	0	ms		0	0	0
PD17(*)	DOP1	LSP, LSN stop mode option	0000h	N/A	0	0	0	
PB45	NHF4	Frequency of machine resonance suppression filter 4	1000	Hz	0	0	0	0
PB46	· · ·		0	dB	0	0	0	0
PB47	47 NHF5 Frequency of machine resonar suppression filter 5		1000	Hz	0	0	0	0
PB48	NHD5	Attenuation of machine resonance suppression filter 5	0	dB	0	0	0	0

Parameter code	Abbreviation	Parameter function	Default value	Unit		oni no		
Code			value		Pt	Pr	S	Т
PB50	MVF	Position command average filter	0	ms	0	0		
		time constant						
PC39	LPS	Low-pass filter setting option	0000h	N/A	0	0	0	0

	Ga	ain and switch relevant paran	neters					
Parameter	Abbreviation	Parameter function	Default	Unit		cont mo		I
code	Appreviation	Parameter function	value	Unit	Pt	-	S	Т
PA02	ATUM	AUTO tuning mode setting	0002h	N/A	0	0	0	0
PA03	ATUL	Auto-tuning response level setting	e level 0010		0	0	0	0
PB05	FFC	Position feed-forward gain	0	0.001	0	0		
PB07	PG1	Position loop gain	45	rad/s	0	0		
PB08	VG1	Speed loop gain	183	rad/s	0	0	0	
PB09	VIC	Speed integral gain	34	ms	0	0	0	
PB10	VFG	Speed feed-forward gain	0	0.0001			0	
PB11(*)	CDP	Gain switch option	0000h	N/A	0	0	0	
PB12	CDS	Gain switch condition	10	Kpps / Pulse /	0	0	0	
				rpm				
PB13	CDT	Gain switch time constant	1	ms	0	0	0	
PB14	GD2	Servo motor load inertia ratio 2	70	0.1time	0	0	0	
PB15	PG2	Position loop gain change ratio	100	%	0	0		
PB16	VG2	Speed loop gain change ratio	100	%	0	0	0	
PB17	VIC2	Speed integral gain change ratio	100	%	0	0	0	
PB24	VDC	Speed differential compensation	980	N/A	0	0	0	
PB44	PPD	Position loop compensation gain	0	rad/s	0	0		
PB49	DOB	External interference compensation gain	0	N/A	0	0	0	0

		Digital I/O relevant parameters						
Parameter	Abbreviation	Parameter function	Default	Unit		on mo		
code			value		Pt	Pr	S	Т
PA12	INP	In-position range	1310	pulse	0	0		
PC17	ZSP	Zero speed signal acknowledged range	50	rpm	0	0	0	0
PC16	MBR	Electromagnetic brake sequence output time	100	ms	0	0	0	0
PD01(*)	DIA1	Input signal automatic ON option 1	0000h	N/A	0	0	0	0
PD02(*)	DI1	Input signal option 1(pin CN1-14)	0001h	N/A	0	0	0	0
PD03(*)	DI2	Input signal option 2(pin CN1-15)	000Dh	N/A	0	0	0	0
PD04(*)	DI3	Input signal option 3(pin CN1-16)	0003h	N/A	0	0	0	0
PD05(*)	DI4	Input signal option 4(pin CN1-17)	0004h	N/A	0	0	0	0
PD06(*)	DI5	Input signal option 5(pin CN1-18)	0002h	N/A	0	0	0	0
PD07(*)	DI6	Input signal option 6(pin CN1-19)	000Fh	N/A	0	0	0	0
PD08(*)	DI7	Input signal option 7(pin CN1-20)	0012h	N/A	0	0	0	0
PD09(*)	DI8	Input signal option 8(pin CN1-21)	0019h	N/A	0	0	0	0
PD10(*)	DO1	Output signal option 1(pin CN1-41)	0003h	N/A	0	0	0	0
PD11(*)	DO2	Output signal option 2(pin CN1-42)	0008h	N/A	0	0	0	0
PD12(*)	DO3	Output signal option 3(pin CN1-43)	0002h	N/A	0	0	0	0
PD13(*)	DO4	Output signal option 4(pin CN1-44)	0005h	N/A	0	0	0	0
PD14(*)	DO5	Output signal option 5(pin CN1-45)	0001h	N/A	0	0	0	0
PD15(*)	DIF	Digital input filter setting	2	N/A	0	0	0	0
PD16(*)	IOS	Digital input control source option	0000h	N/A	0	0		
PD17(*)	DOP1	LSP, LSN stop mode option	0000h	N/A	0	0	0	
PD18(*)	DOP2	CR signal clear setting	0000h	N/A	0	0		
PD19(*)	DOP3	Alarm code output option	0000h	N/A	0	0	0	0
PD20(*)	DOP4	Operation option when the alarm	0000h		0	0	0	0
		reset signal is short-circuited		N/A				
PD21(*)	DI9	Input signal option 9	0018h	N/A	0	0	0	0
PD25(∎)	ITST	Communication control digital input status	0000h	N/A	0	0	0	0
PD27(*)	DOD	Definition of output signal contact	0004h	N/A	0	0	0	0
PD29	DID	Software DI A/B contact setting	0000h	N/A	0	0	0	0
PD33	SFDO	Software DO register	0000h	N/A	0	0	0	0

	Co	ommunication relevant parameter	ers					
Parameter	Abbreviation	Parameter function	Default	Unit	-	cont mo		I
code			value		Pt	Pr	S	Т
PC20(*)	SNO	Servo drive communication device number	1	N/A	0	0	0	0
PC21(*)	CMS	Communication mode option	0	N/A	0	0	0	0
PC22(*)	BPS	Communication protocol option	0010h	N/A	0	0	0	0
PC23	SIC	Serial communication timeout option	0	s	0	0	0	0
PA23(∎)	MCS	Memory write-inhibit function	0	N/A	0	0	0	0
PC41		Communication mapping						
~PC60		relevant parameters						

		Other parameters						
Parameter	Abbreviation	Parameter function	Default	Unit		on mo		
code			value		Pt	Pr	S	Т
PA40(▲)	SPW	Special parameter write option	0000h	N/A	0	0	0	0
PA42(*)	BLK	Parameter write-inhibit	0000h	N/A	0	0	0	0
PB06	GD1	Servo motor Load inertia ratio	70	0.1time	0	0	0	
PB14	GD2	Servo motor load inertia ratio 2	70	0. time	0	0	0	
PC18(*)	COP1	Stop option and power interruption and restart option	0010h	N/A	0	0	0	0
PC19(*)	COP2	Alarm record clear option	0000h	N/A	0	0	0	0
PD20(*)	DOP4	Operation option when the alarm reset signal is short-circuited	0000h	N/A	0	0	0	0

8.3 Parameter group introduction

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PA01	STY	Control mode setting	All	1000h	0000h	N/A
	(*)	u z y x			~	
					1115h	
		x:Control mode select				
		x=0:position mode				
		x=1:position and speed dual mode				
		x=2:speed mode				
		x=3:speed and torque dual mode				
		x=4:torque mode				
		x=5:torque and position dual mode				
		y: Position control command input options				
		y=0: external pulse input				
		y=1: Internal register input				
		z: Electromagnetic brake function enable option				
		This function is a digital output function, it can be				
		defined by PD10~PD14. It's valid only when				
		using on a servo with electromagnetic brake.				
		z=0:without electromagnetic brake function				
		z=1:enable electromagnetic brake function				
		u:DI,DO setting value control				
		u=0: the value of DI, DO(PD02 ~ PD14, PD21)				
		are fixed during mode switching,and DI, DO can				
		be defined by user.				
		u=1: The value of DI, DO(PD02 ~ PD14, PD21				
		are varied with different control modes during				
		mode switching,and DI, DO cannot be defined by				
		the user.				

PA02 ATUM Auto tuning mode setting:	All	0002h	0000h	N/A
$(\blacktriangle) \boxed{0 0 x}$	/ 11		~	
			0005h	
			000511	
x: Auto gain tuning mode setting				
x=0~1:manual gain tuning mode(PI control)				
x=2:Auto gain tuning mode 1(keep tuning load inertia ratio and bandwidth)				
x=3:Auto gain tuning mode 2(fixed load inertia ratio, tuning bandwidth)				
x=4:Interpolation mode (fixed position loop gain(PB07), and auto tuning the remaining gain)				
x=5:Interpolation mode 2(fixed PB06 and PB07, and auto tuning the remaining gain)				

No	Abbr.		Param	eter fu	Inctio	n and descrip	tior	ו	mode	Defau	ılt	Range	Unit
PA03	ATUL	Aut	o tuning r	espon	se lev	el setting			All	10		1~32	N/A
		Aut	o tuning r	node r	espor	se setting							
			Respo nse setting	Resp e	oons	Speed loop response frequency		Respo nse setting	Resp e	ons	lo re	peed op esponse equency	
			1	-		10. 0 Hz		17				67.1	_
			3) W	11. 3 Hz 12. 7 Hz		18 19	Mid			75. 6 85. 2	-
			4	1	onse	14. 3 Hz		20	- resp	onse		95. 9	
			5		t	16. 1 Hz		21				108. 0	
			6			18. 1 Hz		22				121. 7	
			7			20. 4 Hz		23				137. 1	
			8			23. 0 Hz		24				154. 4	
			9			25. 9 Hz		25				173. 9	
			10			29. 2 Hz		26				195. 9	
			11		•	32. 9 Hz		27		,		220. 6	
			12			37. 0 Hz		28	_ Hi	gh		248. 5	
			13		ldle onse	41. 7 Hz		29	resp	onse		279. 9	
			14			47. 0 Hz		30				315. 3	
			15			52. 9 Hz		31				355. 1	
			16			59. 6 Hz		32				400. 0	

PA04 HMOV	Homing I	mo	de			Pr	0000h	0000h	N/A
	0 z	у	x					\sim	
	z			у	x			0128h	
	Limit setti	ng	Z si	gnal setting	Homing methods				
	0~1			0~2	0~8				
			y = C): return to	x = 0: homing in forward				
			last 2	Z pulse	direction and define				
			y = 1	: go forward	LSP as homing origin				
			to ne	ext Z pulse	x = 1: homing in reverse				
			y = 2	: do not look	direction and define				
			for Z	pulse	LSN as homing origin				
	When				x = 2: homing in forward				
	reaching t	he			direction				
	limits: Z =	0:			ORGP: OFF → ON as				
	show erro	r,			homing origin				
	Z = 1:				x = 3: homing in reverse				
	reverse				direction, ORGP:				
	direction				OFF → ON as homing				
					origin				
					x = 4: look for Z pulse in				
					forward direction and				
					define it as homing				
					origin				
					x = 5: look for Z pulse in				
					reverse direction and				
					define it as homing				
					origin				
			y = C): return to	x = 6: homing in forward				
			last 2	Z pulse	direction, ORGP:				
			y = 1	: go forward	ON → OFF as homing				
			to ne	ext Z pulse	origin				
			y = 2	: do not look	x = 7: homing in reverse				
			for Z	pulse	direction, ORGP:				
					ON → OFF as homing				
					origin				
					x = 8: define current				
					position as the origin				

PA05	TL1	Internal torqu	e limit value 1	All	100	0	%
		The paramete the servo mot value is in per follows: <u>Torque limit v</u> <u>value</u>	er can limit the torque generated by for. The unit of parameter setting rcentage (%). The calculation is as ralue=maximum torque*the setting			~ 100	
		TL1-SG	Torque limit				
		Open	PA05				
		Short	If PC25 <pa05, limit="PC25</td" the="" torque=""><td></td><td></td><td></td><td></td></pa05,>				
			If PC25>PA05,the torque limit=PA05.				
No	Abbr.	Paramo	eter function and description	mode	Default	Range	Unit
PA06	CMX	Electronic gea	ar numerator	Pr. Pt	1	1	N/A
		Note: when S cannot be set	V is ON in Pr mode, this parameter			~ 2 ²⁶	
PA07	CDV	Electronic gea	ar denominator	Pr. Pt	1	1	N/A
	(▲)		setting will cause unexpected fast ire to do the setting when SERVO is			~ 2 ²⁶	
		Command pu	lse input ratio setting				
		command pulse inp	ut CMX position command CDV $f2=f1 \cdot \frac{CMX}{CDV}$				
		Note: limitatio	n: 1/50 < (CMX/CDV) < 64000				

PA08	HSPD	Homing high speed option 1	P	'n	100	1	rpm
	1	Z pulse				~ 2000	
		Llewing high encodention Q)	20	4	
PAU9	н SPD 2	Homing high speed option 2	F	Pr	20	1	rpm
						~	
						500	
No	Abbr.	Parameter function and desc	ription mo	de	Default	Range	Unit
PA10	RES1	Regenerative resistor value	Δ	AII -	Note *	10	Oh
		Model Defa	ault value			~	m
		below 500W 1009	Ω			750	
		750W~1KW 40Ω					
		1. 5KW~3KW 13Ω					
PA11	RES2	Capacity of regenerative resistor.	Α	AII -	Note *	0	Watt
		Model Defa	ault value			~	
		below 500W. 20W	1			3000	
		750W~1KW 40W	/				
		1. 5KW~3KW 100	N				
		Refer to section 14. 2 for external re capacity.	esistor				
PA12	INP	In-position range:In the position cor	ntrol mode, Pt.	Pr	1310	0	puls
		when the deviation between the pos			or	~	е
		command and the actual motor pos than the set value of INP, the INP s			41943	2 ²²	
		will output. The default value for 17 1310	-		•	_	

No	Abbr.		Parame	ter function and	description	mode	Default	Range	Uni
PA13	PLSS	Pulse	e commar	nd option		Pt	0000h	0000h	N/A
	(*)	Sele	ct the type	e of external inp	ut nulse train			~	
		0) z y :	×			0312h		
		x: Inp	ut pulse tra	ain format select					
				se rotation pulse tra	ain				
			ulse train+s						
		x=2: A	B phase pu	ilse train.					
		<u>y: Inp</u>	ut pulse tra						
		y=0:po	ositive logic	,y=1:negative logic					
		pul	se logic and form	Forward	Reverse	1			
			A/B phase pulse						
		<u>0</u>	train						
		Negative logic	Pulse train + sign	PP					
		Z	Forward/reverse rotation pulse train						
			A/B phase pulse train						
		ositive logic	Pulse train + sign			-			
		Posi	Forward/reverse	PP	L	-			
			rotation pulse train	NP					
		T b -	44 ¹ 6	in motion filters					
				input pulse filter.	_				
				ency is between 200					
			•	n input pulse freque					
				ency is below 200kp					
			•	n input pulse freque	. ,				
				ency is between 500					
		z=3:th	e maximum	n input pulse freque	ncy is 4Mpps.				
				ency is between 2M				1	

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PA14	ENR	Encoder output pulses	All	10000	4	Puls
	(*)	Set the pulse number of the drive output encoder (A phase, B phase). The number of output pulses is varied according to PA39 encoder pulse output setting.			~ 2 ²²	e/ rev
		Put the setting value 4 times greater than the frequency output of phase A and phase B. In fact, the single-phase output pulse of phase A and phase B is 1/4 of the set value. The highest output frequency is 20MHZ (after 4 times the frequency), and it should not exceed this limit.				
		When doing the output pulse setting, its wave number is as follows: PA39 is set to □0□□(default value), and the setting value is the number of pulses output in one revolution.				
		For example: Assuming that PA39 is set to 0000h and PA14 is set to 1024, the number of pulses output in one revolution is 1024 (pulse/rev)				
		For output division ratio setting, the output pulse is as follows: Use the number of output pulses in one revolution divided by the set value of PA14				
		Number of pulse per revolution Output pulses = PA14 setting value				
		For example:				
		If PA39 is set to 0100h and PA14 is set to 512, the output pulse number per revolution is 2 ¹⁷ / 16= 8192 <u>(pulse/rev)</u>				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PA15	CRSHA	Motor crash protect level(torque percentage) To set protection level(for the rated torque percentage, 0=turn off , the other setting value	All	250	0~300	%
		will enable the function.)				
PA16	CRSHT	Motor crash protect level (protection time) To set protection time. When the setting level is reached and the setting protection time has taken, the AL.20 will occur.	All	500	0 ~ 1000	ms
PA17	OVL	Output overload DO warning level	All	120	0	%
		When the setting value is 0 - 100 and the servo motor continuously output reaches this level, the warning signal is activated.			~ 120	
		PS: If the setting value is over 100, this function is disabled.				
PA18	OVS	Over speed protection level	All	6300	1	rpm
		When the feedback speed exceeds this value, AL.06 will occur.			~ 6500	
PA19	OVPE	Position deviation excess output level	Pr. Pt	3*2 ¹⁷	1	puls
		when the position deviation exceeds this set		or		е
		value, AL.08 will occur. The default value for 17bit encoder is 3*2 ¹⁷		3*222	2 ³¹ -1	
PA20	OVPL1	Position pulse frequency excess level 1	Pt	4500	100	KHz
		When input position pulse frequency exceeds this set value, AL.07 will occur.			~ 5000	
PA22	DBF	Dynamic brake control function	All	0	0~1	N/A
		The setting of Dynamic brake when alarm occurs. 0 : dynamic brake is enabled and motor stops immediately. 1 : dynamic brake is disabled and motor free run.				
		1 : dynamic brake is disabled and motor free run to stop.				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PA23	MCS	Memory write-inhibit function	All	0	0~2	N/A
	(∎)	PA23 = 0 (all parameters can be written to EEPROM, including PA23)				
		PA23 = 1 (all parameters will not be written to EEPROM, note: this parameter will be automatically set to 0 after power off and restart)				
		PA23 = 2 (All parameters will not be written to EEPROM, but PA23 can be written to EEPROM. Note: After the parameter is powered off and restarted, the parameter remains at 2) Cautions:				
		 When using communication control to write parameters, please set PA23=2 to prevent the EEPROM life from being reduced due to continuous writing of communication. 				
PA24		Reserved				
~						
PA27						
PA28	ABS	Absolute encoder setting.	All	0000h	0000h	N/A
	(*)	 0: incremental encoder, and the absolute motor can be operated as an incremental motor. 1: absolute encoder(only applicable to absolute 			~ 0001h	
		motors, if incremental motors are used, AL.24 will occur)				
PA29	(∎)	Absolute homing position This parameter set to 1 to clear the current absolute position of the encoder. The clearing function is the same as using ABSC to clear the coordinate.	All	0000h	0000h ~ 0001h	N/A

PA30	UAP	Update encoder absolute position	All	0	0	N/A
	(∎)	When PA30=1, update the data to PA31~PA33,			~	
		and the position error is not cleared.			2	
		When PA30=2, update the data to PA31~PA33				
		and clear the position error, When this command				
		is enabled, the motor's current position is set as				
		the target position.				
PA31	APST	Absolute coordinate system status (Read only)	All	0	0000h	N/A
		Bit0: 1 means the absolute position is lost, 0 means			~	
		normal.			001Fh	
		Bit1: 1 means low battery voltage, 0 means normal.			001111	
		Bit2: 1 means the absolute number of revolution is				
		overflowing, 0 means normal				
		Bit3: Reserved (0)				
		Bit4: 1 means the absolute coordinate has not been set. 0				
		means normal.				
		Bit5 ~ Bit15: Reserved (0)				
PA32	APR	Encoder absolute position (pulse number per	All	0	Pulse	pulse
		revolution) (read only)			number	
		The parameter displays the feedback pulse			per	
		number of the absolute encoder position, and it is			revolution	
		valid in absolute system(PA28=1).				
PA33	APP	Encoder absolute position (number of revolution)	All	0	32767	Rev
		(read only)				
		The parameter displays the number of revolution			~	
		in absolute encoder system, and it is valid in			-32768	
		absolute system(PA28=1)				
PA34	ABSM	I/O communication of absolute system	All	0	0	N/A
					~	
	(*)	When PA34=0, it indicates current using Delta absolute IO communication function				
					1	
		When PA34=1, it indicates current using				
		Mitsubishi absolute IO communication function.				

No Ab	br Parameter function and description	mode	Default	Range	Unit
PA35 FN	br Parameter function and description O1 Function option 1 i i i j x: Set torque and motor rotary direction i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i i	AII d, r tor	Default 0000h		

PA36	FNO2	Function option 2(reserved for factory test only)		0000h	0000h	
PA37	() FNO3 (*)	Function option 3(reserved for factory test only)	All	0000h	~ FFFFh	N/A

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PA38	AOP3	One-touch tuning function option.	Pr. Pt	0000h	0000h	N/A
			S		~	
		0 z y x			0111h	
		x:Auto gain tuning function				
		x=0:Disable auto gain tuning function.				
		x=1:Enable auto gain tuning function.				
		y:Automatic high-frequency resonance suppression				
		function				
		y=0:Disable automatic high-frequency resonance				
		suppression				
		y=1:Enable automatic high-frequency resonance				
		suppression				
		z:Auto low-frequency swing arm suppression function				
		z=0:Disable auto low-frequency swing arm suppression				
		function				
		z=1:Enable auto low-frequency swing arm suppression				
		function				
		Note 1: x=1 is necessary condition to enable one touch				
		tuning function before you can choose high-frequency or				
		low-frequency suppression function				
		Note 2: When y=1 and one-touch tuning is complete, you				
		must set PB27 to 0.				
		Note 3: When z=1 and one-touch tuning is complete, you				
		must set PB29 to 0.				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PA39	POL (*)	Motor rotation direction option The relation among motor rotation direction ,input command pulse-train direction and encoder output pulse direction 0 z y x The input pulse command and motor rotation direction option Setti Rotation direction of servo motor ng Forward pulse Reverse pulse value train input train input 0 CCW CW 1 CW CCW y:The motor rotation direction and encoder outpu pulse option y motor CCW rotation motor CW rotation 0 Aphase Aphase 1 Aphase Bphase 1 Aphase Bphase	Pt All	0000h	0000h ~ 0111h	N/A
		<u>z: Encoder output pulse setting option</u> z=0: Output pulse setting z=1: Output division ratio setting This parameter is related with PA14.	All			

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PA40	SPW	Special parameter write option	All	0000h	0000h	N/A
		When the parameter is set to 0x0088, the factory default value will be restored after about 3 seconds, The servo can be operated only after restart the power.			~ 00FFh	
PA41		The maximum rotation speed setting of encoder The user sets the actual maximum speed which is achievable according to the application of the motor. If the speed exceed the setting, AL.30 occurs. When PA41 set to 0, it indicate this function is disabled.	All	6300	0 ~ 6500	rpm

No	Abbr.	Parameter function and description					mode	Default	Range	Unit		
PA42	BLK	Parame	eter wr	ite-inhil	oit settir	ng			All	0000h	0000h	N/A
	(*)	value	PA	PB	PC	PD	PE	PF			~	
			group	group	group	group	group	group			00FFh	
		0000 default		(rc		nd write	hla)					
		value		(16	adable a		Die)					
								unreada				
		0004		(ble and				
		0001		(reada	ble and v	writable)		not				
								writable				
		0002	(re	adable a	and writa	ble)		able and ritable				
	00	0003	(readal	ole and v	vritable)	unrea	adable ai writable					
		0004		ble and able)	unrea	adable ar	nd not w	ritable				
		0005	(reada ble and writabl e)	u	nreadab	le and no	ot writab	le				
		0006		A42 is r	eadable, and not	the othe		eadable				
		Note: th	ne para	ameter	which is	s unrea	dable a	and not				
		writable panel.	e, it me	ans the	e group	is hidd	en on t	he				
PA43	ENT(*)	Encode	er type/	This is	an inte	rnal rea	ad-onlv		All	0		
		parame										

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PA44	EGM	Electronic gear ratio option	Pr. Pt	0	0	N/A
	(*)	PA44 = 0:use E-gear ratio as default value(PA06/PA07).			~	
		PA44 = 1:E-gear ratio conversion is 1,(use position command pulse number setting per revolution (PA45)).			1	
		FBP is PA45 setting value and Pt is pulse number per revolution.				
PA45	FBP	Position command pulse setting per turn	Pr. Pt	10000	500	pulse
	(▲)	When PA44 = 1, this parameter can set the			~	
		position command pulse per revolution.			10 ⁶	
PA46	ATST	One-touch tuning operation(Reserved for factory	Pr. Pt	0000h	0000h	N/A
		test only)	s		~	
					FF21h	
PA47	TLP	Positive torque limit	All	5000	0	0.1%
		The parameter is to limit the torque generated			~	
		during forward rotation. The unit of setting value			32700	
		is 0. 1%. The calculation is as follows				
		Positive torque limit $=$ $\frac{motor max current}{motor rated current} * \frac{PA47}{30}$				

PA48	TLN	Negative torque limit	All	5000	0	0.1%
		The parameter is to limit the torque generated during reverse rotation. The unit of setting value is 0. 1%. The calculation is as follows Negative torque limit = $\frac{motor max current}{motor rated current} * \frac{PA48}{30}$			~ 32700	
PA51	MST	Motor stall over-temperature protection time	A 11	0	0	Cas
(*)	MOT	In the case of motor stalling, when the torque limit is reached and the effective load rate is greater than 20%, and the duration exceeds the time set by PA51, the AL.66 motor over-temperature alarm will be triggered.	All	0	0 ~ 2000	Sec
PA52 (*)	MSM	Motor stall over-temperature mode setting 0: When the motor is not blocked, the AL.66 protection counting time decreases according to the temperature rise curve. 1: When the motor is not blocked, the AL.66 protection counting time is reset to zero. Note: When PA52=1, please pay attention to the actual temperature rise of the motor to avoid burning.	All	0	0~1	N/A

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PB01	NHF1	Frequency of machine resonance suppression filter 1 This parameter is to set the frequency of machine resonance suppression filter 1. The schematic diagram is as follows:	All	1000	10 ~ 4000	Hz
		Gain(db) NHD Frequency(HZ)				
PB02	NHD1	Attenuation of machine resonance suppression filter 1 This parameter is to set attenuation rate of machine resonance suppression and it should use together with NHF1. 0:turn off the Notch filter function.	All	0	0 ~ 32	dB
PB03	NLP	Resonance suppression low-pass filter This parameter is to set the time constant of resonance suppression low-pass filter.	All	17	0 ~ 10000	0. 1ms
PB04	PST	Position command filter time constant This parameter is to set the time constant of position command. With an appropriate setting, the motor can run smoothly when the servo drive encounters a sudden change of position command.	Pt. Pr	3	0 ~ 20000	ms

		target potisiton 63% figure				
PB05	FFC	Position feed-forward gain If the system runs smoothly in position mode, increasing the feed forward gain value will reduce the position tracking errors. If the system has resonated in position mode,	Pt. Pr	0	0 ~ 200	%
PB06	GD1	decreasing the gain value will reduce mechanical vibration. Servo motor Load inertia ratio This parameter is to set ratio value of load inertia to servo motor inertia. When select auto gain tuning mode(PA02) to	All	70	0 ~ 1200	0.1 time
PB07	PG1	1 , PB06 will be set automatically . Position loop gain Increasing the position control gain can improve the traceability to position response and reduce the position errors. But too large setting value may cause vibration and noise. When auto gain tuning mode is used, the parameter will be automatically set.	Pt. Pr	45	4 ~ 1024	rad/s
PB08	VG1	Speed loop gain Increasing the speed control gain can improve the response speed, But too large setting value may cause vibration and noise. When auto gain tuning mode is used, the parameter will be automatically set.	Pt. Pr S	183	40 ~ 9000	rad/s

PB09	VIC	Speed integral gain	Pt Pr.	34	1~1000	ms
		this parameter is time constant of speed loop integral.	S			
PB10	VFG	Speed forward gain value	S	0	0	%
		If the system runs smoothly in speed control mode, increasing the gain value will reduce the speed tracking errors. If the system has resonance in speed control mode, decreasing the gain value will reduce the mechanism vibration.			~ 200	
PB11	CDP	Gain switch option	Pt. Pr	0000h	0000h	N/A
	(*)	0 0 x x=0:Disable gain switching function	S		~ 0008h	
		x=1:Switch when CDP is ON.				
		x=2:Position command frequency >= CDS setting				
		x=3:Position error pulse >= CDS setting.				
		x=4:Servo motor rotation speed >= CDS setting.				
		x=5:Switch when CDP is OFF.				
		x=6:Position command frequency <= CDS setting				
		x=7:Position error pulse <= CDS setting				
		x=8:Servo motor rotation speed <= CDS setting				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PB12	CDS	Gain switch condition	Pt. Pr	10	0	kpps
		The set value of the gain switching condition	S		~	pulse
		(kpps, pulse, rpm) is varied according to CDP setting, and the unit depends on the switching condition item.			4000000	rpm
PB13	CDT	Gain switch time constant	Pt. Pr	1	0	ms
		The switching time constant is used to smooth the gain conversion, and is used to set the time constant when the CDP and CDS conditions are switched.	S		~ 1000	
PB14	GD2	Servo motor Load inertia ratio 2	Pt. Pr	70	0	0. 1
		This parameter is to set load inertia ratio to motor	S		~	time
		inertia ratio,which is only valid during gain switching.			1200	
PB15	PG2	Position loop gain change ratio	Pt. Pr	100	10	%
		This parameter is to set position loop gain change			~	
		ratio,and it's valid after the auto gain tuning function is disabled.			500	
PB16	VG2	Speed loop gain change ratio	Pt. Pr.	100	10	%
		This parameter is to set speed loop gain change	S		~	
		ratio,and it's valid after the auto gain tuning function is disabled.			500	
				100	10	%
PB17	VICZ	Speed integral gain change ratio	Pt. Pr	100	10	70
		This parameter is to set Speed integral gain	S		~	
		change ratio,and it's only valid after the auto gain tuning function is disabled.			500	
PB18	SFLT	Speed command low-pass filter smooth time	S. T	0	0	ms
		constant			~	

		Increasing time constant will smooth the speed command curve, but it will reduce the response speed. O:this function is disabled.			1000	
		around 5 times SFLT.				
PB19	TQC	Torque command filter time constant This parameter is to set time constant of torque command filter. With an appropriate setting, the motor can run smoothly when the servo drive encounters a sudden change of torque command. Torque 63% 63% 63% 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000 1000	Т	0	0 ~ 5000	ms
PB20	SJIT	Speed feedback filter time constant This parameter is to set speed feedback filter time constant.	All	0	0 ~ 1000	0. 1ms

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PB21		Frequency of machine resonance suppression filter 2	All	1000	10 ~	Hz
		This parameter is to set the frequency of machine resonance suppression filter, and the usage is the same as PB01.			4000	
PB22		Attenuation of machine resonance suppression filter 2	All	0	0~	dB
		This parameter is to set the attenuation of machine resonance suppression filter and it should use together with NHF2. 0:turn off Notch filter function			32	
PB23	IGE	Current gain enhancement function	All	0	0	N/A
	(▲)	0: turn off			~	
		1: turn on(it can improve the current response, but may cause resonance.			1	
PB24	VDC	Speed differential compensation	Pr. Pt	980	0	N/A
		This parameter is to set speed differential compensation, it's valid when digital input proportional control signal is ON.	S		~ 1000	
PB25		Frequency of machine resonance suppression filter 3	All	1000	10 ~	Hz
		This parameter is to set the frequency of machine resonance suppression filter, its usage is the same as PB01.			4000	

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PB26		Attenuation of machine resonance suppression filter 2	All	0	0	dB
		This parameter is to set attenuation of machine resonance suppression filter and it should use together with NHF3. 0:turn off Notch filter function			32	
PB27	ANCF	Auto resonance suppression mode setting(Set for resonance suppression filter 1 and 2)	All	0	0~	N/A
		0:Fixed. 1: Automatically fixed after vibration suppression			2	
PB28	ANCL	2:keep auto vibration suppression. Auto resonance suppression detection level The larger the setting is, the lower resonance sensitivity will be. On the other hand, The smaller the setting is, the higher resonance sensitivity will be.	All	50	1 ~ 300	%
PB29		Auto low frequency vibration suppression mode 0:Fixed. 1:Automatically fixed after vibration suppression Auto mode description: When the value is 1, it will automatically perform vibration suppression. When the vibration cannot be detected or the frequency is stable, the system resets the parameter to 0 and automatically saves the low-frequency vibration suppression frequency to PB31(VSF1)	Pr. Pt	0	0~1	N/A

PB30	VCL	Low-frequency vibration detection level setting	Pr. Pt	50	1	puls
F 000		When automatic vibration suppression is enabled (PB29=1), the system will automatically search the detection level. The lower the value, the more sensitive the detection will be, but the system may also misjudge noise or take other low-frequency vibrations as frequencies to be suppressed. If the value is high, it's much easier for the system to judge, but the system may cannot easily detect low-frequency vibrations.		50	8000	e
PB31	VSF1	Low frequency vibration suppression frequency setting 1 To set the first low-frequency vibration suppression frequency. When PB31 is 0, the first low frequency vibration suppression filter is disabled	Pr. Pt	100	1 ~ 3000	0. 1Hz
PB32	VSG1	Low frequency vibration suppression gain 1 To set the first low-frequency vibration suppression gain. Increasing the value can improve the position response,but if the setting value is too large, the motor will not run smoothly. So it is recommended to set to 1.	Pr. Pt	0	0 ~ 15	N/A

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PB33	VSF2	Low-frequency vibration suppression frequency 2	Pr. Pt	100	1	0.1
		To set the second low-frequency vibration			~	Hz
		suppression frequency. When PB33 is 0, the			3000	
		second low frequency vibration suppression filter			3000	
		is disabled				
PB34	VSG2	Low frequency vibration suppression gain 2	Pr. Pt	0	0	N/A
		To set the second low-frequency vibration			~	
		suppression gain. Increasing the value can			15	
		improve the position response,but if the setting			15	
		value is too large, the motor will not run smoothly.				
		So it is recommended to set to 1.				
PB35	FRCL	Friction compensation level	Pr. Pt	0	0	%
		Set friction compensation level(For the	S		~	
		percentage of rated torque, 0 = turn off. Set to 1 or			100	
		more will turn on the friction compensation			100	
		function)				
PB36	FRCT	Friction compensation smoothing time constant	Pr. Pt	0	0	ms
		To set friction compensation smoothing time	S		~	
		constant.			1000	
PB37	FRCM	Friction compensation mode option	Pr. Pt	0	0	N/A
		0:the compensation value remains unchanged	S		~	
		when motor speed is slower than the value of			1	
		PC17.				
		1:the compensation value decrease to 0 when				
		motor speed is slower than the value of PC17.				
PB38	FFCT	Position feed forward filter time constant	Pr. Pt	0	0	0.
		Set the filter time constant when position feed			~	1ms
		forward gain is used.			1000	

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PB39		Reserved				
~						
PB43						
PB44	PPD	Position loop differential gain value	Pr. Pt	0	0	rad/
		Increasing this gain value will improve the			~	S
		tractability of position command.			500	
PB45		Frequency of machine resonance suppression	All	1000	10	Hz
		filter 4			~	
		This parameter is to set the frequency of machine			4000	
		resonance suppression filter, its usage is the same as PB01.				
PB46		Attenuation of machine resonance suppression	All	0	0	dB
		filter 4			~	
		This parameter is to set attenuation of machine			32	
		resonance suppression filter and it it should use together with NHF4.				
		0:turn off Notch filter function.				
PB47		Frequency of machine resonance suppression	All	1000	10	Hz
		filter 5			~	
		This parameter is to set the frequency of machine			4000	
		resonance suppression filter, its usage is the same as PB01.				
PB48	NHD5	Attenuation of machine resonance suppression	All	0	0	dB
		filter 5			~	
		This parameter is to set attenuation of machine			32	
		resonance suppression filter and it should be				
		used together with NHF5.				
		0:turn off Notch filter function.				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PB49	DOB	External interference compensation gain	All	0	0	N/A
		In position mode, increasing this parameter			~	
		setting value may reduce position overshoot.			100	
		In speed mode, increasing this parameter setting value may reduce speed overshoot				
		if the parameter value is too large, it might cause machinery vibration.				
PB50	MVF	Position command average filter time constant	Pr. Pt	0	0	ms
		0:Disable			~	
		1~50:Enable the filter function			50	
PB51	RND	Reserved for factory test only.				
~						
PB56						
PB57	TOF	z-axis torque compensation				
	(*)	When in z- axis applications with heavy loads, it				
		will improve the load axis vibration status when				
		the electromagnetic brake is released and servo SV is turned on.				
		Note: Abnormal settings may cause system instability				

Νο	Abbr.	Parameter function and description	mode	Default	Range	Unit
PC01	STA	Acceleration time constant	S. T	200	0	ms
		The acceleration time required when the motor speed accelerates from 0 rpm to the rated motor speed is defined as the acceleration time constant. For example, if the servo motor rated speed is 3000 rpm, this parameter is set to 3000(3s). When the speed command is set to 1000 rpm, it takes 1 second for the motor to accelerate from 0 rpm to 1000 rpm. Please refer to section 6. 4. 3 for the instruction in Pr mode. The acceleration time in JOG mode is also set by this parameter.			~	
		rated speed				
PC02	STB	Deceleration time constant The deceleration time required when the motor speed decelerates from rated speed to 0 rpm is	S. T	200	0 ~ 65550	ms
		defined as the deceleration time constant. Please refer to section 6. 4. 3 for the operation in Pr mode. The deceleration time in JOG mode is also set by this parameter.				
PC03	STC	S-curve acceleration /deceleration time constant	Pr S. T	0	0~	ms
		During acceleration and deceleration, a three-stage acceleration and deceleration curve is adopted to provide smooth processing. An			10000	

		appropriate STC setting can improve the				
		stability of the motor when starting and				
		stopping.				
		speed				
		speed command Orpa STC STA STC STC STB STC				
		In order to make the command curve smoother,				
		the S curve can be added, and there will be a				
		slight deviation in the acceleration and				
		deceleration time.				
		The time of motor accelerate to speed				
		command = STA + STC.				
		The time of motor decelerate from the speed				
		command to 0 = STB + STC.				
PC04	JOG	JOG speed command	All	300	0	rpm
		This parameter is JOG speed setting in JOG			~	
		operation mode.			6000	
PC05	SC1	Internal speed command 1(Limit 1)	S. T	100	-6000	rpm
		In speed control mode, this parameter is speed			~	
		command 1. In torque control mode, this			6000	
		parameter is speed limit 1 and without direction.				
		The maximum internal speed command value				
		is the maximum speed value of motor.				
PC06	SC2	Internal speed command 2(Limit 2)	S. T	500	-6000	rpm
		In speed control mode, this parameter is speed			~	
		command 2. In torque control mode, this			6000	
		parameter is speed limit 2 and without direction.				
		The maximum internal speed command value				
		is the maximum speed value of motor.				
I		·		•		· · · · · · · · · · · · · · · · · · ·

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PC07	SC3	Internal speed command 3(Limit 3) In speed control mode, this parameter is speed command 3. In torque control mode, this parameter is speed limit 3 and without direction. The maximum internal speed command value is the maximum speed value of motor.	S. T	1000	-6000 ~ 6000	rpm
PC08	SC4	Internal speed command 4(Limit 4) In speed control mode, this parameter is speed command 4. In torque control mode, this parameter is speed limit 4 and without direction. The maximum internal speed command value is the maximum speed value of motor.	S. T	200	-6000 ~ 6000	rpm
PC09	SC5	Internal speed command 5(Limit 5) In speed control mode, this parameter is speed command 5. In torque control mode, this parameter is speed limit 5 and without direction. The maximum internal speed command value is the maximum speed value of motor.	S. T	300	-6000 ~ 6000	rpm
PC10	SC6	Internal speed command 6(Limit 6) In speed control mode, this parameter is speed command 6. In torque control mode, this parameter is speed limit 6 and without direction. The maximum internal speed command value is the maximum speed value of motor.	S. T	500	-6000 ~ 6000	rpm
PC11	SC7	Internal speed command 7(Limit 7) In speed control mode, this parameter is speed command 7. In torque control mode, this parameter is speed limit 7 and without direction. The maximum internal speed command value is the maximum speed value of motor.	S. T	800	-6000 ~ 6000	rpm

No	Abbr.	Parameter function and description	mode	Default	Range	Uni
PC12	VCM	Output speed of maximum analog command This value decides the output speed while the maximum permissible voltage is applied.	S	3000	0	rpm
	(▲)	output speed = $\frac{\text{applied voltage of speed command}}{10} \times PC12$	Т		~	
		When torque mode is applied, this parameter would become speed limit when the maximum permissible voltage applied.				
		Speed limit = $\frac{\text{applied voltage of torque command}}{10} \times PC12$				
		Note: used in SDC-A(M)				
PC13	TLC	Torque generated of maximum analog command To decide the maximum torque generated while the maximum permissible voltage is applied.	All	100	0	%
	(▲)	Torque limit = $\frac{\text{applied voltage of torque command}}{10} \times PC13$			~ 2000	
		Torque generated of maximum analog command				
		When position or speed mode is applied, this				
		parameter is used to limit the output speed.				
		Note: used in SDC-A(M)				
PC14	MOD	Analog monitor output	All	0100h	0000h	-
		There are 1 channels of analog monitor provided for users				
		to check the required signals.			~	
		0 0 0 ch1			0009h	
		The setting value of Ch1 and its corresponding output are as follows: Note : used in SDC-A(M)				
		0: motor speed(±10V/2 times rated speed)				
		1: motor torque((±10V/ maximum torque)				
		2: speed command((±10V/2 times rated speed)				
		3: effective load rate(±10V/±300%)				
		4: pulse command frequency(±10V/4300k pulse/s)				
		5: current command(±10V/max current command)				
		6: dc bus voltage(10V/450V)				
		7: error pulse number(±10V/4194304pulse)				
		8: error pulse number(±10V/10000 pulse)				
		9: error pulse number(±10V/100 pulse)				

PC15	SVZR	Speed analog zero voltage acknowledged range	S.T	10	0	mv
		Treat the applied voltage which is less than PC15 as			~	
	(*)	zero speed command. Note : used in SDC-A(M)				
					1000	
PC16	MBR	Electromagnetic brake sequence output time	All		-1000	ms
		If PC16>=0, it sets the delay time which counts from		100	~	
		SON turning off to the electromagnetic brake interlock signal (MBR) turning off.			1000	
		If PC16<0, it sets the delay time of SON on. After the				
		electromagnetic brake interlock signal (MBR) is				
		turned off, and then the SON will turn off after the				
		delay time.				
PC17	ZSP	Zero speed signal acknowledged range	All	50	0	rpm
		To set the zero speed signal output speed range. If			~	
		the forward/reverse rotation speed of motor is lower			10000	
		than this parameter setting value, the ZSP of DO will				
		be outputted from the zero speed signal contact.				
PC18	COP1	Stop option and power interruption and restart	All	0010h	0000h	N/A
	(*)	option			~	
		0 0 y x			0011h	
		<u>x: power interruption and restart option</u>				
		When voltage of power is lower than allowable				
		level, insufficient voltage alarm occurs and servo				
		motor stops. The servo motor will restart				
		immediately when power voltage is normal and alarm reset is not needed.				
		0 : invalid 1 : valid				
		y: Motor stop mode option. Servo stop selection in				
		speed control mode.				
		y=1:motor stops instantaneously				
		y=0:decelerates to stop				

PC19	CUDS	Alarm history clear option and overload early	All	0000h	0000h	N/A
		warning option.	7 41	000011	000011	1 1/7 1
	(*)	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$			~	
					0111h	
		x=0:not clear alarm history x=1:clear alarm history				
		When set x=1, the clear action will only be performed after the power is restarted next time,				
		and it will be automatically set to 0 after the clear				
		is completed.				
		y=0:no action when warning occurs.				
		y=1:motor stops immediately when warning				
		occurs				
		z=0:the display stays in alarm screen after alarm				
		is cleared.				
		z=1:the display go back to the previous screen				
		after alarm is cleared.				
PC20	SNO	Servo drive communication device number	All	1	1	num
	(*)	Setting different address for different servo drive			~	ber
		during communication. If two drives are set to			32	
		the same device number, it will cause			02	
		communication failure.				
		Note: When using the communication				
		control to write parameters frequently,				
		please set PA23 and study PA23 parameter description carefully to avoid EEPROM				
		damage caused by continuous				
		communication writing.				
PC21		Reserved				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PC22	BPS	Communication protocol option	All	0010h	0000h	N/A
	(*)	0 0 y x			~	
					00501	
		y: RS-485 communication speed option			0058h	
		y=0:4800bps y=1:9600bps y=2:19200bps				
		y=3:38400bps y=4:57600bps y=5:115200bps				
		x: Communication protocol option				
		x=0: 7,N,2(Modbus, ASCII)				
		x=1: 7,E,1(Modbus, ASCII)				
		x=2: 7,O,1(Modbus, ASCII)				
		x=3: 8,N,2(Modbus, ASCII)				
		x=4: 8,E,1(Modbus, ASCII)				
		x=5: 8,O,1(Modbus, ASCII)				
		x=6: 8,N,2(Modbus, RTU)				
		x=7: 8,E,1(Modbus, RTU)				
		x=8: 8,O,1(Modbus, RTU)				
		Note: When using the communication control to				
		write parameters frequently, please set PA23 and				
		study PA23 parameter description carefully to avoid				
		EEPROM damage caused by continuous				
		communication writing.				
PC23	SIC	Social communication timeout option	All	0	0	
F 623	310	Serial communication timeout option		0	0	S
		The timeout duration of the communication protocol can			~	
		be set from 1 to 60 seconds. If it is set to 0, the servo drive			60	
		will not check the time out.			00	

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
No PC24		Parameter function and description Drive status display option 0 y x: Display option after power on(hexadecimal) x=0:Motor feedback pulse number (low 5-digit) (before electronic gear ratio) x=2: Pulse number of pulse position commands (high 5-digit) (before electronic gear ratio) x=3:Pulse number of pulse position commands (low 5-digit) (before electronic gear ratio) x=4:Input pulse command and feedback pulse deviation (before E-Gears) x=5:Pulse command input frequency x=6:current speed of motor x=7:Analog speed command/limit voltage x=8:Speed input command/limit x=9:Analog torque command /limit voltage x=A:Torque input command/limit x=	mode	Default		

		power on y=1:Display status acco y=0:The drive status is o mode, and the display s shown in the following ta Control mode Position Position and speed dual mode Speed Speed and torque dual mode torque Torque and position dual mode	The drive status displayed after power on Motor feedback pulse number(Note 1) Motor feedback pulse number(Note 1)/motor speed Motor speed Motor speed/analog torque command voltage Torque command Torque command/motor feedback pulse number(note1)				
PC25	TL2	Internal torque limit 2 The setting description is the same as PA05. In addition, when using the internal parameter torque limit with external input signals TL and TL1,different torque limits can be selected. Please refer to PA05 description.		All	100	0 ~ 100	%
PC26	VCO	command. Speed ana	e" the analog offset for a zero alog command (VC) is ontrol.Speed analog limit (VLA) e control mode.	S.T	0	-8000 ~ 8000	mV

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PC27	TLO	Torque analog command/limit offset	S.T	0	-8000	mV
		Used to "compensate" the analog offset for a zero				
		command.Torque analog command (TC) is corrected				
		for torque control mode. Torque output analog limit			8000	
		(TLA) is corrected for speed control mode				
		Note : used in SDC-A(M)				
PC28	MO1	Analog monitor ch1 offset	All	0	-999	mV
		Used to set the output offset voltage of analog			~	
		monitor MON 1				
		Note : used in SDC-A(M)			999	
PC30	MOG1	Analog monitor ch1 offset	All	100	1~100	%
1 000	MOOT	Used to set the output offset voltage of analog		100		
		monitor MON 1 Note : used in SDC-A(M)				
PC32	CMX2	Electronic gear numerator 2	Pt	1	1	N/A
		To set electronic gear numerator 2			~	
		Refer to section 6. 4. 4			2 ²⁶	
					Z ²⁰	
PC33	CMX3	Electronic gear numerator 3	Pt	1	1	N/A
		To set electronic gear numerator 3			~	
					2 ²⁶	
PC34	CMX4	Electronic gear numerator 4	Pt	1	1	N/A
		To set electronic gear numerator 4			~	
					2 ²⁶	
PC35	VCL	VC input voltage limit	S \ T	0	0	mV
		Used to limit the range of speed analog command		Ŭ		
	(*)	(VC). "0" denotes no limit. A "5000" setting of PC35			~	
		as an example: even the actual analog command is			20000	
		10V, the drive would recognize that the maximum				
		input voltage is only 5V.				
		Note : used in SDC-A(M)				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PC37	DTA9	AL.09 initialization delay judgement time	All	0	0	ms
	(*)	To set AL.09 judgement delay time when boot up. The setting value 0 indicates this function is disabled.			~ 20000	
PC38	FNO4	Function option 4	All	0000h	0000h	N/A
	(*)	To define the contact pin for DO1~DO5 output signal during initialization.			~ 003Fh	
		Bit0~bit5 of this parameter controls DO1~DO5 output contact status.				
		0 :initiate output contact as a contact				
		1 :initiate output contact as b contact				
		If this parameter used in DO3:ALM, set PC38 =0020h and the b contact output will be 0. 5-1second earlier when boot up.				
PC39	LPS	Low pass filter setting option 0 0 0 x When X=0, PB03 value will be varied with PA02 setting automatically(invalid when PA02=0)	All	0000h	0000h ~ 0001h	N/A
		When x=1, PB03 need to be set manually.				
PC40		The delay time to release electromagnetic brake MBR when Servo ON.	All	0	0	
		When the electromagnetic brake function is enabled, this parameter is to define the delay output time of the electromagnetic brake interlock signal (MBR) turning on after SON is activated			~ 1000	ms

PC41	MP1A	Object para	ameter PC57 map	oping	All	0000h	Note *	N/A
		The target	of the mapping pa	arameter is the				
		parameter	address specified	by the user. With a				
		32-bit lengt	h, it can be set to	map two 16-bit				
		parameters	s or one 32-bit pai	rameter.				
		If PC41 is s	set as 0x0101010	1, it means the				
		mapped da	ata in PC57 is the	content of PA01.				
			HIGH	LOW				
		PC41	0x0101	0x0101				
	PC57 PA01(32-bit)							
		If PC41 is s	set to 0x0101011	2,it means the				
			ata in PC57 is PA					
		PA12(16-b	it).	х <i>г</i>				
			HIGH	LOW				
		PC41	0x0101	0x0112				
		PC57	PA01(16 bits)	PA12(16 bits)				
			1					
		For examp	le					
		Set PC41 t	o 0x0110 if mapp	ing target is PA10				
		Set PC41 t	o 0x0424 if mapp	ing target is PD24,				
			n refer to the map	oping parameters				
		list in the fo	ollowing 2 pages.					
		i ≫Default v	alue is 0x00 whic					
		function is	disabled.					
		it can dir	ectly map status	parameter.				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PC42	MP2A	Object parameter PC58 mapping		0000h		
		The setting is the same as PC41				
PC43	МРЗА	Object parameter PC59 mapping	All	0000h	Note *	N/A
		The setting is the same as PC41			note	
PC44	MP4A	Object parameter PC60 mapping		0000h	-	
		The setting is the same as PC41				
PC45	MP5A	Object parameter PC61 mapping		0000h		
		The setting is the same as PC41				
PC46	MP6A	Object parameter PC62 mapping		0000h	-	
		The setting is the same as PC41	All		Note *	N/A
PC47	MP7A	Object parameter PC63 mapping		0000h		
		The setting is the same as PC41				
PC48	MP8A	Object parameter PC64 mapping		0000h		
		The setting is the same as PC41				
PC49	MS1A	Object status display 1 mapping	All	0000h	0000h	N/A
		This is used to designate the address of object parameter, The data length of PC49 is 32-bit, Refer to the mapping status number in the following page Mapping Status Display Target Table.			~ 00FFh	
		For example				
		If set PC49 = 0x05, PC65 reads "motor current speed(r/min)"				
		※All the status is Read only.				

PC50	MS2A	Object status display 2 mapping		0000h	0000h	
		The setting is the same as PC49. Read PC66 to			~	
		return the status value.			00FFh	
PC51	MS3A	Object status display 3 mapping		0000h	0000h	
		The setting is the same as PC49. Read PC67 to			~	
		return the status value.	All		00FFh	N/A
PC52	MS4A	Object status display 4 mapping	7 41	0000h	0000h	
		The setting is the same as PC49. Read PC68 to			~	
		return the status value.			00FFh	
PC53	MS5A	Object status display 5 mapping		0000h	0000h	
		The setting is the same as PC49. Read PC69 to			~	
		return the status value.			00FFh	
PC54		Reserved				
~						
PC56						

Note *: Depends on the communication address of the parameter.

Mapping parameters List

Parameter	Mapping	Parameter	Mapping	Parameter	Mapping	Parameter	Mapping
number	number	number	number	number	number	number	number
PA01	0x0101	PB01	0x0201	PC01	0x0301	PD01	0x0401
PA02	0x0102	PB02	0x0202	PC02	0x0302	PD01	0x0402
~	~	~	~	~	~	~	~
PA50	0x0150	PB60	0x0260	PC99	0x0399	PD40	0x0440

The following table shows the number of each group mapping parameter.

Parameter number	Mapping number	Parameter number	Mapping number
PE01	0x0501	PF01	0x0601
PE02	0x0502	PF02	0x0602
~	~	~	~
PE99	0x0599	PF99	0x0699

Note: The low-bit(two digits) of the mapping number is the same as the parameter number.

Relevant alarm

Alarm Code	Alarm item	Issue description	Solution
AL.61	Input group error	Write the wrong mapping number of PC41~PC48.	This error will continue to appear, you need to troubleshoot the problem before you can press the SET button to release.
AL.62	Input number error	Write the wrong mapping number of PC41~PC48.	You need to troubleshoot the problem before you can press the SET button to release.
AL.63	Writing range error	Write the wrong mapping range of PC57~PC64.	Press the SET button to release.
AL.64	Not writable when SON is ON	Write PC57~PC64 with the inhibit parameters when SON is ON.	Press the SET button to release.

XNone of the above alarms affect the operation of the drive.

Mapping status display target list.

Status number (Hexadecimal)	Content
00H	Undefined
01H	Motor feedback pulse number (before
	electronic gear ratio)
02H	The number of pulse commands(before
	electronic gear ratio)
03H	The deviation of input pulse command and
	feedback pulse (before E-Gears)
04H	Pulse command input frequency
05H	Motor current speed.
06H	Analog speed command/limit voltage
07H	Speed input command/limit
08H	Analog torque command/limit voltage
09H	Torque input command/limit
0AH	Effective load rate
0BH	Peak load rate
0CH	DC bus voltage
0DH	Load inertia ratio to motor shaft
0EH	Instantaneous torque
0FH	Regenerative load rate
10H	Absolute pulse number reference Z phase
11H	Refer to the mapping DIO status table below for
	DI/DO status output,
12H	Refer to section 10. 1 for the current alarm

Mapping DI/DO status list(Read only)

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	Bit number
			DO5	DO4	DO3	DO2	DO1	Pin number
Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit number
								Pin number
Bit23	Bit22	Bit21	Bit20	Bit19	Bit18	Bit17	Bit16	Bit number
DI8	DI7	DI6	DI5	DI4	DI3	DI2	DI1	Pin number
Bit31	Bit30	Bit29	Bit28	Bit27	Bit26	Bit25	Bit24	Bit number
							DI9	Pin number

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PC57	MP1	Mapping parameter #1 To help users to quick and continuous read and write scattered parameter addresses. PC41 is set to the mapping parameter number by the panel or communication. When the users read and write PC57, it is equivalent to read and write the parameter specified by PC41. %When writing to the specified parameter,it will not be written to the EEPROM.	All	0000h	Note *	N/A
PC58	MP2	Mapping parameter#2 The setting is the same as PC57, and the mapping target parameter is determined by PC42.	All	0000h	Note *	N/A
PC59	MP3	Mapping parameter#3 The setting is the same as PC57,and the mapping target parameter is determined by PC43.	All	0000h	Note *	N/A
PC60	MP4	Mapping parameter#4 The setting is the same as PC57, and the mapping target parameter is determined by PC44.	All	0000h	Note *	N/A
PC61	MP5	Mapping parameter#5 The setting is the same as PC57, and the mapping target parameter is determined by PC45.	All	0000h	Note *	N/A
PC62	MP6	Mapping parameter#6 The setting is the same as PC57, and the mapping target parameter is determined by PC46.	All	0000h	Note *	N/A

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PC63	MP7	Mapping parameter#7 The setting is the same as PC57, and the mapping target parameter is determined by PC47.	All	0000h	Note *	N/A
PC64	MP8	Mapping parameter#8 The setting is the same as PC57, and the mapping target parameter is determined by PC48.	All	0000h	Note *	N/A

Note *: Depends on the corresponding parameters of PC41~PC48.

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PC65	MS1	The content value of mapping status 1(read only) To help users to quick and continuous read and write scattered parameter addresses. PC49 is set to the mapping parameter number by the panel or communication. You can refer to the mapping status table. When reading PC65, it is equivalent to read the status value specified by PC49.		0		
PC66	MS2	The content value of mapping status 2(this parameter is read only) The status data displayed is designated by the PC50 setting, which will be return after reading PC66 by communication.		0		
PC67	MS3	The content value of mapping status 3(this parameter is read only) The status data displayed is designated by the PC51 setting, which will be return after reading PC67 by communication.	All	0	Note *	N/A
PC68	MS4	The content value of mapping status 4(this parameter is read only) The status data displayed is designated by the PC52 setting, which will be return after reading PC68 by communication.		0		
PC69	MS5	The content value of mapping status 5(this parameter is read only) The status data displayed is designated by the PC53 setting, which will be return after reading PC69 by communication.		0		
PC70 ~	<u> </u>	Reserved				
PC72						

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PC73	TQ1	Internal torque command 1	Т	100	-300	%
		The first internal torque command (100%			~	
		indicates rated torque)			300	
PC74	TQ2	Internal torque command 2	Т	100	-300	%
		The second internal torque command (100%			~	
		indicates rated torque)			300	
PC75	TQ3	Internal torque command 3	Т	100	-300	%
		The third internal torque command (100%			~	
		indicates rated torque)			300	

Note *: The corresponding state determines the range.

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PD01	DIA1	Input signal automatic ON option 1	All	0000h	0000h	N/A
	(*)	u z y x			~	
		u z y x				
		x=0:The SON-SG circuit open/short option is controlled by			1111h	
		the external circuit of the driver.				
		x=1:SON-SG is short-circuited internally without external				
		wiring.				
		y=0:The LSP-SG open/short option is controlled by the				
		external circuit of the driver.				
		y=1:LSP-SG is short-circuited internally without external				
		wiring.				
		z=0:The LSN-SG circuit open/short option is controlled by				
		the external circuit of the driver.				
		z=1:LSN-SG is short-circuited internally without external				
		wiring.				
		u=0:The EMG-SG circuit open/short option is controlled by				
		the external circuit of the driver.				
		u=1:EMG-SG is short-circuited internally without external				
		wiring.				
PD02	DI1	Input signal option 1	All	0001h	0000h	N/A
	(*)	To define the input signal for CN1-14 pin. In different			~	
		control modes, the input signals are not exactly the			003Fh	
		same. The user can define CN1-14 function in different			000111	
		control mode by setting this parameter.				
PD03	DI2	Input signal option 2	All	000Dh	0000h	N/A
	(*)	To define the input signal for CN1-15 pin. CN1-15 pin			~	
		can be defined as any input signal and its parameter			0005	
		setting is the same as PD02, you can refer to PD02			003Fh	
		setting description.				

PD04DI3Input signal option 3All0003h0000hN/A(*)To define the input signal for CN1-16 pin. can be defined as any input signal and its parameter setting description.All0003h0000hN/APD05DI4Input signal option 4All0004h0000hN/A(*)To define the input signal for CN1-17 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0002h0000hN/APD06D15Input signal option 5All0002h0000hN/A(*)To assign the input signal for CN1-18 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0002h0000hN/APD07D16Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD07D16Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08D17Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. can be	· · · · · ·						,
Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal for CN1-17 pin CN1-17 pin Can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0004h0000hN/APD06D15Input signal option 5 (*)All0002h0000hN/A~~003Fh~PD06D15Input signal option 5 (*)All0002h0000hN/A~~003Fh~PD07D16Input signal option 6 (*)To assign the input signal for CN1-18 pin CN1-19 pin CN1-19 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD07D16Input signal option 6 (*)All000Fh0000hN/A~~PD08D17Input signal option 7 (*)To assign the input signal for CN1-20 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08D17Input signal option 7 (*)All0012h0000hN/A~~PD09D18Input signal option 8 (*)All0019h0000hN/A~~~PD09D18Input signal option 8 (*)Input signal option 8 (*)All0019h0000hN/APD09D18Input signal option 8 (PD04	DI3	Input signal option 3	All	0003h	0000h	N/A
setting is the same as PD02, you can refer to PD02 setting description.003FhPD05DI4Input signal option 4 (*)All0004h0000hN/A(*)To define the input signal for CN1-17 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0002h0000hN/APD06DI5Input signal option 5 to assign the input signal for CN1-18 pin can be defined as any input signal and its parameter setting is the same as PD02,you can refer to PD02 setting description.All0002h0000hN/APD07DI6Input signal option 6 to assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD07DI6Input signal option 6 to assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD08DI7Input signal option 7 to assign the input signal for CN1-20 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08DI7Input signal option 8 to assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hN/APD09DI8Input si		(*)	To define the input signal for CN1-16 pin. CN1-16 pin			~	
Setting is the same as PD02, you can refer to PD02 setting description.All0004h0000hN/APD05DI4Input signal option 4All0004h0000h~~(*)To define the input signal for CN1-17 pin. CN1-17 pin can be defined as any input signal and its parameter setting description.All0002h0000hN/APD06DI5Input signal option 5All0002h0000hN/A(*)To assign the input signal for CN1-18 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD07DI6Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD07DI6Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08DI7Input signal option 7All0012h000Fh003Fh~(*)To assign the input signal for CN1-20 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h003FhPD09DI8Input signa						003Fh	
PD05DI4Input signal option 4All0004h0000hN/A(*)To define the input signal for CN1-17 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0002h0000hN/APD06DI5Input signal option 5All0002h0000hN/A(*)To assign the input signal for CN1-18 pin. CN1-18 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD07DI6Input signal option 6 (*)All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD07DI6Input signal option 6 (*)All001Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08DI7Input signal option 7 can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08DI7Input signal option 8 (*)To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting descripti							
Image: Constraint of the constra	DDOC			A 11	0004	00001	N1/A
Can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.O03FhPD06DI5Input signal option 5All0002h0000hN/A(*)To assign the input signal for CN1-18 pin. CN1-18 pin can be defined as any input signal and its parameter setting description.All000Fh0000hN/APD07DI6Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. CN1-19 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD07DI6Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting description.All0012h0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h003FhPD09DI8Input signal option 8All0019h0000hN/A(*)To assign the input signal for CN1-21 pin. can be defined as any input signal and its parameter setting description.All0019h0000hPD09DI8Input signal option 8All0019h0000hN/A(*)To assign the input	PD05			All	0004n	0000n	N/A
PD06D15Input signal option 5All0002h0000hN/A(*)To assign the input signal for CN1-18 pin. CN1-18 pin. Can be defined as any input signal and its parameter setting description.All0002h0000hN/APD07D16Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting description.All000Fh0000hN/APD07D16Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08D17Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CAn be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08D17Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin. CN1-20 pin.All0012h0000hN/APD09D18Input signal option 8All0019h0000hN/A(*)To assign the input signal of CN1-21 pin. con be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000h </td <td></td> <td>(*)</td> <td></td> <td></td> <td></td> <td>~</td> <td></td>		(*)				~	
Image: setting description.Image: setting description.Image: setting description.All0002h0000hN/APD06DI5Input signal option 5All0002h0000hN/A(*)To assign the input signal for CN1-18 pin. CN1-18 pin.CN1-18 pin.CN1-18 pin.CN1-18 pin.CN1-18 pin.(*)To assign the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD07DI6Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. can be defined as any input signal and its parameter setting description.All0019h0000hN/APD09DI8Input signal option 8All0019h0000hN/A(*)To assign the input signal for CN1-21 pin. con be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000h </td <td></td> <td></td> <td></td> <td></td> <td></td> <td>003Fh</td> <td></td>						003Fh	
(*)To assign the input signal for CN1-18 pin. CN1-18 pin can be defined as any input signal and its parameter setting is the same as PD02,you can refer to PD02 setting description.~PD07DI6Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. can be defined as any input signal and its parameter setting description.All0012h0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. can be defined as any input signal and its parameter setting description.All0019h0000hPD09DI8Input signal option 8All0019h0000hN/A(*)To assign the input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hPD09DI8Input signal option 8All0019h0000hN/A(*)To assign the input signal and its parameter setting is the same as PD02, you can refer to PD							
Image: Can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.O03Fh003FhPD07D16Input signal option 6AII000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. CN1-19 pin can be defined as any input signal and its parameter setting description.AII001Fh003FhPD08D17Input signal option 7AII0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting description.AII0012h0000hN/APD08D17Input signal option 7AII0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description. Note : SDC-A(M) does not have this IOAII0019h0000hN/APD09D18Input signal option 8AII0019h0000hN/A(*)To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.AII0019h0000hPD09DI8Input signal option 8AII0019h0000hN/A(*)To assign the input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.AII0019h003Fh	PD06	DI5	Input signal option 5	All	0002h	0000h	N/A
PD07DI6Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. CN1-19 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All000Fh0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting description.All0012h0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.003Fh~PD09DI8Input signal option 8All0019h0000hN/A(*)To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hPD09DI8Input signal option 8All0019h0000hN/A(*)To assign the input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h003Fh		(*)	To assign the input signal for CN1-18 pin. CN1-18 pin			~	
Setting is the same as PD02,you can refer to PD02 setting description.All000Fh0000hN/APD07DI6Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. CN1-19 pin can be defined as any input signal and its parameter setting description.All000Fh0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h003FhPD09DI8Input signal option 8All0019h0000hN/A(*)To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hPD09DI8Input signal option 8All0019h003Fh~(*)To assign the input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h003Fh			can be defined as any input signal and its parameter			002Eb	
PD07DI6Input signal option 6All000Fh0000hN/A(*)To assign the input signal for CN1-19 pin. CN1-19 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All001Fh0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/APD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting description.All0012h003FhPD09DI8Input signal option 8All0019h0000hN/A(*)To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hN/A			setting is the same as PD02,you can refer to PD02			003FN	
(*)To assign the input signal for CN1-19 pin. CN1-19 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.~PD08D17Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting description. Note : SDC-A(M) does not have this IOAll0019h0000hN/APD09DI8Input signal option 8 (*)All0019h0000hN/A(*)To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hN/A			setting description.				
Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter output signal option 7All003FhPD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description. Note : SDC-A(M) does not have this IOAll0012h0000hN/APD09DI8Input signal option 8 (*)All0019h0000hN/A(*)To assign the input signal for CN1-21 pin. consign the input signal for CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hN/A	PD07	DI6	Input signal option 6	All	000Fh	0000h	N/A
PD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting description.All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting description.Mile003Fh~PD09D18Input signal option 8 (*)All0019h0000hN/A(*)To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hN/A		(*)				~	
PD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description. Note : SDC-A(M) does not have this IOAll0012h0000hN/APD09DI8Input signal option 8 (*)All0019h0000hN/A(*)To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hN/A						003Fh	
PD08DI7Input signal option 7All0012h0000hN/A(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description. Note : SDC-A(M) does not have this IOAll0012h0000hN/APD09DI8Input signal option 8 (*)To assign the input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hN/APD09DI8Input signal option 8 defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hN/A							
(*)To assign the input signal for CN1-20 pin. CN1-20 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description. Note : SDC-A(M) does not have this IO~~PD09D18Input signal option 8 defined as any input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.All0019h0000hN/A		דוח		ΔΙΙ	0012h	0000h	Ν/Δ
Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description. Note : SDC-A(M) does not have this IOImage: can be defined as any input signal option 8Image: can be defined as any input signal for CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Image: can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.Im				7 \	001211	000011	1 1/7 1
setting is the same as PD02, you can refer to PD02 setting description. Note : SDC-A(M) does not have this IO003FhPD09D18Input signal option 8All0019h0000hN/A(*)To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.003Fh~		()				~	
Note : SDC-A(M) does not have this IO All 0019h 0000h N/A PD09 D18 Input signal option 8 All 0019h 0000h N/A (*) To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description. All 003Fh						003Fh	
PD09 DI8 Input signal option 8 All 0019h 0000h N/A (*) To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description. All 0019h 0000h N/A			setting description.				
(*) To assign the input signal for CN1-21 pin. CN1-21 pin can defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.			Note : SDC-A(M) does not have this IO				
defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.	PD09	DI8	Input signal option 8	All	0019h	0000h	N/A
same as PD02, you can refer to PD02 setting description.		(*)	To assign the input signal for CN1-21 pin. CN1-21 pin can			~	
same as PD02, you can refer to PD02 setting description.			defined as any input signal and its parameter setting is the			003Eb	
Note : SDC-A(M) does not have this IO			same as PD02, you can refer to PD02 setting description.			000611	
			Note : SDC-A(M) does not have this IO				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PD10	DO1	Output signal option 1	All	0003h	0000h	N/A
	(*)	To define the output signal for CN1-41 pin. In different			~	
		control modes, the output signals are not exactly the same.			003Fh	
		The user can define CN1-41 function in different control			000111	
		mode by setting this parameter.				
		Note : The default value of SDC-A(M) is 0008h				
PD11	DO2	Output signal option 2	All	0008h	0000h	N/A
	(*)	To define the output signal for CN1-42 pin. CN1-42 pin can			~	
		be defined as any output signal and its parameter setting is			003Fh	
		the same as PD10, you can refer to PD10 setting			000111	
		description. Note : The default value of SDC-A(M) is 0002h				
PD12	DO3	Output signal option 3	All	0002h	0000h	N/A
	(*)	To define the output signal for CN1-43 pin. CN1-43 pin can			~	
		be defined as any output signal and its parameter setting is			003Fh	
		the same as PD10, you can refer to PD10 setting			003F11	
		description. Note : SDC-A(M) parameter is defined as				
		CN1-46 output signal, the default value is 0001h				
PD13	DO4	Output signal option 4	All	0005h	0000h	N/A
	(*)	To define the output signal for CN1-44 pin. CN1-44 pin can			~	
		be defined as any output signal and its parameter setting is			003Fh	
		the same as PD10, you can refer to PD10 setting			000111	
		description.				
		Note : SDC-A(M) does not have this IO				
PD14	DO5	Output signal option 5	All	0001h	0000h	N/A
	(*)	To define the output signal for CN1-45 pin. CN1-45 pin can			~	
		be defined as any output signal and its parameter setting is			003Fh	
		the same as PD10, you can refer to PD10 setting				
		description.				
		Note : SDC-A(M) does not have this IO				

PD15	DIF	Digital input filter setting	All	2	0	2ms
	(*)	1 unit is 2ms.			~	
		if PD15=5, it means filter time is 10ms.			50	
PD16	SDI	Digital input control source option	All	0000h	0000h	N/A
	(∎)	Each bit of this parameter determines the signal			~	
		input control source of 1 DI. Bit0 ~ Bit8 correspond to DI1 ~ DI9			01FFh	
		Bit setting shows as below:				
		0: input contact status is controlled by external hardware terminal.				
		1: input contact status is controlled by communication(PD25)				
		For DI function definition, please refer to DI1 ~ DI8:PD02 ~ PD09				
		DI9:PD21				
PD17	DOP1 (*)	The servo emergency stop mode setting when LSN or LSP signal is off. 0 0 0 x <u>x:Options of emergency stop</u>	Pt. Pr S.	0000h	0000h ~ 0001h	N/A
		x=0: stops immediately.				
		x=1: Servo decelerates to stop according to the decelerate time constant setting. The decelerate				
		time is set according to PF81(Deceleration time for auto-protection)				


No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PD18	DOP2	CR signal clear setting	Pt. Pr	0000h	0000h	N/A
	(*)	0 0 0 x			~	
					0002h	
		x=0: To clear the position pulse error. When CR is				
		triggered at the rising edge, the driver's position				
		pulse error will be cleared to 0 (Pt mode).				
		x=1: To clear the position pulse error. When				
		CR-SG is short-circuited, the position pulse error				
		of drive will keep cleaning to 0 (Pt mode)				
		x=2: To stop the positioning function. the CR is				
		triggered at the rising edge, the motor will				
		decelerate to stop according to the deceleration				
		time and the remaining uncompleted pulses will be				
		ignored. When CTRG-SG is short-circuited again,				
		the current position command will be executed (Pr				
		mode)				
		CTRG CR CR Moving distance				

PD19	DOP3	0P3 Alarm code output option						All	0000h	0000h	N/A	
	(*)										~ 0001h	
		x Pin number										
			tting	CN1-41 CN1			CN1-45					
			0			0	DO					
				function func			function					
	1		1	alarm code	e when a	n alarm occurs						
		Note	e: DO fu	inction is d	etermine							
			(Note) Alarm code			Alarm						
				1 CN1-42		_	Name					
					0	AL.09	Serial					
							communicat	ion				
				0			error					
			0				Serial					
							communicat	ion				
							timeout					
							IGBT overhe					
							Memory erro	or				
			0	0	1		Overload 2					
			0	0	I		Low voltage Over voltage					
			0	1	0	7.2.01	Regenerativ					
						AL.04	alarm					
			0	1	1	AL.03	Over current	t				
			1	0	0	AL.05	Overload					
				0	1	AL.06	Over speed					
			1			AL.07	Pulse comm	and				
							abnormal					
						AL.08	Position erro	or				
			1	4		AL.0B	Encoder erro	or 1				
				1	0	AL.0C	Encoder erro	or 2				
			Note: 0	: OFF. 1: 0)N		287					

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PD20	DOP4 (*)	Operation option when the alarm reset signal is short-circuited. 0 0 y x x=0: PWM signal off(SEVO ON is disabled) x=1: PWM signal on(SERVO ON is enabled) Options of output signal when warning occurs To select ALM output status when warning occurs. y=0: disable ALM when warning occurs y=1: enable ALM when warning occurs y=1: enable ALM when warning occurs y=0: disable ALM when warning occurs y=1: enable ALM on offf DO:WNG ON OFF DO:ALM ON OFF	All	0000h	0000h ~ 0011h	N/A
PD21	(*)	Input signal option 9 To define the input signal for CN1-22 pin. CN1-22 pin can be defined as any input signal and its parameter setting is the same as PD02, you can refer to PD02 setting description.	0018h	0000h ~ 003Fh	N/A	
PD22 ~ PD24		Reserved				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PD25	ITST	Communication control digital input status	All	0000h	0000h	N/A
	(=)	To determine the digital input contact (12 points in total) by bit setting method. Bit 0~8 of PD25 is correspond to DI1~DI9.			~ 01FFh	
		In binary bits: 0: digital input contact OFF				
		1: digital input contact ON.				
		PD16 controls the input source, either from external hardware terminals (DI1 ~ DI9) or communication commands(corresponding to Bit 0 ~ 8 of PD25). The bit of PD16 is 1, which means the source is communication DI (PD25), otherwise, the source is hardware terminal DI.				
		If the value read from PD25 is 0x0011, it indicates that DI1 and DI5 are ON.				
		If the value written into PD25 is 0x0011, which means that the communication contacts DI1 and DI5 are ON; but it does not mean that the terminal signals of the digital input DI1 and DI5 are ON, this is determined by PD16 setting value.				
		For the function definition of DI(DI1~DI8), you can refer to PD02~PD09. And you can refer to PD21 for DI9.				
		Example 1				
		If set PD16 to 0FFFh and PD25 to 0000h. the DI1~DI9 all will be controlled by the communication contacts, its digital input contact will all turn OFF. If the external hardware terminals connect all DI1~DI9 to the SG, the digital input signal will not be affected, it will be still controlled by the communication contact and				

		the digital input contact DI1~DI9 will still all OFF.				
		Example 2: The external hardware terminals DI9~DI1 are represented by bit8~bit0 in binary values. Bit8~bit0 indicates DI9~DI1 (from left to right) Digital input contact source control switch (PD16): 11100000 The external hardware terminal: 100001111 (1 means ON, 0 means OFF) Communication control digital input contact (PD25): 000111000. In summary,DI9~DI7 (communication address 0x0204) is determined by the communication,				
		and DI6~DI1 is determined by the external hardware terminal. Therefore, the last DI status is 000 001111.				
PD26		Reserved				
PD27	DOD (*)	Definition of output signal contact To define the output contact of output signal DO1~DO5. bit0~bit4 of this parameter shows the contact of DO1~DO5. 0 : output contact is normally open(a contact). 1 : output contact is normally closed(b contact)	All	0004h	0000h ~ 001F	N/A

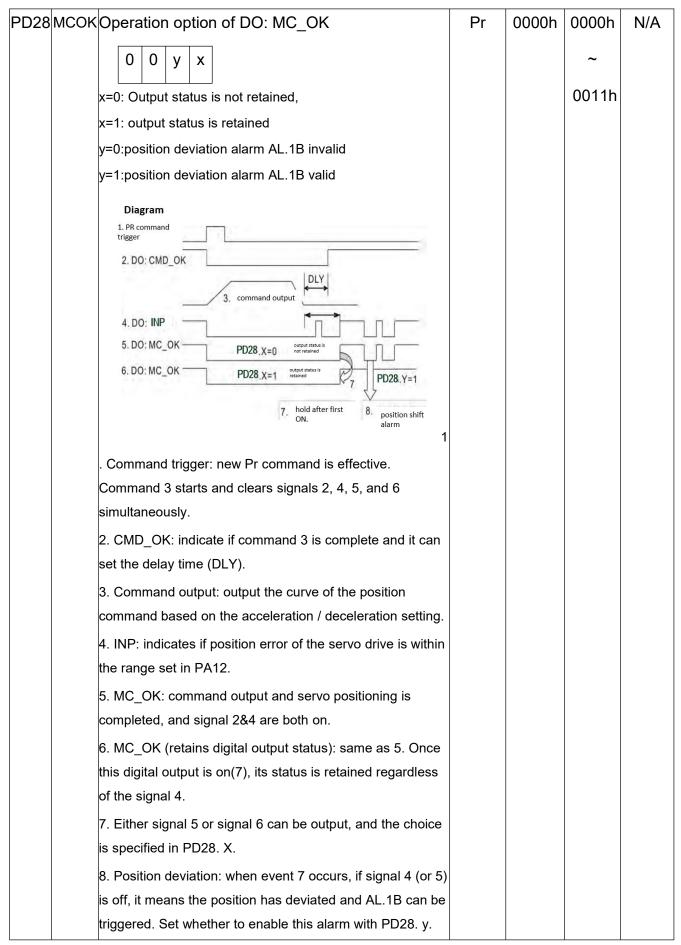

PD29	DID	Software DI A/B contact setting	All	0000h	0000h	N/A
		1. The corresponding bit is 0:			~	
		If DI setting is LSP/LSN/EMG, B contact is open.			01FFh	
		If DI setting is not LSP/LSN/EMG,A contact is open.			VIEEII	
		2. The corresponding bit is 1:				
		If DI setting is LSP/LSN/EMG, A contact is open.				
		If DI setting is not LSP/LSN/EMG,B contact is open.				
		Note:If any DI is assigned to be controlled by the PC				
		communication software, this application is invalid(Refer to				
		PD16).				
PD30		Reserved				
~						
PD31						
PD32	SDLY	Servo ON delay time	All	0	0	msec
	(*)	To set the delay time when Servo ON is			~	
		activated.			3000	
PD33	SFDO	Software DO register	All	0000h	0000h	N/A
		Bit0~bit7 of this setting controls the			~	
		S_DO0~S_DO7 of DO signal separately.			00FFh	
PD37	FNO5	Function option 5	Pt	0000h	0000h	N/A
	(*)	0 0 0 x	Pr		~	
		When X=1, the left and right extreme alarm codes are	S		0001h	
		displayed as follows				
		When LSP_OFF and LSN_ON, AL.13 abnormal alarm				
		occurs.				
		When LSP_ON and LSN_OFF, AL.65 abnormal alarm				
		occurs.				
		When LSP_OFF and LSN_OFF,AL.13 abnormal alarm				
		occurs.				

No	Abbr.	Pa	arameter	function a	and desci	ription		mode	Default	Ran	ge	Unit	
PE01	PDEF1	Definitior The detaile		ng ers are def	ined as fol	lows:		Pr	000000 00h	00000 ~ 10FFF		N/A	
		31~28	27~24	23~20	19~16	15~12	11~	·8 7	~0 bit				
		воот	_	DLY	_	DEC1	AC	СР	ATH				
		 PATH:path type(bit0~bit7) 											
		0: Stop: ho	ming com	plete and st	top								
		1~63:Auto	: homing c	omplete an	d execute t	the specifie	ed pat	h.					
		• ACC:	select acce	eleration tin	ne 0 - F , w	hich is cor	respo	nd to PF	49~PF64.				
		DEC1: dec	eleration ti	me selectio	on for first h	noming, DE	EC set	ting is 0	∼F, which is	s corre	espor	nd to	
		PF4	9~PF64.										
		DLY: delay time selection, DLY setting is 0~F, which is correspond to PF65~PF80.											
				drive is po	wered on,	whether to	sear	ch for the	e origin				
			not execute	-									
				-					er power on				
					itions, the r	elated sett	ings f	or homir	ng also inclu	ide:			
			homing mo		-f	a far tha a	-ii						
			-	ed setting o		-	-	overate	o O. Thio fu	nation	io uo		
			_	coordinate				ay not b	e 0. This fu	nction	is us	eu as	
		A. SDC o	does not pr	ovide the S	SDA origin	stop functio	on to s	set whet	her to retur	n to th	e ori	gin	
		after h	noming,this	should ope	erate by an	other meth	nod. A	fter the	origin (sens	or or Z	Z) is	found,	
		the se distan		decelerate	to stop. Th	ne stop pos	ition e	exceeds	the origin v	vith a s	short		
		lf retu	rning to the	e origin is n	ot needed,	set PATH	to 0.						
		lf retu ORG_	-	e origin is n	eeded, set	PATH to a	a non-	zero val	ue and set l	PABS	=		
		the co	ordinate as	•	oving, then	•			ove an offs et ORG_DB				

PE02	PDEF1	Or	igin offset va	alue definitic	'n	Pr	0	(-2 ³¹ +1	N/A
			31~16	15~0 bit)	
			ORG_DE	EF(32bit)				~	
								(2 ³¹ -1)	
PE03	PDEF1	PA	TH#1 defini	tion		Pr	000000	000000	N/A
		Th	e detailed p	arameters a	re defined as follows		00h	00h	
				•	for detailed operation			~	
		ins	tructions of	PR.				FFFFF	
								FFFh	

		31~28	27~24	23~20	19~16	15~12	11~8	7~4	3~0 b
PE	E03	_	-	DLY	_	-	-	OPT	TYPE
PE	04				DATA((32bit)	1		-
•	TYPE	, OPT							
		0	PT option			F	ath TYPE		
	7	6	5	4 BIT			3~0 BIT		
	-	UNIT	AUTO	INS	1: SPE	ED, consta	ant speed	control.	
						GLE positio	oning cont	rol. It stop	0S
		CMD	OVLP	INS		O positic atically load d	-		en
	-	-	-	INS	7: JUN	IP, jump to	the specif	fied path.	
	-	-	AUTO	INS	8: write	e specified	parameter	r to specif	ied
					path.				
		••••••••••	0 0						
•	softw INS: i OVLF Wher	are limits. f INS is se ?: allow ov n overlapp	2, or 3 is ex t, it can inte erlapping of ng in positi	errupt the p f the next p on mode, [can be inte revious pr path. Overl DLY is inva	ogram and apping is r alid.	execute t	his progra	am!
•	softw INS: i OVLF Wher AUTC	are limits. f INS is se ?: allow ov n overlapp D: executin	t, it can inte erlapping o	errupt the p f the next p on mode, [PR path wł	can be inte revious pr path. Overl DLY is inva nen the cu	ogram and apping is r alid. rrent PR co	execute t	his progra	am!

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PE04		PATH#1 data PE03 defines the property of the target point; PE04 defines the target position of PE03 or the target PATH_NO for the Jump. command. Note: PATH: Program	Pr	0	using non-index positionin g function $(-2^{31}) \sim$ $(2^{31}-1)$ using index positionin g function $(0\sim41943)$ 04)	N/A
PE05	PDEF2	PATH#2 definition Refer to description of PE03.	Pr	000000 00h	0000000 0h~FFFF FFFFh	N/A
PE06		PATH#2 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE07		PATH#3 definition Refer to description of PE03.	Pr	000000 00h	0000000 0h~FFFF FFFFh	N/A
PE08		PATH#3 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE09	PDEF4	PATH#4 definition Refer to description of PE03.	Pr	000000 00h	0000000 0h~FFFF FFFFh	N/A
No	Abbr.	Parameter function and description	mode	Default	Range	Unit

PE10	PDAT4	PATH#4 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE11	PDEF5	PATH#5 definition Refer to description of PE03.	Pr		0000000 0h~FFFF FFFFh	N/A
PE12	PDAT5	PATH#5 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE13	PDEF6	PATH#6 definition Refer to description of PE03.	Pr		0000000 0h~FFFF FFFFh	N/A
PE14	PDAT6	PATH#6 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	
PE15	PDEF7	PATH#7 definition Refer to description of PE03.	Pr		0000000 0h~FFFF FFFFh	N/A
PE16	PDAT7	PATH#7 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE17	PDEF8	PATH#8 definition Refer to description of PE03.	Pr		0000000 0h~FFFF FFFFh	N/A
PE18	PDAT8	PATH#8 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE19		PATH#9 definition Refer to description of PE03.	Pr		0000000 0h~FFFF FFFFh	N/A
PE20	PDAT9	PATH#9 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE21	PDEF10	PATH#10 definition Refer to description of PE03.	Pr	000000 00h	0000000 0h~FFFF	N/A

					FFFFh	
PE22	PDAT10	PATH#10 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE23	PDEF11	PATH#11 definition Refer to description of PE03.	Pr		0000000 0h~FFFF FFFFh	N/A
PE24	PDAT11	PATH#11 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE25	PDEF12	PATH#12 definition Refer to description of PE03.	Pr		0000000 0h~FFFF FFFFh	N/A
PE26	PDAT12	PATH#12 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE27	PDEF13	PATH#13 definition Refer to description of PE03.	Pr	000000 00h	0000000 0h~FFFF FFFFh	N/A
PE28	PDAT13	PATH#13 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE29	PDEF14	PATH#14 definition Refer to description of PE03.	Pr	000000 00h	0000000 0h~FFFF FFFFh	N/A
PE30	PDAT14	PATH#14 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE31	PDEF15	PATH#15 definition Refer to description of PE03.	Pr		0000000 0h~FFFF FFFFh	N/A
PE32	PDAT15	PATH#15 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE33	PDEF16	PATH#16 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE34	PDAT16	PATH#16 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A

PE35	PDEF17	PATH#17 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE36	PDAT17	PATH#17 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE37	PDEF18	PATH#18 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE38	PDAT18	PATH#18 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE39	PDEF19	PATH#19 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE40	PDAT19	PATH#19 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE41	PDEF20	PATH#20 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE42	PDAT20	PATH#20 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE43	PDEF21	PATH#21 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE44	PDAT21	PATH#21 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE45	PDEF22	PATH#22 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A

PE46		PATH#22 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE47	PDEF23	PATH#23 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE48		PATH#23 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE49	PDEF24	PATH#24 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE50	PDAT24	PATH#24 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE51		PATH#25 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE52	PDAT25	PATH#25 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE53	PDEF26	PATH#26 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE54		PATH#26 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE55		PATH#27 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE56		PATH#27 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A

PE57	PDEF28	PATH#28 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE58	PDAT28	PATH#28 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE59	PDEF29	PATH#29 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE60	PDAT29	PATH#29 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE61	PDEF30	PATH#30 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE62	PDAT30	PATH#30 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE63	PDEF31	PATH#31 definition Refer to description of PE03.	Pr	000000 00h	0000000 0h~FFFF FFFFh	N/A
PE64	PDAT31	PATH#31 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE65	PDEF32	PATH#32 definition Refer to description of PE03.	Pr	000000 00h	00000000h ~FFFFFF Fh	
PE66	PDAT32	PATH#32 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE67	PDEF33	PATH#33 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A

PE68		PATH#33 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE69	PDEF34	PATH#34 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE70		PATH#34 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE71	PDEF35	PATH#35 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE72		PATH#35 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE73		PATH#36 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE74		PATH#36 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE75	PDEF37	PATH#37 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE76		PATH#37 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE77	PDEF38	PATH#38 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE78		PATH#38 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A

PE79	PDEF39	PATH#39 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE80	PDAT39	PATH#39 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE81	PDEF40	PATH#40 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE82	PDAT40	PATH#40 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE83	PDEF41	PATH#41 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE84	PDAT41	PATH#41 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE85	PDEF42	PATH#42 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE86	PDAT42	PATH#42 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE87	PDEF43	PATH#43 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A
PE88	PDAT43	PATH#43 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PE89	PDEF44	PATH#44 definition Refer to description of PE03.	Pr	000000 00h	00000000 h~FFFFF FFFh	N/A

PE90	PDAT44	PATH#44 data	Pr	0	(-2 ³¹ +1) ~	N/A
		Refer to description of PE04.			(2 ³¹ -1)	
PE91	PDEF45	PATH#45 definition	Pr	000000	00000000	N/A
		Refer to description of PE03.		00h	h~FFFFF	
					FFFh	
PE92	PDAT45	PATH#45 data	Pr	0	(-2 ³¹ +1) ~	N/A
		Refer to description of PE04.			(−2 ³¹ +1) ~ (2 ³¹ -1)	

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PF01	PDEF49	PATH#49 definition Refer to description of PE03.	Pr	000000 00h	00000000h ~FFFFFF Fh	N/A
PF02	PDAT49	PATH#49 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF03	PDEF50	PATH#50 definition Refer to description of PE03.	Pr	000000 00h	00000000h ~FFFFFFF Fh	N/A
PF04	PDAT50	PATH#50 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF05	PDEF51	PATH#51 definition Refer to description of PE03.	Pr	000000 00h	00000000h ~FFFFFF Fh	N/A
PF06	PDAT51	PATH#51 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF07	PDEF52	PATH#52 definition Refer to description of PE03.	Pr	000000 00h	00000000h ~FFFFFF Fh	N/A
PF08	PDAT52	PATH#52 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF09	PDEF53	PATH#53 definition Refer to description of PE03.	Pr	000000 00h	00000000h ~FFFFFFF Fh	N/A
PF10	PDAT53	PATH#53 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF11	PDEF54	PATH#54 definition Refer to description of PE03.	Pr	000000 00h	00000000h ~FFFFFF Fh	N/A
PF12	PDAT54	PATH#54 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF13	PDEF55	PATH#55 definition Refer to description of PE03.	Pr	000000 00h	00000000h ~FFFFFF Fh	N/A

PF14		PATH#55 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF15	PDEF56	PATH#56 definition Refer to description of PE03.	Pr	00h	00000000h ~FFFFFF Fh	N/A
PF16		PATH#56 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF17	PDEF57	PATH#57 definition Refer to description of PE03.	Pr	00h	00000000h ~FFFFFFF Fh	N/A
PF18	PDAT57	PATH#57 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF19	PDEF58	PATH#58 definition Refer to description of PE03.	Pr	00h	00000000h ~FFFFFFF Fh	N/A
PF20	PDAT58	PATH#58 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF21	PDEF59	PATH#59 definition Refer to description of PE03.	Pr	00h	00000000h ~FFFFFF Fh	N/A
PF22		PATH#59 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF23	PDEF60	PATH#60 definition Refer to description of PE03.	Pr	00h	00000000h ~FFFFFF Fh	N/A
PF24		PATH#60 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF25		PATH#61 definition Refer to description of PE03.	Pr	00h	00000000h ~FFFFFFF Fh	N/A
PF26	PDAT61	PATH#61 data Refer to description of PE04.	Pr	0	(−2 ³¹ +1) ~ (2 ³¹ -1)	N/A
PF27	PDEF62	PATH#62 definition Refer to description of PE03.	Pr	00h	000000000h ~FFFFFFF	N/A
PF28		PATH#62 data Refer to description of PE04.	Pr	0	(-2 ³¹ +1) ~ (2 ³¹ -1)	N/A

PF29	PDEF63	PATH#63 definition	Pr	000000	00000000h	N/A
		Refer to description of PE03.		00h	~FFFFFFF	
					Fh	
PF30	PDAT63	PATH#63 data	Pr	0	(-2 ³¹ +1) ~	N/A
		Refer to description of PE04.			(2 ³¹ -1)	
PF31		Reserved				
PF32		Reserved				

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PF33	POV1	Speed setting of internal position command 1	Pr	50	1~6000	rpm
PF34	POV2	Speed setting of internal position command 2	Pr	10	1~6000	rpm
PF35	POV3	Speed setting of internal position command 3	Pr	200	1~6000	rpm
PF36	POV4	Speed setting of internal position command 4	Pr	300	1~6000	rpm
PF37	POV5	Speed setting of internal position command 5	Pr	500	1~6000	rpm
PF38	POV6	Speed setting of internal position command 6	Pr	800	1~6000	rpm
PF39	POV7	Speed setting of internal position command 7	Pr	1000	1~6000	rpm
PF40	POV8	Speed setting of internal position command 8	Pr	1200	1~6000	rpm
PF41	POV9	Speed setting of internal position command 9	Pr	1500	1~6000	rpm
PF42	POV10	Speed setting of internal position command 10	Pr	1800	1~6000	rpm
PF43	POV11	Speed setting of internal position command 11	Pr	2000	1~6000	rpm
PF44	POV12	Speed setting of internal position command 12	Pr	2200	1~6000	rpm
PF45	POV13	Speed setting of internal position command 13	Pr	2400	1~6000	rpm

PF46	POV14	Speed setting of internal position command 14	Pr	2700	1~6000	rpm
PF47	POV15	Speed setting of internal position command 15	Pr	3000	1~6000	rpm
PF48	POV16	Speed setting of internal position command 16	Pr	3000	1~6000	rpm
PF49	POA1	Acceleration/deceleration time of internal position command 1	Pr	200	1~65550	ms
		To set the accelerate/decelerate time in Pr mode, that is time needed from 0 to motor rated speed.				
PF50	POA2	Acceleration/deceleration time of internal position command 2 Refer to description of PF49.	Pr	200	1~65550	ms
PF51	POA3	Acceleration/deceleration time of internal position command 3 Refer to description of PF49.	Pr	300	1~65550	ms
PF52	POA4	Acceleration/deceleration time of internal position command 4 Refer to description of PF49.	Pr	500	1~65550	ms

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PF53	POV5	Acceleration/deceleration time of internal position command 6 Refer to description of PF49.	Pr	600	1~65550	ms
PF54	POV6	Acceleration/deceleration time of internal position command 6 Refer to description of PF49.	Pr	800	1~65550	ms
PF55	POV7	Acceleration/deceleration time of internal position command 7 Refer to description of PF49.	Pr	900	1~65550	ms
PF56	POV8	Acceleration/deceleration time of internal position command 8 Refer to description of PF49.	Pr	1000	1~65550	ms
PF57	POV9	Acceleration/deceleration time of internal position command 9 Refer to description of PF49.	Pr	1200	1~65550	ms
PF58	POV10	Acceleration/deceleration time of internal position command 10 Refer to description of PF49.	Pr	1400	1~65550	ms
PF59	POV11	Acceleration/deceleration time of internal position command 11 Refer to description of PF49.	Pr	1600	1~65550	ms
PF60	POV12	Acceleration/deceleration time of internal position command 12 Refer to description of PF49.	Pr	2000	1~65550	ms
PF61	POV13	Acceleration/deceleration time of internal position command 13	Pr	2500	1~65550	ms

		Refer to description of PF49.				
PF62	POV14	Acceleration/deceleration time of internal position command 14 Refer to description of PF49.	Pr	3000	1~65550	ms
PF63	POV15	Acceleration/deceleration time of internal position command 15 Refer to description of PF49.	Pr	4000	1~65550	ms
PF64	POV16	Acceleration/deceleration time of internal position command 16 Refer to description of PF49.	Pr	5000	1~65550	ms
PF65	DLY1	Delay time after internal position 1 completion To set the delay time in Pr mode.	Pr	0	0~32767	ms
PF66	DLY2	Delay time after internal position 2 completion Refer to description of PF65.	Pr	100	0~32767	ms
PF67	DLY3	Delay time after internal position 3 completion Refer to description of PF65.	Pr	200	0~32767	ms
PF68	DLY4	Delay time after internal position 4 completion Refer to description of PF65.	Pr	300	0~32767	ms
PF69	DLY5	Delay time after internal position 5 completion Refer to description of PF65.	Pr	500	0~32767	ms
PF70	DLY6	Delay time after internal position 6 completion Refer to description of PF65.	Pr	600	0~32767	ms
PF71	DLY7	Delay time after internal position 7 completion Refer to description of PF65.	Pr	800	0~32767	ms
PF72	DLY8	Delay time after internal position 8 completion Refer to description of PF65.	Pr	1000	0~32767	ms

PF73DLY9Delay time after internal position 9 completionPr1200	0~32767	m
Refer to description of PF65.		ms
PF74 DLY10 Delay time after internal position 10 Pr 1500 completion	0~32767	ms
Refer to description of PF65.		
PF75 DLY11 Delay time after internal position 11 Pr 2000 completion 2000	0~32767	ms
Refer to description of PF65.		
PF76 DLY12 Delay time after internal position 12 Pr 2300 completion 2300	0~32767	ms
Refer to description of PF65.		
PF77 DLY13 Delay time after internal position 13 Pr 2500 completion 2500) 0~32767	ms
Refer to description of PF65.		
PF78 DLY14 Delay time after internal position 14 Pr 3000 completion 2000 2000 2000	0~32767	ms
Refer to description of PF65.		
PF79 DLY15 Delay time after internal position 15 Pr 4000 completion 4000	0~32767	ms
Refer to description of PF65.		
PF80DLY16Delay time after internal position 16Pr5000completion </td <td>0~32767</td> <td>ms</td>	0~32767	ms
Refer to description of PF65.		
PF81 PDEC Deceleration time for auto-protection All 00000	00 0~~	N/A
00h	F0F0FFFF	
	h	

		The parar including:	neter se	tting is di	vided int	o D, C, B	9, A, W, Z	Z, Y, and	X (hexade	cimal),
		1. Decelera	ation time	when the a	auto-prote	ction functi	on is enab	led		
		Digit	D	С	В	A	W	Z	Y	Х
		functio	STP	Reserv	СТО	Reserv	SNL	SPL	NL	PL
		n		ed		ed				
		Range	0~F	_	0~F	-	0~F	0~F	0~F	0~F
		2. the mea	ning of the	e code is a	s follows		I	I		
		STP : The	e second o	deceleratio	n time of I	noming, DI	STOP dec	eleration t	ime	
		CTO : Th	e decelera	ation time v	when com	munication	timeout or	ABS com	munication a	larm
		occurs.								
		SNL : The	e decelera	tion time w	/hen the s	oftware ne	gative limit	alarm occ	urs.	
		SPL :The	SPL :The deceleration time when the software positive limit alarm occurs. NL : The deceleration time when the LSN reverse limit alarm occurs.							
		NL : The								
		PL : The deceleration time when the LSP positive limit alarm occurs.								
		0∼F is us	ed to inde	k the decel	eration tin	ne of PF49 [,]	~PF64			
		For exam	ple, if X is	set to A, th	e decelera	ation time c	of PL is det	ermined by	y the content	of PF58
PF82	PRCM	Pr comma	and trigg	er registe	er		Pr	0	0~~1000	N/A
(∎)			<u></u>							
. ,		Set PF82 to 0 to start homing								
		Set PF82 to	o 1~63 to e	xecute the	specified	PR proced	lure, which	is the san	ne as using	
		DI:CTRG+F	OSn.							
		You cannot	set PF82	to 64 ~ 999	99 as it's v	vrite-inhibit	(the value	exceeds th	ne valid rang	e).
		Write 1000 to execute stop command which is the same as DI:STOP.								
		When readi	ng PF82, i	f the comn	nand is inc	complete, th	ne drive re	ads the cu	rrent comma	nd. If the
			C I			•			e command i	
		complete, DO. TPOS is on, and motor position is reached, the drive reads the current command +20000. Commands triggered by DI are also applicable.								
		+20000. Co	iiiiiaiius i	inggorod b	y Braio ai	oo appiloar				
							PR#3. If t	he value re	ead is 3, it m	eans
		Example: If	set the po	sition com	mand as 3	3, it triggers			ead is 3, it mo	
		Example: If PR#3 is exe	set the po ecuting and	sition com d not comp	mand as 3 llete yet. If	3, it triggers f the value	read is 100	003, it mea		nmand

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PF83	EVON	PR number triggered by event rising edge	Pr		0000h~ DDDDh	N/A
		Parameter function:		<u> </u>		
		4 digits: UZYX				
		PR number executed when EVx is ON.				
		X=0:no action when EV1 is ON.				
		X=1~D:execute PR# 51~63 when EV1 is ON.				
		Y=0:no action when EV2 is ON.				
		Y=1~D:execute PR# 51~63 when EV2 is ON.				
		Z=0:no action when EV3 is ON.				
		Z=1~D:execute PR# 51~63 when EV3 is ON.				
		U=0:no action when EV4 is ON.				
		U=1~D:execute PR# 51~63 when EV4 is ON.				
PF84	EVOF	PR number triggered by event falling-edge	Pr	0000h	0000h~ DDDDh	N/A
		Parameter function: 4 digits: UZYX.		1	I	
		PR number executed when EVx is OFF.				
		X=0: no action when EV1 is OFF.				
		X=1~D: execute PR# 51~63 when EV1 is OFF.				
		Y=0: no action when EV2 is OFF.				
		Y=1~D:execute PR# 51~63 when EV2 is OFF.				
		Z=0: no action when EV3 is OFF.				
		Z=1~D: execute PR# 51~63 when EV3 is OFF				

		U=0: no action when EV4 is OFF. U=1~D: execute PR# 51~63 when EV4 is OFF.				
PF85	PMFM	PATH#1 to PATH#2 memory invalid		0000h	0000h	N/A
(=)		Parameter function: 4 digits: UZYX: X=0:PATH#1 data is hold when drive is power off X=1:PATH#1 data is not hold when drive is power off Y=0:PATH#2 data is hold when drive is power off Y=1:PATH#2 data is not hold when drive is power off The others reserved This parameter mainly allows users to write new target points continuously through	All		~ 0011h	

No	Abbr.	Parameter function and description	mode	Default	Range	Unit
PF86	SWLP	Positive software limit			-2 ³¹ +1	pulse
		In Pr mode, if the motor moves in the positive		2 ³¹ -1	~	
		direction and its feedback position exceeds the	Pr		2 ³¹ -1	
		value of PF86, AL.14 will occur.				
		Note: The position command mentioned above				
		is before the electronic gear ratio.				
PF87	SWLN	Negative software limit			-2 ³¹ +1	pulse
		In Pr mode, if the motor moves in the negative		-2 ³¹ +1	~	
		direction and its feedback position exceeds the	Pr		2 ³¹ -1	
		value of PF87, AL.15 occurs.				
		Note: The position command mentioned above				
		is before the electronic gear ratio.				
PF88		Reserved				
PF89	BLSF	Backlash compensation option	Pr. Pt	0	0	N/A
(*)		Setting value:			~	
		0:disable.			2	
		1:forward direction compensation .				
		2:reverse direction compensation.				
PF90	BLSP	Setting of backlash compensation function	Pr. Pt	0	-32767	pluse
		(before electronic gear ratio)			~	
					32767	
PF91	BLST	Backlash compensation time constant setting	Pr. Pt	0	0	0.
					~	1ms
					10000	
PF92		Reserved				
~						
PF99						

Table 8.1: Digital input(DI) function description:

Sign	Setting	DI function description	
SON	0x01	When this DI is on, servo will be activated.	
RES	0x02	When alarm occurs, some alarm will be cleared if RES is ON.	
PC	0x03	When PC is ON, it will switch the speed controller from proportional integral type to	
		proportional type.	
TL	0x04	N/A	
TL1	0x05	Internal torque limit 2 is valid when TL1 is on.	
SP1	0x06	Speed command option 1 in speed mode.	
SP2	0x07	Speed command option 2 in speed mode.	
SP3	0x08	Speed command option 3 in speed mode.	
ST1/RS2	0x09	In speed mode, when ST1/RS2 is ON, the servo runs in forward rotation.	
		In torque mode, when ST1/RS2 is ON, the servo runs in reverse rotation.	
ST2/RS1	0x0A	In speed mode, when ST2/RS1 is ON, the motor runs in reverse rotation.	
		In torque mode, when ST2/RS1 is ON, the motor runs in forward rotation.	
ORGP	0x0B	In internal register position mode, when searching for the origin, the servo will take	
		the position of this point as the origin after ORGP is turned on.	
SHOM	0x0C	In the internal position register mode, when this DI is on, it will activate the function to	
		search for the origin.	
CM1	0x0D	Electronic gear option 1 (position mode)	
CM2	0x0E	Electronic gear option 2 (position mode)	
CR	0x0F	When CR is on, the position control pulse errors will be cleared at the rising positive	
		edge. Pulse width should be above 10ms.	
CDP	0x10	Turn CDP on to change the gain values into the multiplier of parameter.	
LOP	0x11	In dual mode, turn LOP1 on to switch between different control modes	
EMG	0x12	When this EMG is OFF, the servo will be in an emergency state, When EMG is ON,	
		the emergency will be released	
POS1	0x13	Position command option 1 in internal register position mode	
POS2	0x14	Position command option 2 in internal register position mode	
POS3	0x15	Position command option 3 in internal register position mode	
CTRG	0x16	In Pr mode, the motor will run according to the command issued by the register when	
		this DI is on.	
LSP	0x18	To use as switch of forward rotation limit. When LSP is on, the motor will be operate	

		forwardly.	
LSN	0x19	To use as switch of reverse rotation limit. When LSN is on, the motor will be operate	
		reversely.	
POS4	0x1A	Position command option 4 in internal register position mode	
POS5	0x1B	Position command option 5 in internal register position mode	
POS6	0x1C	Position command option 6 in internal register position mode	
INHP	0x1D	Turn INHP on to enable inhabit pulse input function.	
EV1	0x1E	Turn EV1 on to enable Event trigger Pr command 1.	
EV2	0x1F	Turn EV2 on to enable Event trigger Pr command 2.	
EV3	0x20	Turn EV3 on to enable Event trigger Pr command 3.	
EV4	0x21	Turn EV4 on to enable Event trigger Pr command 4.	
ABSE	0x22	Turn ABSE on to enable Delta ABS transmission mode.	
ABSC	0x23	Turn SBSC on to enable Delta/Mitsubishi origin setting.	
ABSM	0x22	Turn ABSM on to enable Delta ABS transmission mode	
STOP	0x24	In the internal position register mode, when STOP is ON, the motor will stop.	
TC1	0x2D	Torque command option 1.	
TC2	0x2E	Torque command option 2.	
Pt-Pr	0x2F	Switch between Pt and Pr.	

Table 8.2: Digital output(DO) function description.

Sign	Setting	Digital output(DO) function description.	
RD	0x01	RD-SG is conductive if servo is ON.	
ALM	0x02	LM-SG is not conductive if the power supply is OFF or the protection circuit is	
		activated which will disconnect the main circuit.	
		ALM-SG is conductive one second after the power is turned on if there is no alarm.	
INP/SA	0x03	n the position mode, INP-SG is conductive if position errors is within the setting	
		range.	
		In the speed mode, SA-SG is conductive if motor speed is close to the setting range.	
HOME	0x04	HOME signal is on after the completion of homing.	
TLC/	0x05	In position and speed control mode, TLC-SG is conductive if motor torque reaches	

VLC		internal torque limit. TLC-SG is not conductive when SON is OFF.
		In torque control mode, VLC-SG is conductive when the motor reaches the speed limit
		with internal speed command 1~7. VLC-SG is not conductive when SON signal is
		OFF.
MBR	0x06	When using this signal, PA01 need to be set to $\Box 1 \Box \Box$, MBR-SG is not conductive
		when servo is off or any alarm occurs. When alarm occurs, the main circuit is
		connecting.
WNG	0x07	Using WNG signal to assign the pin function. The receiving signal cannot be used
		before setting. WNG-SG is conductive when alarm occurs. If no alarm occurs,
		WNG-SG is not conductive after turning power on 1 second.
ZSP	0x08	ZSP-SG is conductive when servo motor speed is below zero speed.
CMDOK	0x09	Signal CMDOK is on when internal position command completed or stopped.
OLW	0x0A	OLW is on when overload setting level (PA17) is reached.
MC_OK	0x0B	MC_OK is ON when both CMDOK and INP are ON. Otherwise, MC_OK is OFF.
OVF	0x0C	OVF is ON when motor position command pulse is over 2 ³¹ -1 or less than -2 ³¹ .
		Otherwise, OVF is off.
SWPL	0x0D	SWPL is on when position command is great than software positive limit(PF86),
		Otherwise, SWPL is OFF.
SWNL	0x0E	SWNL is ON when position command is less than software reverse limit(PF87),
		Otherwise, SWNL is off.
ABSW	0x0F	ABSW is to show Delta absolute encoder related alarm.
ABSV	0x10	If position of Mitsubishi absolute system is lost, ABSV is ON.
LOPM	0x17	LOPM shows current control mode(related to LOP) in switching control mode.

Note: PD27 can determine the DO output is normally open(a contact) or normally close (b contact).

9. Communication function


9.1 Communication hardware interface and wiring

The servo drive equips RS-485 and plug-play USB serial communication functions. You can use this function to drive the servo system, change the parameters and monitor the status of the servo system. However, RS-485 and USB communication functions cannot be used at the same time, the wiring instruction of RS485 is as follows:

RS-485


(1) External schematic diagram

You can use maximum 32 axis of servo drives from stations 1 to 32 on the same Bus

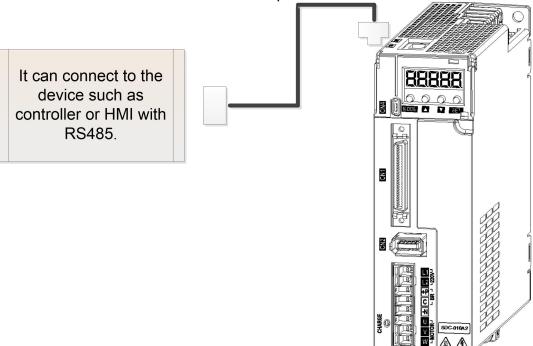

Connect to CN3 which is on top of the servo

(2) Wiring diagram

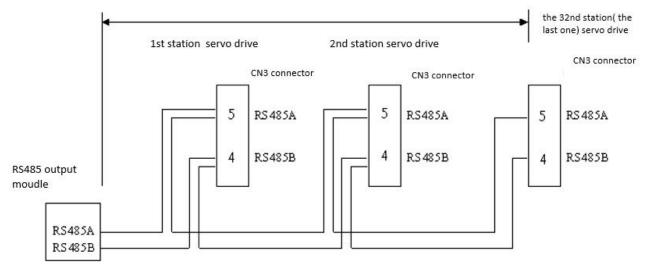


Note 1: the cable length can be up to 100 meters when the servo drive is installed in a quiet environment. If the transmission speed is over 38,400 bps, a 15-meter cable is recommended to ensure data transmission accuracy.

USB

(1) External schematic diagram

please use standard Mini-USB cable. It is recommended to use the USB cable with a magnetic ring, which has strong anti-interference function.

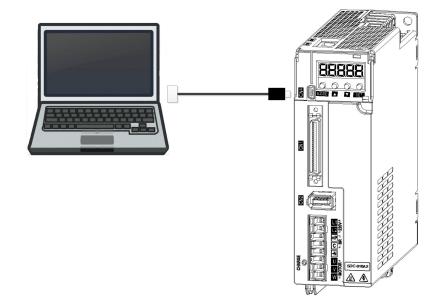


9.2 Communication specifications

When using RS-485 communication to operate servo drive, the communication specification of SERVO AMP is as follows:

(1) Communication device number (PC20)

Refer to PC20 and its setting range is 1~32.

 (2) Communication protocol option (PC22)



x=0: 7 data bit, No parity, 2 Stop bit	(Modbus, ASCII Mode)
x=1: 7 data bit, Even parity, 1 Stop bit	(Modbus, ASCII Mode)
x=2: 7 data bit, Odd parity, 1 Stop bit	(Modbus, ASCII Mode)
x=3: 8 data bit, No parity, 2 Stop bit	(Modbus, ASCII Mode)
x=4: 8 data bit, Even parity, 1 Stop bit	(Modbus, ASCII Mode)
x=5: 8 data bit, Odd parity, 1 Stop bit	(Modbus, ASCII Mode)
x=6: 8 data bit, No parity, 2 Stop bit	(Modbus, RTU Mode)
x=7: 8 data bit, Even parity, 1 Stop bit	(Modbus, RTU Mode)
x=8: 8 data bit, Odd parity, 1 Stop bit	(Modbus, RTU Mode)

(3) communication baud rate (PC22)

0	0	у	х
---	---	---	---

y=0: 4800bps,	y=1: 9600bps,	y=2: 19200bps
y=3: 38400bps,	y=4: 57600bps,	y=5: 115200bps

9.3 Modbus communication protocol

Before communicating with the computer, each servo drive must set its station number(PC20), and then the computer will control the individual servo drive according to the station number. The communication method is MODBUS Networks , and there are two mode of MODBUS network communication: ASCII (American Standard Code for Information Interchange) and RTU (Remote Terminal Unit). You can set the communication mode(ASCII or RTU) by setting PC22 according to your requirements.

Note: USB and MODBUS cannot used at the same time.

The Shihlin servo drive provides these function codes: 0x03, 0x04, 0x06, 0x10, which can do relevant communication control with the host controller.


9.3.1. ASCII mode

(a) Code description


Every 8-bit data frame consists of two ASCII characters. For example, if 1 byte of data 75H (hexadecimal notation) is represented by ASCII "75", which contains the ASCII code of '7' (37H) and the ASCII code of '5' (35H).

(b)Frame signification

11 bit frame (for 8-bit data length)

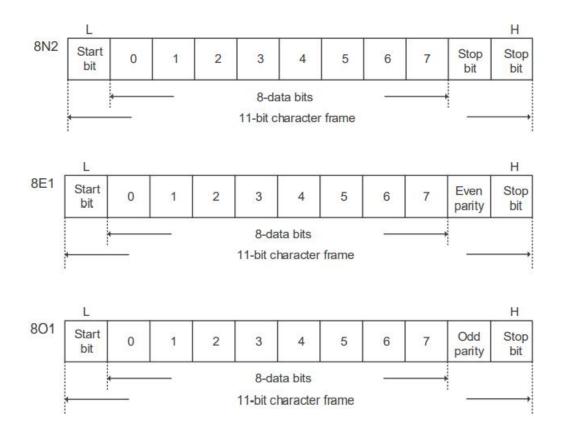

10 bit frame (for 7-bit data length)

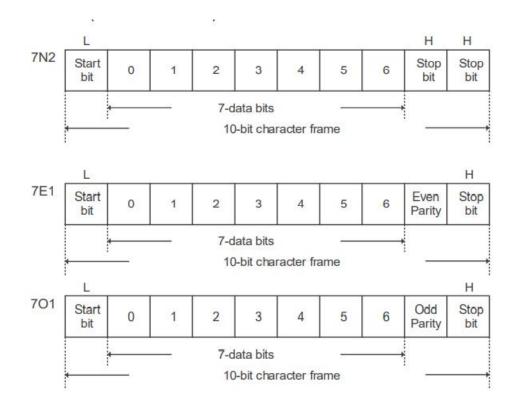

(c), Communication data structure

Bit code	Name	Description
STX	Start character	":" (3AH) of ASCII.
ADR	Device number	1 byte consists of 2 ASCII codes
CMD	Function code	1 byte consists of 2 ASCII codes
DATA(n-1)	_ /	
	Data content	n-word = 2n-byte consists of 4n ASCII codes, n ≤ 29
DATA(0)		
LRC	Error check	1 byte consists of 2 ASCII codes
End1	End code 1	(0DH) (CR) of ASCII.
End0	End code 0	0AH (LF) of ASCII

The detailed descriptions in the communication data format box are as follows:

STX(Communication start)

':' character

ADR(Device number)

communication device number is 1~32. For example: communicate with the servo drive of device number 18 (hexadecimal 12H).

ADR='1','2' => '1'=31H,'2'=32H

CMD(Function code) and DATA(data word)

The format of data characters depends on the command code, The common used command codes are as follows:

Example 1, function code 03H, accessing N words:

The maximum N is 29, for example: reads 2 continuous words which the start address is 0100H from servo drive device number 01H.

Command message(Host)

Response message(Slave)

STX	:		STX	:
ADR	0		ADR	0
	1			1
CMD	0		CMD	0
OWE	3			3
Start data	0			0
	1		Byte length	,
address	0			4
	0		-	

Word length	0		0
	0	Content of start data address 0100H	
Word length	0		0
	2		2
	F		1
LRC check		Content of the 2nd data	2
	9	address 0101H	2
			1
End1	End1 0DH(CR)	LRC check	С
Lindi			2
End0	0AH(LF)	End1	0DH(CR)
		End0	0AH(LF)

Example 2: function code 06H, writing single word

for example: writes data 325 (0145H) to start data address 0100H and the servo drive device number is 01H.

Command message(Host)

Response message(Slave)

STX	•	STX	:
ADR	0	ADR	0
	1		1
CMD	0	CMD	0
OME	6	OND	6
Start data	0	Start data	0
address	1	address	1

	0		0
	0		0
	0		0
Data content	1	Data content	1
Data content	4	Dula content	4
	5		5
LRC check	В	LRC check	В
	2		2
End1	0DH(CR)	End1	0DH(CR)
End0	0AH(LF)	End0	0AH(LF)

Example 3 : Function code 10H, writing multiple words

Example: writes data 0BB8H and 0000H to the start data address 0112H and the servo drive device number is 01H. In other words, 0BB8H is written into 0112H and 0000H is written into 0113H. The maximum allowable data in one single access is 10.

Command message(Host)

:
0
1
1
0
0
1
1
2

Response data(Slave)

	1
STX	:
ADR	0
	1
CMD	1
	0
	0
Start Data	1
Address	1
	2

	0
Data quantity	0
(word)	0
	2
Data quantity	0
(byte)	4
	0
Content of the 1	В
st Data	В
	8
	0
Content of the	0
2nd Data	0
	0
LRC check	1
	3
End1	0DH(CR)
End0	0AH(LF)

	0
Data quantity	0
(word)	0
	2
LRC check	D
	А
End1	0DH(CR)
End0	0AH(LF)

LRC error check(ASCII mode)

The error check in ASCII mode is LRC (Longitudinal Redundancy Check). To calculate the LRC value: add all the data from ADR to the last one, take the result by using 256 as the unit, and the excess part is removed (for example, the result obtained after adding is 128H in hexadecimal, then only 28H is taken), and then calculate 2"s complement. The 2's complement is LRC error value.

For example: read two words from the address 0104H and the servo drive device number is 01h.

STX	:
ADR	0
, dere	1
CMD	0
OND	3
	0
Start Data	1
Address	0
	4
	0
Data quantity	0
(word)	0
	2
LRC error check	F
	5
End1	0DH(CR)
End0	0AH(LF)

01H+03H+01H+04H+00H+02H = 0BH. The two's complement of F5H, thus LRC is 'F','5'.

End1, End0(communication is completed)

Use "0Dh" which character is '\r' [carriage return] and "0Ah" which character is '\n' [new line] to denote the end of communication data packet.

9.3.2. RTU mode

(a) Code description.

Each 8-bit data consists of two 4-bit hexadecimal characters. For example: 1-byte data is expressed as 62H.

(b) Communication data structure

Data structure is as blew:

Bit code	Name	Content
STX	Start word	To keep an idle more than 6mS
ADR	Device number	1 byte
CMD	Function code	1 byte
DATA(n-1)		
	Data content	n-word = 2n-byte,n<=29
DATA(0)		
CRC	Error check	2 byte
End	End code	To keep an idle more than 6mS

STX(start communication)

To keep an idle for more than 6mS.

ADR(Communication device number)

The device number is from 1 to 32. For example, the device number of the servo drive is 18 (hexadecimal 12H) ADR=12H.

CMD(Function code)and DATA(Data word)

The format of data characters are varied according to different function codes.

Example 1: function code: 03h, accessing multiple words.

The maximum allowable data in one single access is 29, for example: reads two continuous words from the start data address 0200H and the servo drive device number is 01H.

ADR	01H
CMD	03H
Start data	02H(high byte)
address	00H(low byte)
Data quantity(word)	00H
	02H
CRC Check Low	C5H(low byte)
CRC Check high	B3H(high byte)

Command message(Host)

Response message(Slave)

ADR	01H
CMD	03H
Data quantity(byte)	04H
Content of start	00H(high byte)
data address 0100H	B1H(low byte)
content of 2 nd data address	1FH(high byte)
0100H	40H(low byte)
CRC Check Low	A3H(low byte)
CRC Check high	D4H(high byte)

Example 2: function code: 06H, writing single word.

For example: writes data 100(0064H)to start data address 0200H and the servo drive device number is 01H.

Command message(Host)

ADR	01H
CMD	06H
Start data	02H(high byte)
address	00H(low byte)
Data content	00H(high byte)
Duta contont	64H(low byte)
CRC Check Low	89H(low byte)
CRC Check high	99H(high byte)

Response message(Slave)

ADR	01H
CMD	06H
Start data	02H(high byte)
address	00H(low byte)
Data content	00H(high byte)
	64H(low byte)
CRC Check Low	89H(low byte)
CRC Check high	99H(high byte)

Example 3 : function code 10H, writing multiple words.

writes data 0BB8H and 0000H to the start data address 0112H and the servo drive device number is 01H. In other words, 0BB8H is written into 0112H and 0000H is written into 0113H. The maximum allowable data in one single access is 10.

Command message(Host)

ADR	01H
CMD	10H
Start data	01H(high byte)
address	12H(low byte)
Data quantity	00H(high byte)
(word)	02H(low byte)
Data quantity(byte)	04H
Content of the 1	0BH(high byte)
st Data	B8H(low byte)
Content of the	00H(high byte)
2nd Data	00H(low byte)
CRC Check Low	FCH(low byte)
CRC Check high	EBH(high byte)

Response message(Slave)

ADR	01H
CMD	10H
Start data	01H(high byte)
address	12H(low byte)
Data quantity	00H(high byte)
(word)	02H(low byte)
CRC Check Low	E0H(low byte)
CRC Check high	31H(high byte)

CRC error check(RTU mode) value calculation

The error check in RTU mode is CRC (Cyclical Redundancy Check) below is steps description to calculate CRC error check value:

Step 1: Load a 16-bit register with the content of FFFFH, which is called the "CRC" register.

Step 2: Perform Exclusive OR calculation between the first byte of the command message and the low byte of the 16-bit CRC register, and then save the result in the CRC register.

Step 3: Check the least significant bit (LSB) of the CRC register. If the bit is 0, shift the register one bit to the right. If the bit is 1, shift the register one bit to the right and execute (CRC register) XOR (A001H).

Step 4: Repeat step 3 for 8 times and then go to step 5.

Step 5: Repeat steps 2 and 3 until all bytes have been processed. The content of the CRC register is the CRC value.

Note:after calculating the CRC error check value, fill in the low word of the CRC value in the command message, and then the high word. Please refer to below example:

Example: reads two words from the data address 0101H and the servo drive device number is 01H. if the final content of the CRC register calculated from the ADR to the last byte of the data number is 3794H, the command message will be as follows. And you need note that 94H is transfer before 37H.

ADR	01H
CMD	03H
Start data address	01H(high byte)
	01H(low byte)
Data quantity	00H(high byte)
	02H(low byte)
CRC Check Low	94H(low byte)
CRC Check high	37H(high byte)

End1, End0(communication is completed)

Keeping an idle more than 6mS means communication is completed.

CRC program example

This function calculates the CRC value in the C language. It needs two parameters

unsigned char* data;

unsigned char length

This function will return the CRC value of unsigned integer type.

unsigned int crc_chk(unsigned char* data, unsigned char length)

{

}

```
int j;
unsigned int reg_crc=0xFFFF;
while(length--)
{
    reg_crc^= *data++;
    for (j=0; j<8; j++)
    {
        if(reg_crc & 0x01) /*LSB(bit 0) = 1 */
            reg_crc = (reg_crc >> 1)^0xA001;
        else
            reg_crc = (reg_crc>>1);
    }
}
return reg_crc;
```

(c) Function code and error code.

The function code and error code of the servo drive is introduced as follows:

Function code	Description
03H	Read parameter
04H	Read parameter(Read only)
06H	Write one single parameter
10H	Write multiple parameter

Function code 03H indicates reading parameter, The maximum allowable parameter in one single access is 29.

Function code 04H indicates accessing the read only parameter, The maximum allowable parameter in one single access is 29.

Function code 06H indicates writing a single parameter.

Function code 10H indicates writing multiple parameters, and the maximum allowance is 10,

Error code	Description
01	Function code error
02	Parameter address error
03	Parameter range error

Error code 01H indicates the received function code is wrong.

Error code 02H indicates the received parameter address is wrong. The parameter address range should be within 0x0000~0x20FF.

Error code 03H indicates the received parameter value is out of range base on below items:

1. Check whether the number of read data exceeds the range and current data (word) ranges is from 1 to 29 words.

2. Check whether the written parameter value exceeds the parameter defined range. In current communication address (0x0000~0x20FF), most addresses have a defined range. If some addresses are reserved and not used, the range is -32728~32767.

When an error occurs in the received data, the function code will be added 0x80, which means an error has occurred. The following message will be returned.

(a) ASCII MODE

(b) RTU mode

STX	(.)	Slave Address	01H
Slave Address	'0'	Function	83H
	'1'	Error code	02H

Function	'8'		CRC CHK Low	C0H
	'3'		CRC CHK High	F1H
Error code	'0'			
	'2'			
LRC CHK	'7'			
	'A'			
END1	CR	1		
END0	LF			
END1	'7' 'A' CR			


9.4 Setting and accessing communication parameters

(1) Status monitor(Read only)

Communica tion address	Content	Data length
0x0000	Motor feedback pulses [pulse]	2words
0x0002	Number of command pulses[pulse]	2words
0x0004	Number of pulses error [pulse]	2words
0x0006	Command pulse input frequency [Hz]	2words
0x0008	Motor speed [rpm]	2words
0x000A	Analog speed command/limit voltage [V] (Display 2 decimal point)	2words
0x000C	Speed input command/limit [rpm]	2words
0x000E	Analog Torque command/limit voltage [V] (Display 2 decimal point)	2words
0x0010	Torque input command/limit [%]	2words
0x0012	Effective load ratio [%]	2words

0x0014	Peak load ratio [%]	2words
0x0016	DC bus voltage [V]	2words
0x0018	Load to motor inertia ratio [times] (Display 1 decimal point)	2words
0x001A	Instantaneous torque [%]	2words
0x001C	Regeneration load ratio [%]	2words
0x0020	The absolute pulse number relative to encoder Z phase [pulse] (Note 1)	2words
0x0022	Pulse number of pulse position command(after E-gear) [pulse]	2words
0x0024	Motor feedback pulse number(before E-gear) [pulse]	2words
0x0026	Pulses error number(before E-gear) [pulse]	2words

Note 1: The absolute pulse number of encoder Z phase origin is 0. It is +5000 or -4999 pulses when the motor rotates in the forward or reverse direction as below picture shows:

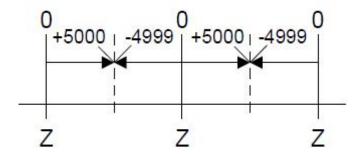

Every two Z-phase pulse commands interval is 10000 pulse.

(2) Digital IO monitor(read only)

(a) IO pin status

Communica	Content	Data
tion address		length
0x0204	To show the ON/OFF status of DI, the pin assignment is as follows	1word

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	Bit number
DI8	DI7	DI6	DI5	DI4	DI3	DI2	DI1	Pin number
Bit15	Bit14	Bit13	Bit12	Bit11	Bit10	Bit9	Bit8	Bit number
							DI9	Pin number

Note: The status of this digital IO pin is the integrated data with both input contact (DI) source control switch (PD16) and the communication control digital input contact status (PD25),below example will further illustrate this:

The external hardware terminals DI9~DI1 status are represented by bit8~bit0 in binary values as below:

Digital input contact source control switch (PD16): 111000000.

The state of the external hardware terminal: 100001111 (from left to right are DI9~DI1, 1 means ON, 0 means OFF).

Communication control digital input status (PD25): 000111000.

In summary, DI9~DI7 of the digital input terminal status (communication address 0x0204) is determined by the communication, and DI6~DI1 is determined by the status of the external hardware terminal.

Therefore, the status of digital input terminal (communication address 0x0204) is represented as 000001111.

Communication address	Content	Data length
0x0205	To show the ON/OFF status of DO, the pin assignment is as follows	1word

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	Bit number
			DO	DO	DO	DO	DO	Pin
			5	4	3	2	1	number

(b) IO pin function

communicatio n address	Content	Data length
0x0206~0x020 D	Display the current DI/DO function definition, the pin assignment is as follows	1word

Note: if DI/DO functions are not applicable to the current control mode, return 0.

Ex: if in speed control mode, PD07=0x000B, then the bit0~bit7 of Address 0x0208 will return 0.

Address : 0x0206

Bit8~Bit15	Bit0~bit7	Bit number
DI1	DI2	Pin number
0x00~0x2F	0x00~0x2F	Function option

Address : 0x0207

Bit8~Bit15	Bit0~bit7	Bit number
DI3	DI4	Pin number
0x00~0x2F	0x00~0x2F	Function option

<u>Address : 0x0208</u>

Bit8~Bit15	Bit0~bit7	Bit number
DI5	DI6	Pin number
0x00~0x2F	0x00~0x2F	Function option

Address : 0x0209

Bit8~Bit15	Bit0~bit7	Bit number
DI7	DI8	Pin number
0x00~0x2F	0x00~0x2F	Function option

Address : 0x020A

Bit8~Bit15	Bit0~bit7	Bit number
DI9	N/A	Pin number
0x00~0x2F		Function option

Address : 0x020C

Bit8~bit15	Bit0~bit7	Bit number
DO2	DO1	Pin number
0x00~0x3F	0x00~0x3F	Function option

Address : 0x020D

Bit8~bit15	Bit0~bit7	Bit number
DO4	DO3	Pin number
0x00~0x3F	0x00~0x3F	Function option

Address : 0x020E

Bit8~bit15	Bit0~bit7	Bit number
N/A	DO5	Pin number
	0x00~0x3F	Function option

(c) Current control mode and servo status(Read only)

Communica	Content	Data
tion address		length
0x0200	Bit0 : Servo ready status (0:Servo OFF, 1:Servo ON)	1word
0x0201	Bit0~Bit3 : display current control mode of drive.	1word
	0: Pt mode(extern pulse-train command).	
	1:absolute Pr position mode.	

2:incremental Pr position mode.	
3:speed control mode	
4:torque control mode	

Note 1: The DI function selection definition table is as follows:

0x07	0x06	0x05	0x04	0x03	0x02	0x01	0x00	Function selection code
SP2	SP1	TL1	TL	РС	RES	SON	N/A	Signal code
0x0F	0x0E	0x0D	0x0C	0x0B	0x0A	0x09	0x08	Function selection code
CR	CM2	CM1	SHOM	ORGP	ST2/RS1	ST1/RS2	SP3	Signal code
0x17	0x16	0x15	0x14	0x13	0x12	0x11	0x10	Function selection code
	CTRG	POS3	POS2	POS1	EMG	LOP	CDP	Signal code
0x1F	0x1E	0x1D	0x1C	0x1B	0x1A	0x19	0x18	Function selection code
EV2	EV1	INHP	POS6	POS5	POS4	LSN	LSP	Signal code
			0x24	0x23	0x22	0x21	0x20	Function selection code
			STOP	ABSC	ABSE	EV4	EV3	Signal code
0x2F	0x2E	0x2D	0x2C	0x2B	0x2A	0x29	0x28	Function selection code
Pt-Pr	TC2	TC1						Signal code

Note 2: The DO function selection definition table is as follows:

0x05	0x04	0x03	0x02	0x01	0x00	Function selection code
TLC/VLC	HOME	INP/SA	ALM	RD	N/A	Signal code
0x0B	0x0A	0x09	0x08	0x07	0x06	Function selection code

МС_ОК	OLW	CMDOK	ZSP	WNG	MBR	Signal code
		0x0F	0x0E	0x0D	0x0C	Function selection code
		ABSW	SWNL	SWPL	OVF	Signal code
				0x20~0x2	F	Function selection code
				SDO_0 ~ 1	SDO_F	Signal code

(3)Alarm information(Read only)

Communication	Content	Data
address		length
0x0100	Current alarm	1word
0x0101	The last alarm	1word
0x0102	The 2nd alarm in the past	1word
0x0103	The 3rd alarm in the past	1word
0x0104	The 4th alarm in the past	1word
0x0105	The 5th alarm in the past	1word
0x0106	The 6th alarm in the past	1word
0x0107	The 7th alarm in the past	1word
0x0108	The 8th alarm in the past	1word
0x0109	The 9th alarm in the past	1word
0x010A	The 10th alarm in the past	1word
<u> </u>	•	

Note: return 0x00ff means no alarm, return 0x0001 means AL.01, return 0x0012 means AL.12, and so on.

(4)Alarm data clearance (readable and writable)

Communication address	Content	Data length
0x0130	Clear current alarm if "0x1EA5" is written into this address. return current alarm code when accessing this address. The setting range is 0~0xFFFF.	1word
0x0131	Clear all the alarm record if "0x1EA5" is written into this address. return the last alarm when accessing this address The setting range is 0~0xFFFF.	1word

(5) Parameter reading and writing (readable and writable)

Communication address	Content	Data length
0x0300~0x03C5	There are 50 parameters in PA group, and the data length of each parameter is 32 bits and occupying 2 addresses: such as PA01: 0x0300~0x0301.	2word
0x0400~0x04C5	There are 60 parameters in PB group, and the data length of each parameter is 32 bits and occupying 2 address, such as PB01: 0x0400~0x0401.	2word
0x0500~0x05C5	There are 99 parameters in PC group, and the data length of each parameter is 32 bits and occupying 2 address, such as PC01 : 0x0500~0x0501.	2word
0x0600~0x06C5	There are 40 parameters in PD group, and the data length of each parameter is 32 bits and occupying 2 address, such as PD01 : 0x0600~0x0601.	2word
0x0700~0x07C5	There are 99 parameters in PE group, and the data length of each parameter is 32 bits and occupying 2 address, such as PE01 : 0x0700~0x0701.	2word
0x0800~0x08C5	There are 99 parameters in PF group, and the data length of each parameter is 32 bits.	2word

Note 1: the maximum allowance data in one access is 29 (29 words).

Note 2: When writing PA~PH group parameters by communication with MODBUS 0x06 or 0x10 function code, the drive firmware should check that if the written value exceed the range. If it exceed the range and communication error will occur, you can refer to P16 for instruction.

Communicati	Content	Data length
on address		
0x0140	After writing data 0x1EA5, all parameters of PA~PF group will be reset to the default value, and the writing will be completed after 3 seconds. The setting range is 0~0xFFFF	1word
	When reading this parameter, if 1 is returned, which means the drive is still writing EEPROM,and if 0 is returned, which means the writing to EEPROM is completed.	

(6) Reset to the factory default value(readable and writable)

(7)Software input contact control(readable and writable)

Step 1: select the input mode of DI contact.

Communicati	Content	Data length
on address		
	Digital input control source option(PD16)	
	In this parameter, each bit determines the signal input control source of 1 DI.	
	Bit0 ~ Bit8 correspond to DI1 ~ DI9	
0x061E	Bit setting shows as below:	2word
	0: input contact status is controlled by external hardware terminal.	
	1: input contact status is controlled by communication(PD25).	

Step 2:writing DI contact on/off status

Communicat	Content	Setting	Data length
ion address		range	
	To write the status of digital input	0000h	
	terminal(ON/OFF) as shown in below:	~	
0x0630	Writing data is valid only when the bit of PD16 corresponding SDI is 1, otherwise the actual	01FFh	2word
	digital input contact status will be still controlled		
	by external hardware contact.		
	Refer to PD25 for details.		

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	Bit n	umber
SDI8	SDI7	SDI6	SDI5	SDI4	SDI3	SDI2	SDI1	Pin ı	name
				1	1	1			
Bit9~Bit31							Bit8		
All those bit values should be set as 0.						SDI9			

Note: Cautions for test mode (terminal forced output control, JOG test, positioning test)

When using the communication commands in the test mode, the user must pay attention to the following matters, otherwise the drive will not work normally in the test mode

- 1. The drive can enter the test mode only when there is no alarm and the servo is in servo off state.
- 2. In the test mode, if the communication is interrupted for more than 1 second, the drive will turn Servo Off and exit the test mode. Therefore, the Host device should perform uninterrupted communication in the test mode (each communication command needs to be sent within 1 second). There are no special restrictions on the address for communication command checking. For example, to maintain the continuous communication status, you can send read command repeatedly to the communication address 0x0900.
- 3. After entering the test mode (terminal forced output control, JOG test, positioning test), The normal external hardware signal and software contact signal is invaled, except the EMG signal.

(8) DO force output control(readable and writable)

Step 1: Access the alarm and Servo ON information from the following communication address to make sure that there is no alarm and the servo is in servo Off status at present, otherwise the test mode will not be performed.

Communicati	Content	Data length
on address		
0x0900	0x0UVW, in which UV=Alarm information, W=1	1word
(Read only)	means SON signal ON, W=0 means SON signal OFF	

Step 2: Enter Forced DO mode and write data 0x0002, the definition of its communication address is as follows:

Communicatio n address	Content	Setting range	Data length
0x0901	To switch operation mode 0000: Exit test mode 0001: Reserved	0000~0004	1word
	0002: DO forced output(Output signal forced output)		
	0003: JOG operation 0004: positioning operation		

Note: When writing data 0x0002~0x0004 to the address 0x0901, the test mode cannot be entered during SERVO ON.

Step 3: writing DI contact on/off status

Communicat	Content	Setting	Data length
ion address		range	
0x0203	To write DI contact on/off status, as shown below	0~0x003F	1word

Bit5~Bit15	Bit4	Bit3	Bit2	Bit1	Bit0	Bit
						number
	DO5	DO4	DO3	DO2	DO1	Pin
						number

Step 4: Exit Forced DO mode: write data 0x0000 to the communication address 0x0901

(9) JOG test(readable and writable)

Step 1: Access the alarm and Servo ON information from the following communication address to make sure that there is no alarm and the servo is in servo Off status at present, otherwise the test mode will not be performed.

Communicati	Content	Data length
on address		
0x0900	0x0UVW, in which UV=Alarm information, W=1 means SON signal ON, W=0 means SON signal	1word
(Read only)	OFF.	

Step2: Enter JOG mode: write data 0x0003 to the communication address 0x0901.

Step 3: Set the acceleration and deceleration time constant of JOG mode.

Communicati on address	Content	Data length
0x0902	To set acceleration and deceleration time constant of JOG mode and positioning mode. (Range: 0~20000)(unit: ms)	1word

Step4: Set JOG speed command and start.

Communicati on address	Content	Data length
0x0903	To input the speed command of JOG and positioning mode	1word
	(Range0~6000) (unit: rpm)	

Step 5: JOG operation

Communicati	Content	Data length
on address		
0x0904	0: JOG operation is stopped.	1word
	1: JOG operation is running forwardly.	
	2: JOG operation is running reversely.	
	The setting range is 0~2.	

Step 6: exit JOG mode, write data 0x0000 to communication address 0x0901.

(10)Positioning test (readable and writable)

Step 1: Access the alarm and Servo ON information from the following communication address to make sure that there is no alarm and the servo is in servo Off status at present, otherwise the test mode will not be performed.

Communicati	Content	Data length
on address		
0x0900	0x0UVW, in which UV=Alarm information, W=1	1word
(Read only)	means SON signal ON, W=0 means SON signal OFF.	

Step 2: Enter positioning mode: write data 0x0004 to the communication address 0x0901.

Step3: Set the acceleration and deceleration time constant.

	Content	Data length
Communicatio		
n address		
0x0902	To set acceleration and deceleration time constant of JOG mode and positioning mode.	1word

	(Range: 0~20000)(unit: ms)	
--	----------------------------	--

Step 4: Set positioning speed command

Communicati on address	Content	Data length
0x0903	To input the speed command of JOG and positioning mode (Range:0~3000)(Unit:rpm)	1word

Step 5: Set the command pulse number of positioning mode

Communicatio	Content	Data length
n address		
0x0905~	Pulse number in positioning mode (0x0905 returns low 16	1word
0x0906	bits, 0x0906 returns high 16 bits).	
	The range is 0 \sim (2 ³¹ -1) (unit :pulse)	

Step 6: positioning test operation

Communicati on address	Content	Data length
0x0907	When the written data is 0, it means that the positioning operation is paused/stopped (send the command during the operation will pause operation, and send the 2 nd command will stop the operation) When the written data is 1, it means the positioning operation is running forwardly When the written data is 2, it means that the positioning operation is running reversely (after the drive receives the data, the position command will change to a negative value inside) (The setting range is 0~2)	1word

Step 7: Exit positioning mode: write data 0x0000 to the communication address 0x0901.

10. Troubleshooting

• When an alarm occurs, eliminate its cause first to ensure safety. Wait until the alarm is cleared and then restart operation, otherwise, it may cause injury.

 When alarm such as AL03, AL05, AL10, AL.34 occurs, please check the cause and eliminate it, turn off the power for more than 30 seconds to cool down the temperature of power module, and then restart the drive power to avoid the repeated occurrence of alarms causing damage to the drive.

10.1 Alarm list and corrective actions

An alarm or warning will be displayed when an error occurs during operation. please follow the section 11.2 to take appropriate actions. Setting PD19 to xxx1 to output the alarm code.

The alarm code is output based on the ON/OFF status between each PIN and SG, and the warning (AL12-AL1B) has no number.

When an alarm occurs, the output is alarm code in below list. In normal operation, the output is the setting signal before alarm occurs.

		Ala	arm co	ode		A	larm eliminatio	n
	Display	CN1	CN1	CN1	Alarm name	Power	"SET"Press	RES
		41	42	45		OFF→ON	SET button	signal
	AL.01	0	1	0	Over voltage	0		
	AL.02	0	0	1	Under voltage	0	0	0
	AL.03	0	1	1	Over current	0		
	AL.04	0	1	0	Regenerative error	0	0	0
	AL.05	1	0	0	Overload 1	0	0	0
Alarm	AL.06	1	0	1	Over speed	0	0	0
Irm	AL.07	1	0	1	Abnormal pulse command	0	0	0
	AL.08	1	0	1	Excessive deviation of	0	0	0
					Position command			
	AL.09	0	0	0	Serial communication error	0	0	0
	AL.0A	0	0	0	Serial communication	0	0	0
					timeout			

(CN1-41: DO1,CN1-42: DO2,CN1-45: DO5)

	AL.0B	1	1	0	Encoder error 1	0			
	AL.0D	1	1	0	Fan error	0			
	AL.0E	0	0	0	IGBT overheat	0			
	AL.0F	0	0	0	Memory error	0			
	AL.10	0	0	0	Overload 2	0			
	AL.11	1	1	1	Motor combination error	0			
	AL.20	1	1	1	Motor collision error	0			
	AL.21	1	1	1	Motor power cable	0			
					disconnection				
	AL.22	1	1	0	Encoder communication	0			
					error				
	AL.24	0	0	0	Motor encoder type error	0			
	AL.26	1	1	0	Encoder error 3	0			
	AL.27	1	1	0	Encoder error 4	0			
	AL.28	1	1	0	Encoder overheat	0			
	AL.29	1	1	0	Encoder 5(overflow)	0			
	AL.2A	1	1	0	Absolute encoder error 1	0			
	AL.2B	1	1	0	Absolute encoder error 2	0			
	AL.2E	0	1	1	Control circuit error	0			
	AL.2F	0	1	1	Regenerative energy error	0			
	AL.30	0	1	1	Pulse output frequency	0	0	0	
					excess				
	AL.31	0	1	1	Over current 2	0			
	AL.32	0	1	1	Control circuit error 2	0			
	AL.33	0	1	1	Memory error 2	0			
	AL.34	0	0	0	Overload 4	0			
	AL.12				Emergency stop	After elimi	nating the caus	e, it can be	
	AL.13				Forward and reverse limit	automatica	lly released.		
					error	_			
	AL.14				Software positive limit	_			
×	AL.15				Software negative limit				
Warning	AL.16				Early overload warning				
DI DI	AL.17				ABS timeout warning	_			
	AL.18				Reserved				
	AL.19				Pr command error		Executing homir	ng	
	AL.1A				Index coordinate undefined	After elimir	After eliminating the cause, it can be		
	AL.1B				Position shift warning	automatica	lly released.		

AL.61	Parameter group of PR is	0	ः(Note1)	0	
	out of range				
AL.1C	Early overload warning 4	After elimir	nating the cause,	it can be	
		automatica	lly released.		
AL.2C	Absolute encoder error 3	After elimir	nating the cause,	, it can be	
		automatically released.			
AL.2D	Encoder battery under	Eliminate the cause,and then restart			
	voltage	power.			
AL.62	Parameter number of PR is	0	0	0	
	out of range				
AL.63	Parameter value of PR is	0	0	0	
	out of range				
AL.64	Parameter setting of PR is	0	0	0	
	in error				

Note 1: turn Servo OFF → Servo ON can also eliminate the alarm.

Note 2: if an alarm occurs, DO ALM will activate.

Note 3: if a warning occurs, DO WNG will activate.

10.2 Causes and corrective actions

AL.01 Over voltage

Alarm cause	Checking method	Corrective action
Main circuit voltage	Use a voltmeter to check whether the	Use the correct voltage source
exceeds the rated value.	main circuit input voltage is within the	or connect to the transformer in
	rated allowable voltage value.	series.
Incorrect power input	Use a voltmeter to check if the voltage	Use the correct voltage source
(incorrect power system).	system complies with the specifications.	or connect to the transformer in
		series.
Malfunction of the servo	Use a voltmeter to check whether the	Send your servo drive back to
drive hardware.	input voltage of the main circuit is within	the distributor or manufacturer.
	the rated allowable voltage value, if yes,	
	and the error still occurs.	
Internal regenerative	Check whether the PD short-circuited	Wire the short-circuited piece
resistor or regenerative	piece is connected correctly, or whether	correctly or change the wiring
option is disconnected.	the regenerative resistor or option wiring	cable.
	is disconnected.	
Burned or damaged of the	Check whether the regenerative resistor	When using the internal
internal regenerative	or regenerative option is burnt or	regenerative resistor,please
resistor or regenerative	damaged.	replace the driver; When using
option.		the regenerative option,please
		replace it.
The capacity of internal	Refer to section 6.6.1 " Check the	Increase the capacity or add
regenerative resistor or	capacity of regenerative resistor".	additional regeneration option.
regenerative option is		
insufficient.		

AL.02 Under voltage

Alarm cause	Checking method	Corrective action
The input voltage of the	Check if the wiring of input voltage for	Recheck the voltage wiring.
main circuit is lower than	the main circuit is normal.	
the allowable rated value.		
No voltage input to the	Use a voltmeter to check if the voltage	Recheck the voltage switch.
main circuit.	for the main circuit is normal	

Incorrect power input	Use a voltmeter to check if the power	Use the correct voltage source or
(incorrect power system).	system complies with the specifications.	connect to the transformer in
		series.

AL.03 Over-current

Alarm cause	Checking method	Corrective action
Motor wiring is in error.	Check the wire connection sequence	Followed the wiring sequence
	between the motor and the servo drive.	as described in this manual.
The servo drive output is	Check the connection between the motor	Check and make sure that the
short-circuited.	and servo drive and make sure that the	wire is not short-circuited. Do
	wire is not short-circuited.	not expose the metal part of the
		wiring.
IGBT is abnormal.	Check if the temperature of the heat sink	Send your servo drive back to
	is abnormal.	the distributor or manufacturer.
Parameter setting is in	Check if the set value of the parameter is	Reset the parameter to the
error.	much greater than the default.	factory default setting and then
		modify the setting gradually.

AL.04 Regeneration error

Alarm cause	Checking method	Corrective action	
Invalid regenerative	Check if the regeneration switching	Send your servo drive back to	
switching transistor.	transistor is short-circuited.	the distributor or manufacturer.	
The regenerative resistor is	Check the connection for the	Reconnect the regenerative	
not connected.	regenerative resistor.	resistor.	

AL.05 Overload 1

Alarm cause	Checking method	Corrective action
The load is over the rated	Check if the load is too heavy.	Increase the motor capacity or
range and the servo drive		reduce the load.
is in a continuous overload		
condition.		
Improper parameter	Check if there is any mechanical	Execute auto gain tuning for
setting.	vibration.	proper gain value.
Unstable system.	Setting for acceleration or deceleration	Slow down the setting for
	is too drastic	acceleration or deceleration time.
Incorrect wiring of motor	Check if the wiring of the UVW and the	Wiring correctly.
and encoder.	encoder cables are correct.	

AL.06 Over speed

Alarm cause	Checking method	Corrective action
The input frequency of the	Check whether the input frequency of the	Correctly set the pulse
pulse command is too high.	pulse command is too high.	frequency.
Improper setting for	Check whether the acceleration and	Increase the acceleration and
acceleration and	deceleration time constant is too small.	deceleration time constant.
deceleration time		
parameter.		
Unstable servo system	Check whether the system has been	1. Adjust gain to proper value.
which cause large	vibrating.	2. if not useful, you can
overshoot.		(a)decrease the load inertia
		ratio.
		(b)change the accelerate and
		decelerate time constant.

AL.07 Abnormal pulse command

Alarm cause	Checking method	Corrective action
The frequency of the pulse	Use the scope to check the input	Correctly set the input pulse
command is over the rated	frequency.	frequency.
value		
Input pulse command	Replace the input pulse command device.	
device failure.		

AL.08 Excessive deviation of Position command

Alarm cause	Checking method	Corrective action
Improper setting of	Check if the acceleration and	Increase the acceleration and
acceleration and	deceleration time constant is too small.	deceleration time constant.
deceleration time		
parameter.		
Improper torque limit	Check if the torque limit	Increase the torque limit
setting.	parameter(PA05) setting is too small.	parameter setting value.
Gain value is set too low.	Check if the position gain value(PB07) is	Increase the position loop gain
	too small.	value.
Excessive external load.	Check the external load.	Reduce the external load or
		re-evaluate the motor capacity.

AL.09 Serial communication error

Alarm cause	Checking method	Corrective action
Incorrect communication	Check if the communication protocol	Correctly set the communication
protocol setting.	setting is correct.	parameter value.
Incorrect communication	Check communication address.	Correctly set communication
address.		address.
Incorrect communication	Check the access value.	Correctly set the value.
value.		

Alarm content: AL09 occurs when RS485 communication failure.

AL.0A Serial communication timeout

Alarm cause	Checking method	Corrective action
Servo drive has not	Check if the communication cable is	Replace the cable or reconnect
received the	loose or broken.	the wiring.
communication message		
for a long time and has		
timed out		
Improper parameter setting	Check the setting value of PC23.	Correctly set the value of PC23.
for PC23.		

AL.0B Encoder error 1

Alarm cause	Checking method	Corrective action
Encoder wiring is incorrect.	Check if the wiring follows the	Connect the wiring correctly.
	instructions in the user manual.	
Encoder connector is	Check the connection.	Reconnect the connector.
loose.		
Encoder is damaged.	Check if the motor is abnormal.	Replace the motor.
Encoder wiring is poor.	Check if there is any poor wiring.	Reconnect the wiring.

AL.0D Fan error

Alarm cause	Checking method	Corrective action
Drive fan stops working.	Turn off the power, replace the fan by yourself or send your servo drive back	
	to the distributor or manufacturer.	

AL.0E IGBT overheat

Alarm cause	Checking method	Corrective action
The load is continuously	Check if servo drive is overloaded or	Increasing the motor's capacity
over the rated range or the	motor is over-current.	or reducing the load.
servo drive output is	Check if the wiring of servo drive output	
short-circuited.	is correct.	

AL.0F Memory error

Alarm cause	Checking method	Corrective action
Memory data access	Reset parameter or restart power.	If the issue persists, after the
abnormal.		drive is reset,send it back to the
		distributor or manufacturer.

AL.10 Overload 2

Alarm cause	Checking method	Corrective action
Mechanical collision.	Check if there is a problem with the	Adjust the operation curve or
	rotation cycle.	install limit switches.
Motor wiring is wrong.	Check the motor wiring.	Wiring correctly.
The System is operating	Check if the mechanical has high	Reduce the stiffness setting or
with vibration.	frequency noise.	change to manual adjust gain.
Encoder error	Check if encoder is normal.	Change servo motor.

AL.11 Motor combination error

Alarm cause	Checking method	Corrective action
Motor and driver capacity is	Check if they match for each other in	Use the correct motor.
inconsistent.	capacity.	

AL.12 Emergency stop

Alarm content: AL.12 occurs when press emergency stop button.

Alarm cause	Checking method	Corrective action
Press emergency stop	Check the button position.	Turn on the emergency stop
button.		button.

AL.13 Forward and reverse limit error

Alarm cause	Checking method	Corrective action	
Positive limit switch is	Check the position of the switch.	Turn on the positive limit switch.	
triggered.			
Negative limit switch is	Check the position of the switch.	Turn on the negative limit switch.	
triggered.			

AL.14 Software positive limit

Alarm cause	Checking method	Corrective action	
In Pr Mode, the position	The software positive limit is calculate	Adjust the pulse number of the	
command pulse number	based on the position command rather	current position command to be	
exceeds the software	than the actual feedback position,	less than the software positive	
positive limit PF86.	because the command always arrives	limit.	
	earlier than the feedback. When this		
	limit protection is activated and the		
	actual position may not exceed the		
	limit, you can set an appropriate		
	deceleration time to achieve the		
	desired effect. You can refer to the		
	description on PF86.		

AL.15 Software negative limit

Alarm cause	Checking method Corrective action	
In Pr Mode, the position	n 1. Stop immediately or decelerate to Adjust the pulse number of t	
command pulse number	stop according to PF81 setting and	current position command to be
less than the software	keep locked.	greater than the software
negative limit PF87.		negative limit.

AL.16 Early overload warning

Alarm cause	Checking method	Corrective action	
The load exceeds the	1. Check whether the load is too heavy.	1. Refer to AL.05 corrective	
setting time of the	2. Check whether the PA17 setting is	action.	
protection curve xPA17.	too low.	2. Increase the setting value of	
(Please refer to section		PA17 or set the value to more	
13. 3 of SDC manual for		than 100 to disable this function.	
protection curve).			

AL.17 ABS timeout warning

Alarm cause	Checking method	Corrective action	
The signal waiting time of	Delta DIO communication: In absolute	Turn off the ABSE or ABSM	
absolute position	position communication, after the drive	signal to release the alarm, and	
communication is too long.	data is ready (ABSR), whether the host	check whether the	
	controller send a request (ABSQ) for	communication format of the	
	more than 5 seconds.	host controller is wrong.	
	Mitsubishi DIO communication: Please		
	refer to section 14. 1. 5 item 3.		
	(Transmission Error).		

AL.19 Pr command error

Alarm cause	Checking method	Corrective action
The position command	Incremental system:	Execute homing.
counter overflow.	If in Pr mode,the motor keeps running in a single	
	direction, it will cause the feedback position register	
	overflow and the coordinate system fail to reflect the	
	correct position. This error occurs if the PR absolute	
	positioning command is issued at this time.	
	Absolute system:	
	This error occurs when the absolute positioning	
	command is issued in the following conditions:	
	1. The feedback position register overflows.	
	2. The homing program has not been executed after	
	changing the electronic gear ratio (PA06, PA07).	
	3. Execute absolute position command when DO	
	HOME signal is OFF.	

AL.20 Motor collision error

Alarm cause	Ch	ecking method	Corrective action	
When the motor current	1.	Check if PA15 is on	1.	Set PA15 to 0 if you open it by
reaches the set value of	2.	Check if PA15 setting is too low,		mistake.
PA15 and the protection		and if PA16 setting time is too	2.	Compared with the actual torque
time of PA16 has run out.		short.		setting, if the setting is too low, it
				will malfunction, and if the setting
				is too high, the protection function
				will be invalid.

AL.21 Motor power cable disconnection

Alarm cause	Checking method	Corrective action
When Motor U,V,W cable	Check if the Motor U,V,W cable is loose.	Reconnect the U,V,W cables.
disconnection is detected.		

AL.22 Encoder communication error.

Alarm cause	Checking method		Co	rrective action
The encoder has three	1.	Check the grounding of motor.	1.	Connect the U,V,W ground terminal
consecutive CRC code	2.	Check whether the encoder		(green wire) to the heat sink base of
errors or internal		signal line is separated from the		the drive
memory errors.		power line or high current line to	2.	Please separate the encoder cable
		avoid interference.		from the motor power lines and high
	3.	Check whether the wire of		current line.
		encoder has an shielding net.	3.	Use the wire with shielding net
			4.	If the issue persists, send it back to
				the distributor or manufacturer.

AL.24 Motor encoder type error

Alarm cause	Checking method	Corrective action
Incremental motors are not	1. Check whether the motor has an	Use an absolute motor if you
allowed to use absolute	incremental or absolute encoder.	want to use the absolute
functions.	2. Check PA28.	function. Set PA28 to 0 if you do
		not use the absolute function,

AL.26 Encoder error 3

Alarm cause	Checking method	Corrective action
Encoder LED light decay or encoder rotation	Restart the motor and	If the issue persists,send it back to
count value is abnormal.	check whether the	the distributor or manufacturer.
	alarm recurs.	

AL.27 Encoder error 4

Alarm cause	Irm cause Chec		Co	rrective action
The internal memory of the	1.	Check the grounding of motor.	1.	Connect the U,V,W ground
encoder error.	2.	Check whether the encoder		terminal (green wire) to the heat
		signal line is separated from the		sink base of the drive.
		power line or high current line to	2.	Please separate the encoder
		avoid interference.		cable from the motor power
	3.	Check whether the wire of		lines and high current line.
		encoder has a shielding net.	3.	Use the wire with shielding net.
			4.	If the issue persists, send it back
				to the distributor or
				manufacturer.

AL.28 Encoder overheat

Alarm cause	Checking method	Co	prrective action
Encoder operating temperature is	Put encoder away from heat source	1.	Do not operate in high
higher than 95 $^\circ\!\mathrm{C}$.	and do not operate in high		temperature environment and
	temperature environment.		wait for the encoder board cool
			down to room temperature.
		2.	If the issue persists, send it
			back to the distributor or
			manufacturer.

AL.29 Encoder error 5

Alarm cause	Checking method	Corrective action
The revolution number of the absolute	Check if the number of revolution of	Re-execute homing and
motor is out of range.	the motor during operation within the	initialize absolute coordinate
	range between -32768 and +32767.	according to chapter 14
		description.

AL.2A Absolute encoder error 1

Alarm cause	Checking method	Corrective action
Encoder backup battery voltage is too low.	Check whether the battery voltage is lower than 2. 45V (TYP).	Replace the battery, and then re-execute homing and initialize absolute coordinate according to the description of chapter 14 or PA29.
Poor contact or disconnection of battery power supply circuit.	 Check the encoder wiring. Check the connection between the battery external box and drive. 	Connect or fix the connection to make sure the power supply of the encoder is normal, and then re-execute homing Refer to the description in Chapter 14.

AL.2B Absolute encoder error 2

Checking method	Corrective action
Restart the motor and check	If the issue persists, send it
whether the alarm recurs.	back to the distributor or
	manufacturer.
	Restart the motor and check

AL.2C Absolute encoder error 3

Alarm cause	Checking method	Corrective action
Replace the battery when the drive control power is OFF.	Do not replace or remove the battery when the drive control power is OFF.	Re-execute homing and initialize absolute coordinate according to chapter 14 description or PA29.
After activating the absolute function, the absolute position coordinate initialization has not been completed.	 Install the battery Check the connection between the battery external box and drive. Check the encoder wiring 	Execute homing and initialize absolute coordinate according to chapter 14 description or PA29.

AL.2D Encoder battery under voltage

Alarm cause	Checking method		Corrective action
Encoder backup battery voltage is too low.	1.	Check whether the panel	Replace the battery with a
		battery voltage is lower than	new one when the drive
		3. 0V (TYP).	control power is ON and
	2.	Check if the battery voltage is	re-power on servo drive to
		lower than 3. 0(TYP).	eliminate the AL.2D.

AL.2E Control circuit error

Alarm cause	Checking method	Corrective action	
When the motor is running with large external	Check whether the servo ON	Correctly operate the	
load, the servo ON (SON) state is instantly	(SON) is operate by mistake.	servo ON (SON)	
turned OFF→ON.		command.	
The drive current feedback is abnormal.	Restart the servo drive. If the issue persists, send your servo		
	drive back to the distributor or manufacturer.		

AL.2F Regenerative energy error

Alarm cause	Checking method	Corrective action
When the regenerative load rate	1. Check if the acceleration and	1. Adjust the acceleration and
exceeds 100%.	deceleration time is too short.	deceleration time, or reduce
	2. Check whether the frequency of	the frequency of forward and
	forward and reverse rotation is too	reverse rotation.
	fast.	2. Turn off and turn on the
		power to restart the servo
		drive.

AL.30 Pulse output frequency excess

Alarm cause	Checking method	Corrective action
Pulse output error which is caused by	Check the error history to see	Follow the corrective
encoder error.	whether it is accompanied with an	action of AL.0B, AL.0C,
	encoder error (AL0B, AL0C, AL22,	AL.22, AL.26, AL.27.
	AL26, AL27).	
The output pulse exceeds the hardware	Check Check whether the	Correctly set PA41 and
allowable range.	following conditions are occurred:	PA14: PA41> motor
	(a) Motor feedback speed> PA41.	speed and (motor
	(b) (Motor speed/60) x number of	speed/60) x the number of
	pulses output per revolution of	pulses output per
	the encoder> 20x10 ⁶	revolution of the detector
		<20x10 ⁶

AL.31 Over current 2

Alarm cause	Checking method	Corrective action
The drive current feedback is abnormal.	Restart the drive. If the issue persists, send your servo drive back to	
	the distributor or manufacturer.	

AL.32 Control circuit error 2

Alarm cause	Checking method	Corrective action
The FPGA chip inside the drive is abnormal.	Restart the drive. If the issue persis back to the distributor or manufactu	

AL.33 Memory error 2

Alarm cause	Checking method	Corrective action
Cache abnormal.	Restart the drive. If the issue persists, send your servo drive	
	back to the distributor or manufacturer.	

AL.34 Over load 4

Alarm cause	Checking method	Corrective action
Exceeds the drive rated load continuous using curve.	Check if the frequency of the operation cycle is too fast.	Increase motor capacity or reduce operation cycle frequency.
Unstable system.	Check whether the acceleration/deceleration time setting is too short.	Increase the setting value of acceleration and deceleration time.

AL.1A Index coordinate undefined

Alarm cause	Checking method	Corrective action
When using the indexing function, you need	Check whether homing has been	1. Before operating the
to execute homing to define the starting point	executed.	indexing function, make
of the indexing coordinates. otherwise, an		sure execute homing first
alarm will be triggered.		to avoid this alarm.
		2. Use DI:Alm Reset to
		clear the alarm when
		alarm occurs.
		3. This alarm can also be
		cleared when Servo ON.

AL.1B Position shift warning

Alarm cause	Checking method	Corrective action
MC_OK signal turns from ON to OFF, you	When DO: MC_OK is already ON,	1. Turn the RES signal
can refer to PD28 description.	it may turn OFF when DO: INP	ON.
	turns OFF, The position shift may	2. Press the Set button at
	cause by external force after motor	alarm display screen.
	completed positioning.	3. Turn the power
		OFF→ON
		4. Turn on SON.

AL.1C Early overload warning

Alarm cause	Checking method	Corrective action
The overload duration	Check whether the load exceeds the	1. Refer to AL.34 overload 4 alarm
exceeds the early warning	motor capacity.	instruction.
of protection curve.		

AL.61 Parameter group of PR is out of range

Alarm cause	Checking method	Corrective action
Parameter group of PR is out of range.	The group setting is out of range	Clear the alarm by any of
	when the PR program writes	the following solutions:
	parameters.	1. Turn the power
		OFF→ON
		2. Press the "SET"
		button at alarm
		display screen.
		3. Turn ON the RES
		signal.

AL.62 Parameter number of PR is out of range

Alarm cause	Checking method	Corrective action
Parameter number of PR is out of range.	The parameter number setting is out of range when the PR program writes parameters.	 Clear the alarm by any of the following solutions: 1. Turn the power OFF→ON. 2. Press the "SET" button at alarm display screen.
		3. Turn ON the RES signal.

AL.63 Parameter value of PR is out of range

Alarm cause	Checking method	Corrective action
The writing parameter value of PR command(TYPE=8) is out of range.	Check whether the writing parameter value of PR command(TYPE=8) is out of range.	 Clear the alarm by any of the following solutions: 1. Turn the power OFF→ON 2. Press the "SET" button at alarm display screen. 3. Turn ON the RES signal.

AL.64 Parameter setting of PR is in error

Alarm cause	Checking method	Corrective action
The PR program(TYPE=8) writes the	The PR program(TYPE=8) writes	Adjust PR commands and
parameter during Servo ON.	the parameter during Servo ON or	parameters
	the parameter value is	
	unreasonable	

AL.66 Motor stalled and overheated

Alarm cause	Checking method	Corrective action
The motor is running abnormally and may be	1. Please check whether the	Adjust PR commands and
blocked	transmission mechanism is operating abnormally 2. Do not touch the motor housing (high temperature)	parameters
	3. 3. If you need to disassemble the motor, please confirm that the temperature of the motor is correct before disassembling it.	

11. Specifications

11.1 Servo drive standard specifications

D	rive Mode SDC-□□		010	020	040	075	100					
S	ervo Moto SME-oc		L010	L020	L040	L075	L100					
1	Motor cap	oacity	100W 200W 400W 750W 1.0KW									
		Voltage 50/60Hz	Single-phase200~240VAC									
Main	Input	Permissible voltage 50/60Hz	Single-phase 170 \sim 264VAC									
circuit power		Permissible frequency			±5%							
		Voltage			0~240VA	۲C						
	output	Current	1. 0 A	1. 8 A	3. 2 A	5. 8 A	5. 8 A					
	Frequency			0~250 Hz								
	-	out voltage 50/60Hz	Single-phase 200 \sim 240VAC									
Control circuit		ssible voltage 50/60Hz	Single-phase170~264VAC									
power	Permis	sible frequency			±5%							
	Power	[•] consumption			30W							
	Control m	nethod		10	GBT-PWM Contro	ol(SVPWM)						
	Dynamic	brake			Built-in(soft	ware)						
Pr	otection	function	Over current, Under voltage, Over voltage, Overheat, Overload(Electron accumulated heat), Fan error protection, Pulse command error protection, Encoder error protection, Regenerative error protection, over speed protection, Excessive deviation protection, Serial									
					erial communicati rror, motor power							
F	eedback e	encoder	(Optical) Single-turn resolution 22bit; multi-turn 16bit (65,536 Turn) (Magnetic) Single-turn resolution 17bit; multi-turn 16bit (65,536 Turn)									
Com	municatio	on interface	(Magn	etic) Single-turn			05,536 I Urn)					
Com	municatio	miniteriace		260	RS485 (MODBL	13), USB						

	e Model Type DC-□□□A2	010	020	040	075	100				
	o Motor type ME-□□□□	L010	L020	L040	L075	L100				
Mot	or capacity	100W	200W	400W	750W	1.0KW				
	Input pulse			ow speed) / 4Mp	ps(high speed)					
	frequency Command	Open collector input: 200kpps								
-	pulse mode	CCW pulse +CW pulse ; Pulse + Direction ; A phase + B phase								
	Command source		Exter	nal pulse / intern	al register					
Position	Smoothing		Low-p	ass filter / Linear	/ PS-curve					
control	method									
mode	Command pulse ratio	Elect	-	A/B times A: 1 ed to :1/50 < A/E		~4194304				
-	Deviation excess	±3 revolutions								
	Torque limit		Int	ernal parameter	setting					
	Feed forward		Interna	l parameter setti	ng0~200%					
	compensation Speed control									
	range		Intern	al speed comma	ind 1:5000					
	Command		1	nternal register s	etting					
-	source				g					
Speed control	Smoothing method	Low-pa	ss filter / Linear	acceleration and	deceleration cur	ve / S-curve				
mode	Speed change		Load fluctua	ition 0~100% i	maximum ±0. 01	%				
	rate		Power fluc	tuation ±10% m	naximum0. 01%					
-		Amb	ient temperature	e fluctuation 0°C	°∼55°C : maximur	n ±0. 5%				
	Torque limit		Int	ernal parameter	setting					
	Bandwidth	Maximum 2KHz								
	Command source		I	nternal register s	etting					
Torque control	Smoothing method	Low-pass filter smoothing								
mode	Speed limit		Int	ernal parameter	setting					

Drive	e Model Type									
		010	020	040	075	100				
	o Motor type									
		L010	L020	L040	L075	L100				
Mot	tor capacity	100W 200W 400W 750W 1.0KW								
	Digital Input	Servo on, For	ward and reverse	e rotation limit , F	Pulse deviation el	limination,				
		Torque directi	on option, Speec	l command selec	ction, position co	mmand				
		selection, For	ward and reverse	e rotation comma	i <u>nd,</u> proportional	control				
		switching, Tor	que limit switchir	ng, Alarm reset, I	Emergency stop,	Control mode				
Digital		switching, E-g	ear ratio selectio	n						
input/	Digital Output	Torque limit reached, speed limit reached, Servo ready, Zero speed reached								
output		Target position reached, Target speed reached, Servo alarm, Servo warning								
		Homing is co	mpleted, Overlo	ad level reache	d, Internal positi	Internal position command is				
		completed, P	osition commar	nd overflows, S	oftware positive	e limit reached,				
		Software reve	rse limit reached							
	Tomo orotuno			0°C ~ 55°C						
	Temperature		Storag	e: -20∼65℃ (No	on-freezing)					
	Humidity		Maximu	m 90% RH (Non	-condensing)					
Environ	Humaity		Storage: b	elow 90%RH (Ne	on-condensing)					
ment	Installation site	Indoors (a	void direct sunlig	ht), no corrosive	vapor , avoid fla	mmable gases,				
	matanation site			fumes and du	st.					
	Altitude	Below 1,000 m above sea level								
	Vibration	Maximum 5. 9m/s ²								
Cod	oling method	Air convection cooling, IP20. Fan cooling, IP20.				ng, IP20.				
v	Veight(kg)	1.4	1.4	1.4	1. 7	1.7				

Note: *1 Within the rated speed, the speed change rate calculation is: (rotational speed with no load - rotational speed with full load) / rated speed.

11.2 Interface and out dimensions of the servo drive

MODEL	W	W1	Н	H1	D	D1	S
SDC010A2							
SDC020A2	-						
SDC040A2	51	38	162	150	164	14	5.5
SDC075A2							
SDC100A2							


DIMENSIONAL

 
11.3 Dimensions of the servo drive

SDC-010A2~~~SDC-100A2 (100W~1KW)

Note: Models below 400W(inclusive) have no fan.

Unit[mm]

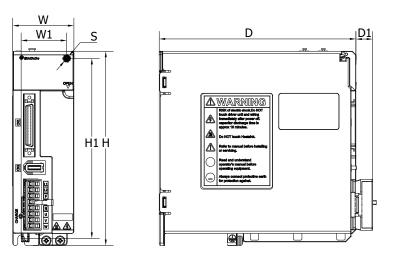



★ Dimensions of the servo drive may be updated without prior notice

11.4 SME series servo motor general specification

11.4.1 SME series : Specification of Low Capacity Servo Motor

DDDD Motor 1	type		L010	L020	L040	L075	L100			
Flange numb	per	mm	□40	□6	50	5	30			
Rated power		W	100	200	400	750	1000			
Rated torque	(Note 1)	Nm	0. 32	0. 64	1. 27	2. 4	3. 2			
Maximum tor	que	Nm	0. 96	1. 92	3. 81	7.2	9. 5			
Rated speed		rpm			3000					
Maximum sp	eed	rpm		60	00		5000			
Rated curren	t	A	0. 85	1. 7	2.8	5. 8	5.5			
Maximum cu	rrent	А	2. 7	5. 2	9.0	18. 5	18. 2			
Rotor inertia 2)	J (x10 ⁻⁴) (Note	kg-m ²	0. 05180. 1610. 2771. 071. 89(0. 0523)(0. 178)(0. 294)(1. 11)(1. 91)							
Power at conti torque	nuous rated	kw/s	19. 6	19.6 25.2 58.5 53.3						
Mounting alu size	minum plate	mm	250 x 250 x 6							
Insulation cla	ISS		CE(B) & UL(A)							
Insulation res	sistance		100MΩ @ DC5	500V						
Insulation str	ength		60sec @ AC15	500V						
Encoder reso	olution			e-turn resolution gle-turn resolutic			,			
Motor structu	ire(Note 3)		Fully closed an	d Air convection	cooling(IP rati	ng IP65)				
Vibration gra	de		V-15							
	temperature		0°C ~40°C (Nor	n- freezing) / Sto	rage:-15℃~70	°C (Non- freezir	ng)			
	humidity			(Non-condensin v 90%RH(Non-c						
Operation	Altitude		Below 1,000m above sea level							
environment	Environment restrictions		Indoors (avoid fumes and dus	direct sunlight), t.	no corrosive va	por , avoid flan	nmable gases,			
	Vibration resistant		5G							
Axial	Fd	mm	20	25		35				

allowable load(Note 5)	radial loading Fr	N	68. 6	245		392				
	axial loading Fa	N	39. 2	98	147					
	Input voltage	V	DC 24V ± 10%	DC 24V ± 10%						
	Brake holding torque	Nm	0. 3	1. 3		2. 5	3. 2			
	power consumption	w	7. 2	7.6		8	10			
Brake specification	Current consumption	A	0. 3	0. 32		0. 33	0. 42			
(Note4)	impedance @20℃	Ω	80	75. 4		72	57.6			
	Brake release time	ms	40	60		60	60			
	Brake close time	ms	20	40		40	40			
			L010	L020	L040	L075	L100			
Motor weight	(Note 2)	Kg	0. 49 (0. 71)	0. 89 (1. 27)	1. 28 (1. 66)	2. 28 (3. 02)	3. 55 (4. 36)			

Note 1: In the vertical lift or reciprocating mechanism application, please make sure the average load rate is below 75%. (refer to P. 292 for S-T curve)

Note 2: () is the rotor inertia and weight with electromagnetic brake.

Note 3: The motor IP65 protection test is for the motor body, excluding the output shaft and the connector itself.

Note 4: The electromagnetic brake is used for holding when the mechanism stops, and cannot be used for braking during operation.

Note 5: refer to Note 5 in Section 11.4.2.

	type		M010	M020	M040	H040	M075	H075	M100	
Flange numb	ber	mm	□40		□60		□80			
Rated power		W	100	200	400	400	750	750	1000	
Rated torque	(Note 1)	Nm	0.318	0.318 0.64 1.27 1.2				2.39	3.18	
Maximum to	rque	Nm	0.955	0.955 1.92 3.82 3.82 7.16 7.16						
Rated speed		rpm				3000	-	-		
Maximum sp	eed	rpm	6500 6000 6500						5000	
Rated currer	ıt	Α	0.85	1.5	2.8	2.8	5.0	5.0	5.0	
Maximum cu	rrent	Α	2.975	5.3	9.8	9.8	17.5	17.5	17.5	
Rotor inertia	botor inertia $J(x10^{-4})$ kg-m ² 0.039 0.230 0.427 0.660 1.360 2.009 1						1.744			
(Note 2)		ĸy-III	(0.041)	(0.247)	(0.442)	(0.670)	(1.412)	(2.059)	(1.796)	
Power at cont torque	nuous rated	kw/s	25.72	17.81	39.54	24.56	42.72	28.44	59.11	
Mounting alu size	minum plate	mm	250 x 250	D x 6 (A606	61)					
Insulation cla	ISS		CE(B) / L	JL(A)						
Insulation rea	sistance		100MΩ @	DC500V						
Insulation str	ength		60sec @	AC1500V						
Encoder reso	olution		,	-				: (65,536 T bit (65,536		
Motor structu	ire(Note 3)		Fully close	ed and Air	convection	cooling(IP	rating IP6	7)		
Vibration gr	ade		V-15							
	temperature		0°C ~40°C	(Non- free	zing) / Sto	r age:-20 ℃	~80°C (No	n- freezing)	
	humidity		Below 80% Storage : I	·	condensing RH(Non-c)			
	Altitude		Below 1,0	000m abov	ve sea leve	1				
Operation environment	Environment restrictions		Indoors (a gases, fun		• •), no corro	osive vapo	er , avoid	flammable	
	magnetic field interference		<20mT ((Note 6)						
	Vibration resistant		5G							

11.4.2 SM3 series : Specification of Low Capacity Servo Motor

	⁻ type		M010	M020	M040	H040	M075	H075	M100	
	Fd	mm	20		25	I	35			
Axial allowable	radial loading Fr	Ν	68.6		245			392		
oad(Note 5)	axial loading Fa	Ν	39.2		98		147			
	Input voltage	V			D	C 24V ± 10	1%			
	Brake holding torque	Nm	0.32		1.5		3.2			
p	power consumption	W	6.1		7.6			10		
Brake specification	Current consumption	А	0.25		0.31			0.48		
(Note4)	impedance @20℃	Ω	94.4		76			50.1		
time	Brake release time	ms	50		60			60		
	Brake close time	ms	40		20			40		
Motor weight(Note 2)		Kg	0.49 (0.70)				2.56 (3.38)	2.86 (3.66)		


Note 1: In the vertical lift or reciprocating mechanism application, please make sure the average load rate is below 75%. (refer to P. 292 for S-T curve)

Note 2: () is the rotor inertia and weight with electromagnetic brake.

Note 3: The motor IP65 protection test is for the motor body, excluding the output shaft and the connector itself.


Note 4: The electromagnetic brake is used for holding when the mechanism stops, and cannot be used for braking during operation.


Note 5: Output shaft allowable load diagram

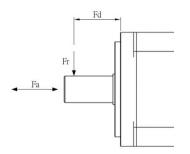

11.5 Motor dimensions


11.5.1 Dimensions of 3000 RPM motor

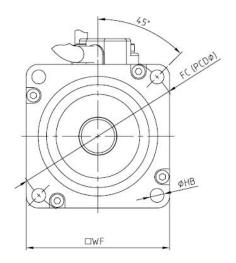

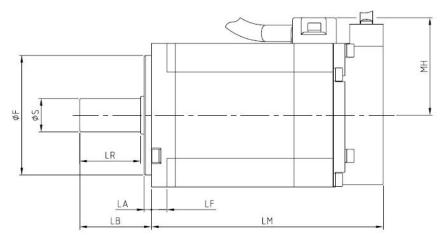

Model		Item Dimension(mm)										
	WF	ψS	ψF	LA	LB	LF	LR	MH	LM	FC	HB	
SME-L010(B)	40	Ø8 ⁰ -0.009	Ø30 ⁰ _{-0.03}	2. 5	25	5. 5	21. 2	32	97. 8 (132. 5)	46	2-ø4. 5	
SME-L020(B)	60	C (1,1,0)	Ø50 ⁰	2	20	6 5	25 F	40	94. 2 (129. 2)		4 95 9	
SME-L040(B)	60	Ø14 ⁰ -0.011	Ø50 _{-0.03}		114. 2 (149. 2)	70	4-ø5. 8					
SME-L075(B)	80	Ø10. ⁰	Ø70 ⁰ -0.03	3	40	7.5	35. 3	52	119. 2 (158. 2)		4	
SME-L100(B)	ME-L100(B)	Ø19 ⁰ -0.013	Ø70 _{-0.03}	3	40	7.5	30.3	92	159. 2 (203. 5)	90	4-ø6. 6	

LM ():Length of model with brake

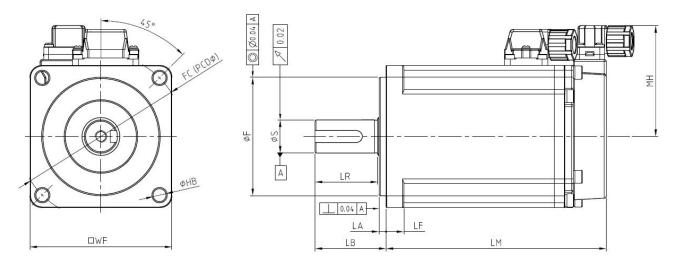

Model				Iten	n Dime	ension((mm)				
	WF	ψS	ψF	LA	LB	LF	LR	MH	LM	FC	НВ
SM3-M010(B)	40	Ø8 ⁰ -0.009	Ø30 ⁰ _{-0.021}	2.5 ±0.5	25 ±0.5	5	22	41.5	95 (122)	46	4-ø4.5
SM3-M020(B)	60	Ø14 ⁰ -0.011	Ø50 ⁰ -0.025	3 ±0.5	30 ±0.5	7.5	26.5	47	74 (107)	70	4-ø5.5
SM3-M040(B)	60	Ø14 ⁰ -0.011	Ø50 ⁰ -0.025	3 ±0.5	30 ±0.5	7.5	26.5	47	93 (126)	70	4-ø5.5
SM3-H040(B)	60	Ø14 ⁰ -0.011	Ø50 ⁰ _{-0.025}	3 ±0.5	30 ±0.5	7.5	26.5	47	93 (126)	70	4-ø5.5
SM3-M075(B)	80	Ø19 ⁰ _{-0.013}	Ø70 ⁰ -0.03	3 ±0.5	35 ±0.5	8	31.5	55.5	108.5 (147.5)	90	4-ø6.6
SM3-H075(B)	80	Ø19 ⁰ -0.013	Ø70 ⁰ -0.03	3 ±0.5	35 ±0.5	8	31.5	55.5	113 (152)	90	4-ø6.6
SM3-M100(B)	80	Ø19 ⁰ _{-0.013}	Ø70 ⁰ -0.03	3 ±0.5	35 ±0.5	8	31.5	55.5	123.5 (162.5)	90	4-ø6.6


LM ():Length of model with brake

11.5.2 Dimensions of 2000 RPM motor

There is no 2000 rpm motor in SDC series currently.


11.5.3 Dimensions of servo motor keyway

D type keyway applicable model: SME-L010(B)

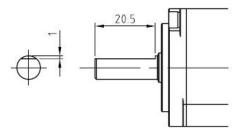


General keyway

Model	Dimensions(mm)					
Woder	QL	QK	W	Т	U	Y
SME-L020(B) \ SME-L040(B)	3	20	5 ⁰ _{-0.03}	5	3	M4 x depth 15
SME-L075(B) \ SME-L100(B)	5	25	6 ⁰ _{-0.03}	6	3. 5	M5 x depth 20

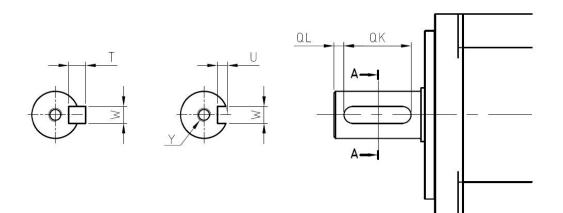

Model	Dimensions(mm)					
	W	Т	KW	KH	LK	TP
SM3-M010(B)	3 ⁰ _{-0.03}	3 ⁰ _{-0.03}	3 ⁰ _{-0.03}	6.2 ⁰ _{-0.1}	15.5	M3 x depth 6
SM3-M020(B)						
SM3-M040(B)	$5^{0}_{-0.03}$	$5^{0}_{-0.03}$	5 ⁰ _{-0.03}	11 ⁰ _{-0.1}	20	M4 x depth15
SM3-H040(B)						
SM3-M075(B)						
SM3-H075(B)	6 ⁰ _{-0.03}	6 ⁰ _{-0.03}	6 ⁰ _{-0.03}	15.5 ⁰ -0.1	25	M5 x depth 20
SM3-M100(B)						

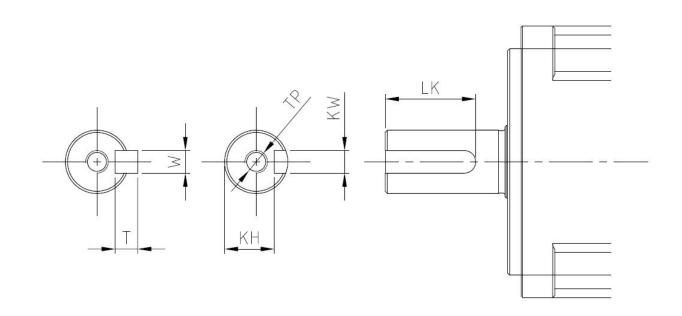


11.6 Electromagnetic Interference Filter (EMI Filter)

To comply with EMI directive of EN specification, it is recommended to use the following recommended filters:


Servo drive	Recommended filter
SDC-010A2	NF312C5/05
SDC-020A2□	
SDC-040A2□	NF312C10/05
SDC-075A2□	NF312C20/05
SDC-100A2□	

★ Filter is optional purchase item.

 The use of the filter needs to consider the site conditions whether there is electromagnetic compatibility interference before installation.
 The following schematic diagram describes the wiring of an EMC filter and the SDC servo drive

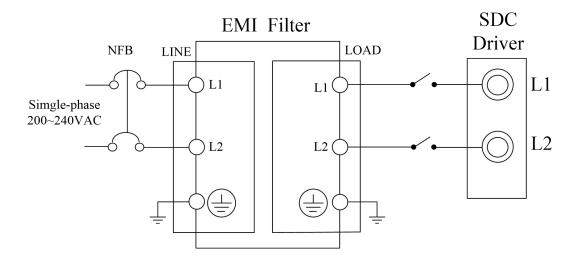


★ Ground the EMI Filter.

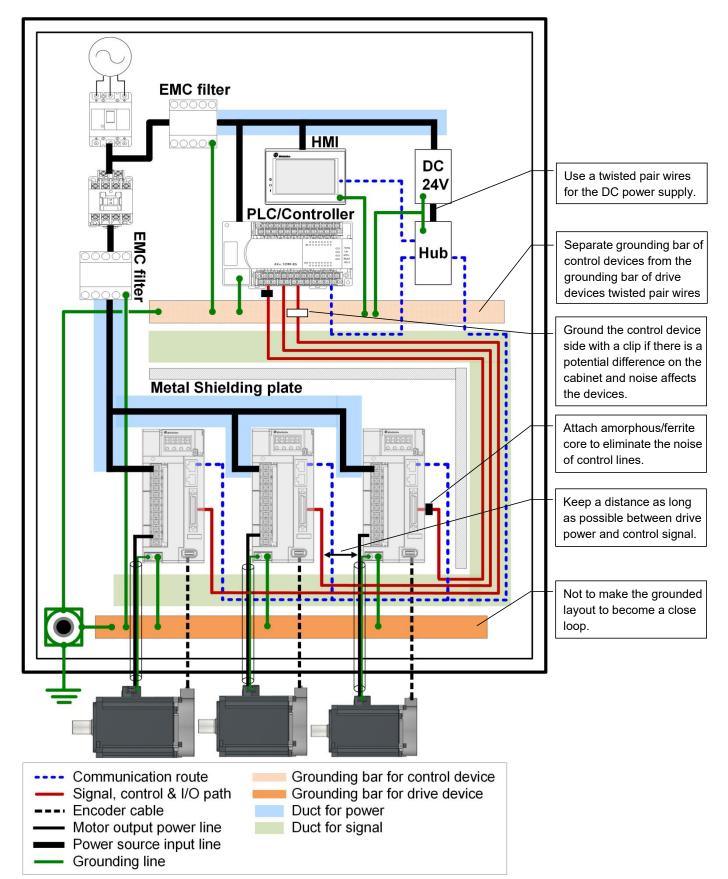


11.7 EMI interference countermeasure

Recommended rules of wirings inside control cabinet

 - 1. Use a metal cabinet. The radiated noise will be suppressed and the grounding will be stabilized.
- 2. The installation panel (inner panel) of the cabinet must be plated to have sufficient grounding for the devices, and be sure to connect the installation panel to the grounding terminal of the cabinet.
- 3. Ensure a good conductivity between the door and the cabinet. Connect the door and the cabinet with the rectangular wire. The shielding gasket on the door must be conductive processed.
- 4. The EMC filter and the servo drive should be installed on the same metal panel, and the wirings between them should be as short as possible.
- 5. The metal case of the servo drive and EMC filter must be screwed to the metal panel of the control cabinet, and the fixed point must ensure a good conductivity. (The paint on the metal plate should be scraped off)
- Use the cable with shielding (double shielding is recommended) for motor power output usage. If a P-clip or a U-clip is applied, ensure to be grounded it with the maximum contact area.(See the illustration below)
- 7. Isolate the control devices and the drive devices with a metal shielding plate.
- 8. Applied occasion of ferrite core or amorphous core:
 - a. Power input cables of the control devices
 - b. Motor power output cables
 - c. Signal, control, I/O cables
- 9. The impedance is proportional to the square of windings on the ferrite core or the amorphous core. Pass through multiple times (three passes is better) if possible.
- 10.Keep the control cables from the power cables as far as possible. And prevent a parallel layout between them.



Cable with 2 layer shielding

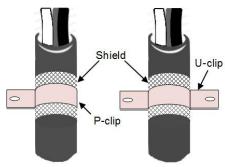


Example of P-clip and U-clip

12. Features


12.1 Motor T-N Curve/S-T curve

• The motor feature of single-phase 220V power supply: the torque feature will be reduced if the voltage is insufficient.

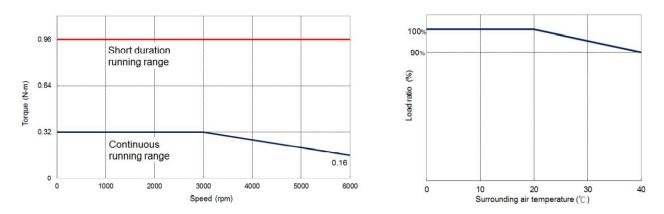


[SME-L010]


[SME-L020]

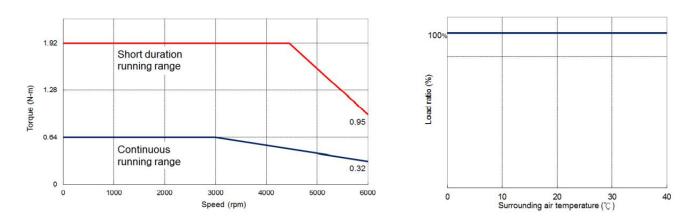


[SME-L040]

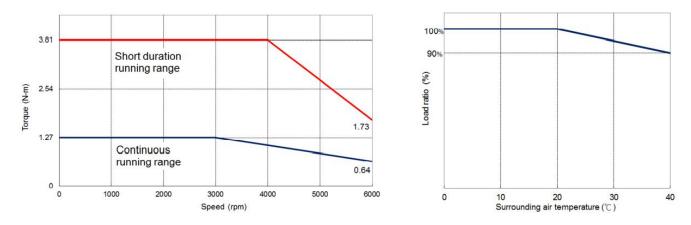


[SME-L075]

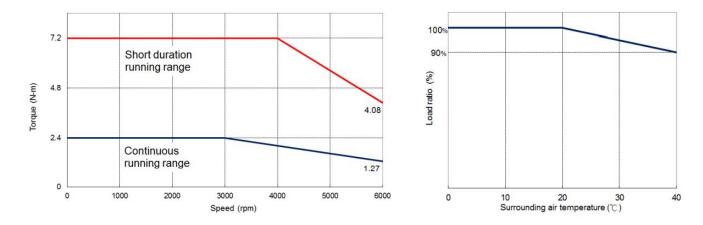


[SME-L100]

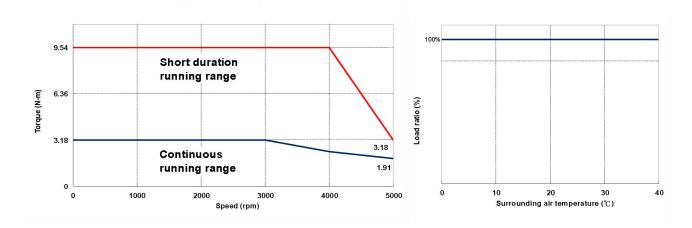


[SM3-M010]

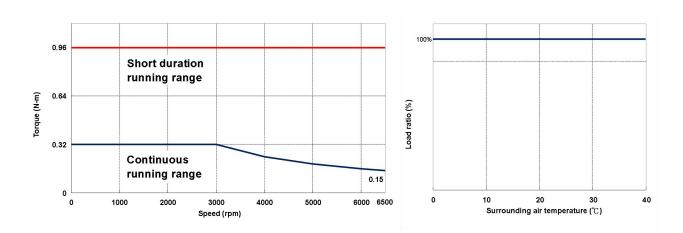


[SM3-M020]

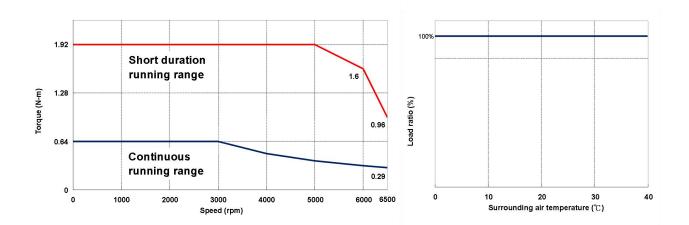


[SM3-M040]

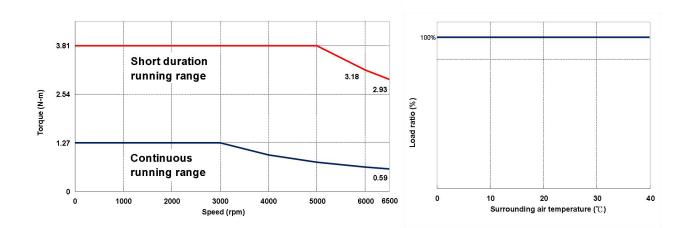


[SM3-H040]

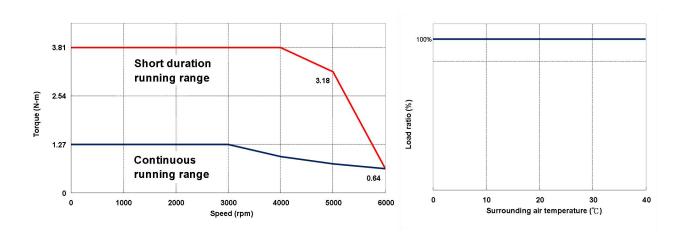


[SM3-M075]

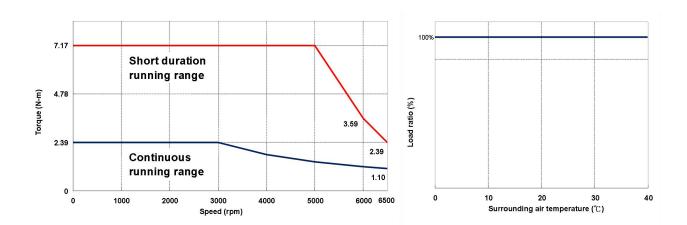

[SM3-H075]

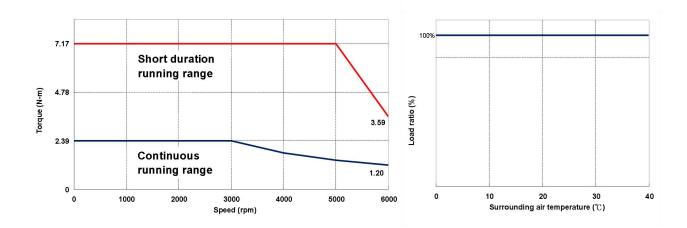

[SM3-M100]

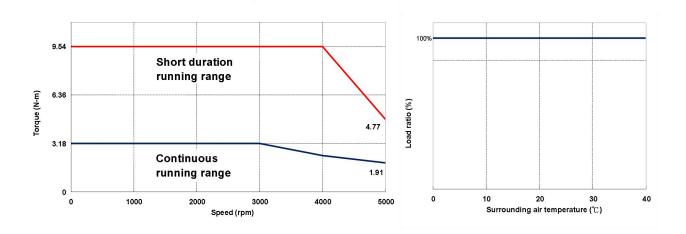

★ This feature is applicable for single-phase 200~240V power supply.


Overload features 12.2

Overload protection is to prevent the servo motor from operating under overload conditions.

Causes of overload as follows:


- (1). The inertia ratio is too large.
- (2). Acceleration and deceleration time setting cannot be reached theoretically when loading.
- (3). The motor's operating torque exceeds the rated range and the operating time is too long.
- (4).Incorrect servo gain setting causes resonance in the motor and yet the motor keeps running.
- (5).Incorrect wiring of the power and encoder cables.

If the operating servo motor may exceed the rated torque during operation, you can refer to the Graph of Load and Operating Time as follows:

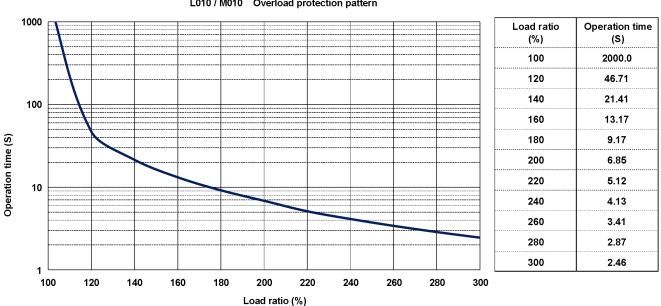


L010 / M010 Overload protection pattern

When the load reaches 300%, the operation time is 2.46 seconds.

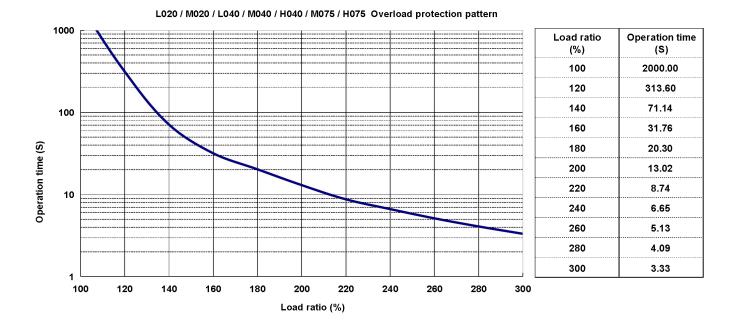

When the load reaches 300%, the operation time is 3.33 seconds.

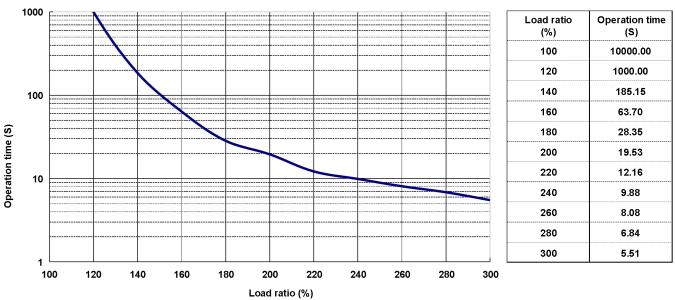

L100 / M100 (80 frame) Overload protection pattern

When the load reaches 300%, the operation time is 5.51 seconds

13. Absolute Servo System

Absolute servo system includes servo drive, absolute servo motor and absolute encoder cable (including battery box). The absolute position detection system does not store the data in the PLC controller, but detects the absolute position of the machine and store the data by battery power. Therefore, as long as the origin is set during installation, operation can be easily restarted even if power outage or breakdown.

If the drive has enabled the relevant parameters of the absolute system, an absolute servo motor must be used. If the incremental servo motor is used, an alarm AL.24 will occur.

The absolute motor model description is as follows:

-N: Absolute servo motor

	When [Absolute position is lost] or [Absolute position overflows] occurs, the origin setting needs to be performed again.
	Please put the battery in the battery box before using it to prevent unexpected
Note	factors such as battery is short-circuited.
Note	When using an absolute servo motor, please make sure that the motor speed
	is lower than 50 rpm at the moment of power-on.
	After the drive is powered off, the speed should not exceed 50 rpm in battery
	mode.

Focus	The absolute position will disappear when the battery is removed, Make sure
	to set the origin before running

Restricted items:

The absolute position system is not suitable in the following conditions

- (1) Speed control mode and torque control mode.
- (2) In switching control mode.

- (3) In rotating axis, infinite operation cycle positioning.
- (4) Change the electronic gear ratio after setting the origin.
- (5) Use error code output.

How to replace the battery

- (1) When the drive displays alarm AL.2D, which means the voltage is too low, please replace the battery immediately to avoid data loss.
- (2) When the battery voltage is less than 2. 45V, AL.2A will occur and the motor position data has been lost. , the homing must be performed after the battery is replaced.

☆☆☆ Attention!!!

It is recommended to replace the battery when the drive is powered on and the motor is stopped to avoid absolute position data loss.

System initialization

- (1) Install absolute motor and battery.
- (2) Set PA28 to "1", set the absolute system, and then restart the drive.
- (3) [AL.2A Absolute encoder abnormal 1] alarm will occur after power-on, you can clear the alarm as follows
- (4) Turn the power OFF \rightarrow ON to clear the alarm
- (5) Absolute position loss [AL.2C Absolute Encoder error 3] alarm will occur after power-on, and it is necessary to reset the absolute system origin to clear this alarm. The method is as follows
- (6) (a) Set PA29 = 1, and then the coordinate initialization is completed.

(b) In Pr mode, the origin return action is performed. When the action is completed, the absolute coordinate system is reset.

Cautions:

In the absolute system, the position movement has certain restrictions. When the number of motor revolution exceeds the range of $-32768 \sim +32767$, an alarm AL.29 will occur.

Pulse number calculation

The motor's maximum countable number of revolutions range is $-32768 \sim +32767$. If it exceeds this range, an overflow (AL.29) alarm will occur. According to the motor encoder type, the motor single-turn pulse value is 131072 (17bit)

The number of revolutions and pulse of the absolute servo system can be access through communication or DI/DO. The total pulse value is calculated as follows. Total pulse value = r (number of revolutions) x 131072 + pulse number (0~131071)

If the motor has rotated 10 cycles with 50000 pulse, the total pulse value is as follows according to the above calculation:

The total pulse value = $10 \times 131072 + 50000$

= 1360720(pulse)

Method of accessing absolute motor position

(1)To access the absolute position with communication

For general conditions, you can use the status monitoring communication parameter table in section 9.4 to read the data. Generally, it is recommended to use the "Motor Feedback Pulse Number (before electronic gear ratio)". The following is a simplified table.

Communicatio	Item	Data length
n address		
0x0000	Motor feedback pulse number (after E-gear) [pulse]	2word
0x0024	Motor feedback pulse (before E-gear) [pulse]	2word

(2)Use PLC DIO communication to access absolute position


Use PLC DIO communication to access absolute position, you can refer to the descriptions in sections 13.1 and 13.2.

(3)Set the drive parameter to return position

The parameter PA30 can also be written through communication, and the drive will update the current encoder status and absolute motor position. When PA30 = 1, the deviation value will not be cleared when reading the position value; if PA30 = 2, the deviation value will be cleared when reading the position value.

Because when the servo motor is stopped, a slight position correction will performed. To avoid the difference between the absolute coordinate value and the actual position of the motor, you can clear the position deviation when reading the coordinate. When the drive updated the encoder status and the absolute position of the motor, the drive will automatically reset PA30 to 0, which means that the host computer can read the parameter data.

If the encoder status displays "absolute position is lost" or "absolute revolution number overflows", the accessing absolute position is invalid, and the coordinate initialization or homing must be performed again.

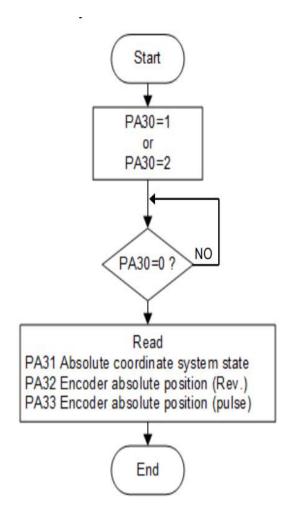

13.1 Mitsubishi Absolute Position Detection System

This section mainly introduces the use of Mitsubishi PLC with SDC servo for DIO communication to read absolute position.

13.1.1 Signal description

When transmitting absolute position data, the signal of CN1 terminal will be changed.

Signal	Code	CN1 Pin	Function	I/O
ABS			To activate ABSM and start ABS	
Transmission	ABSM	User-defined	communication mode.	DI-x
mode			Enable ABSR, ABST, ABSB0, ABSB1.	
	To turn ABSR ON d		To turn ABSR ON during accessing ABS	DI-4
ABS request	ABSR	17	data in ABS communication mode.	(fixed)
				DO-3
ABS data as 0	ABSB0	43	low 2 bit of ABS data.	(fixed)
			high 2 hit of ADC data	DO-4
ABS data as 1	as 1 ABSB1 44 high 2		high 2 bit of ABS data.	(fixed)
	ADOT	40	Turn ABST on when ABS is ready in ABS	DO-2
ABS ready	ABST	42	communication mode.	(fixed)
ABS origin	4000	llaan dafina d		DL
setting	setting ABSC User-defined		Origin data is cleared when ABSC is ON.	DI-x
ABS position		Lloor dofined	APS)/ is ON when sheet to position is last	
lost	ABSV	User-defined	ABSV is ON when absolute position is lost.	DO-x

For detailed wiring, please refer to the following wiring example.

MITSUBISHI MELSEG-FX3 U PLC						RVO AM ihLin SD(•
FL			+24V		CN1	1	
	S/S			COM+	47		
	XO		ABSBO	DO3	43		
	X1		ABSB1	D04	44		
	x2 -		ABST	DO2	42		
				-			
	0V			DOCOM	40		
I			SON			1	
	Y4			DI1	14		
	Y5 -	_	ABSM	DI3	16(須	[規劃])	
	Y6		ABSR	DI4	17		
	сом2		GND	SG	24 \ 7	25 \ 50	
				30	24 ` 2	.5 • 50	

13.1.2 Startup procedure

(1) Install absolute motor and battery

Parameter setting

(2) PA28 is set to "1" which is is absolute system setting.

Set PA34 to "□□□1", then restart the drive to set the Mitsubishi absolute position detection system.

And then restart again to activate the parameter setting.

(3) [AL.2A Absolute encoder error 1] Alarm release

When the battery is replaced and the power is turned on for the first time, an "AL.2A Absolute Encoder error 1" alarm will occur. You can restart the power to release the alarm.

(4) Absolute position loss [AL.2C Absolute encoder error 3] Alarm release

When the absolute system is powered on for the first time, an alarm of "AL.2C Absolute Encoder error 3" will occur. You can set PA29 to "1" or perform coordinate initialization to clear the alarm.

(5) Absolute position data transmission confirmation

Turn on SON, and the absolute position data starts to be transmitted to the PLC. After normal transmission of ABS data.

- (a) RD (ready) is ON.
- (b) ABST (ready) of PLC is ON.
- (c) If [ABS timeout alarm] occurs, refer to section 10. 2.
- (6) Homing

Homing in the following conditions


- (a) When setting absolute system.
- (b) When changing servo drive.
- (c) When changing servo motor.
- (d) When absolute position loss [AL.2C Absolute encoder error 3] alarm occurs.

When setting an absolute position system, you can establish an absolute coordinate position through the origin setting. If you run the motor without establishing the origin, unexpected actions may occur.

13.1.3 Absolute position data transmission protocol

(1) Data transmission procedure


After the power is turned on, the PLC will access the current position of the drive when SON is on.

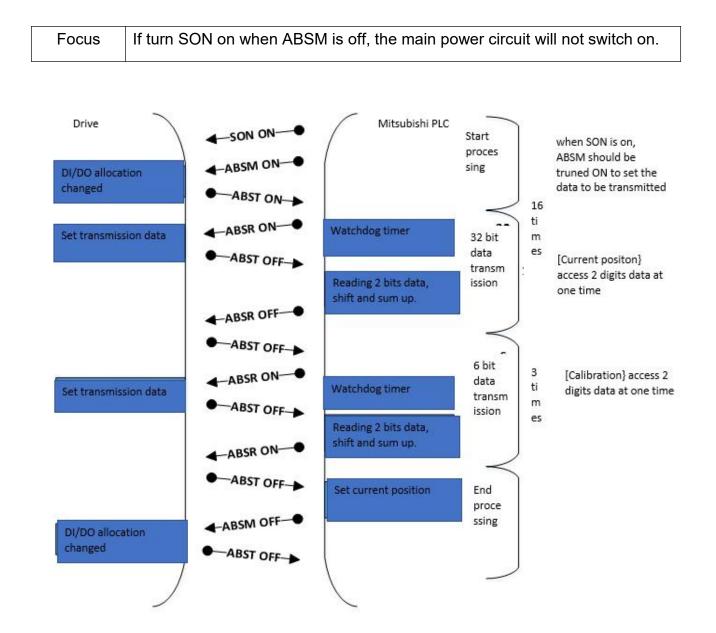

(2) Transmission method

In the absolute position detection system, when SON is turned on, ABSM must be turned on to transmit the current position of the drive to the host controller. If ABSM is turn off, the main power circuit will not switch on.

(a)Sequence chart

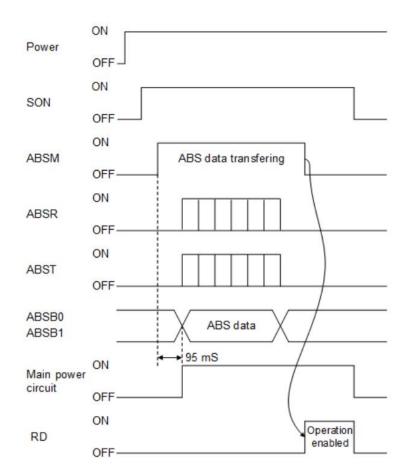


- (1) After the ABS data transmission is completed, RD turns on by ABSM OFF. When RD is on, ABSM ON is disabled.
- (2) Even if SON is turned on, the main circuit will not be switched on until the ABSM is turned on. When an alarm occurs, the ABSM is disabled; when an warning occurs, the ABSM is enabled.
- (3) During ABS transmission, when ABSM is OFF, the ABS transmission mode is interrupted and [AL.17 ABS timeout warning] occurs.
- (4) During ABS transmission, [AL.17 ABS timeout warning] will also occur when SON OFF, RES ON or EMG OFF.

(5) The output signal functions of ABST, ABSB0 and ABSB1 will change according to the status of ABSM.

CN1 pin	Output signal			
number	ABSM OFF	ABSM ON		
43	WNG Warning/ CMDOK internal position command is completed	ABS Data bit 0		
44	TLC torque limit control	ABS data bit 1		
42	ZSP zero speed is detected.	ABS data ready		

(6) When the main circuit is on, ABSM is not allow to enable. If you want to send data again, you must turn off the SON and wait for the main circuit to turn off for more than 20mSec.

(b)Detailed description of absolute position data transmission timing

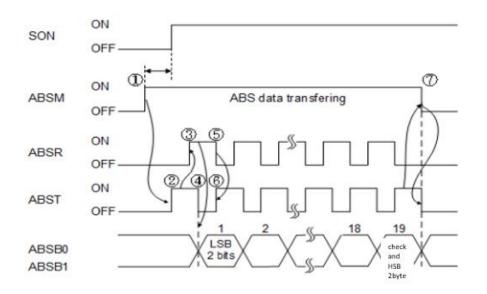

After the ABSM is turned on, , the ABS servo turn-on timeout will occur if the SON is not turned on within 1 second, but the transmission will not be impacted. If you want to clear the ABS servo on warning, you can just turn the SON on. The detailed timing diagram is as follows:

- (1) The PLC turns on ABSM and SON.
- (2) When entering the ABS transmission mode, ABST (data ready) is ON after the driver calculates the absolute position,

- (3) After PLC confirms that ABST is turned on, ABSR (data request) will be ON.
- (4) After confirming that ABSR is turned on, the servo will output the ABS data (2bit) and turn off ABST.
- (5) If PLC confirms that ABST is closed, it will read ABS data (2bit) and close ABSR.
- (6) The drive turns ABST on to prepare for the next data transfer. Repeat the operation of 3~6 until the transmission of 32-bit data and 6-bit checksum data is completed.
- (7) After the PLC finish receiving the data, it will confirm that the 19th ABST state has been turned on, and then the ABSM is turned off. At the end of data transmission, closing ABSM will interrupt the ABS transmission mode, and [AL.17 ABS timeout warning] will occur.

(c)Checksum

The checksum is used to detect whether the ABS data has errors. The PLC uses the program to calculate the checksum value of the ABS data and compare it with the checksum value transmitted by the drive.

Calculation: The checksum is calculated by adding up the 2-bit ABS data received each time to obtain a 6-bit checksum value.

(Example) ABS data: -30000 (FFFF8AD0), the calculated checksum value is 22H

00b 00b 01b 11b 10b 10b 00b 10b 11b 11b 11b 11b 11b 11b 11b +11b 100010b


(3) Transmission error

[AL.17 ABS timeout warning]

In the ABS transmission mode, a time-out warning will occur in the following conditions. Alarm will released automatically when ABSM is turned on.


(1) ABS request off-time timeout check.

After the ABST is turned on, if the ABSR data requested signal is not turned on within 5 seconds, [AL.17 ABS timeout warning] will occur.

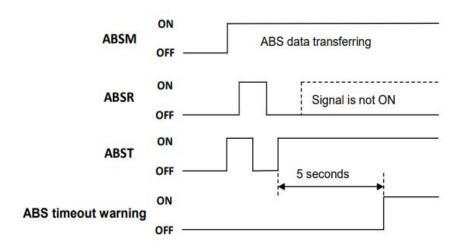


(2) ABS request on-time timeout check.

After the ABST is turned off, if the ABSR data requested signal is not turned off within 5 seconds, [AL.17 ABS timeout warning] will occur.

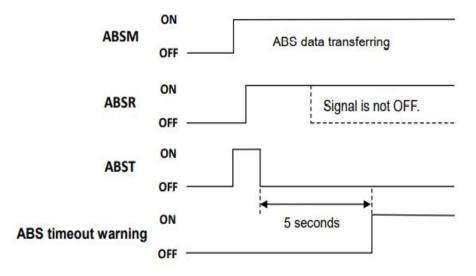

(3) Timeout check after the ABSM transmission mode ends


After the ABS data transfer is completed and ABST is turned on, if the ABSM transmission mode signal is not turned off within 5 seconds, [AL.17 ABS timeout warning] will occur.

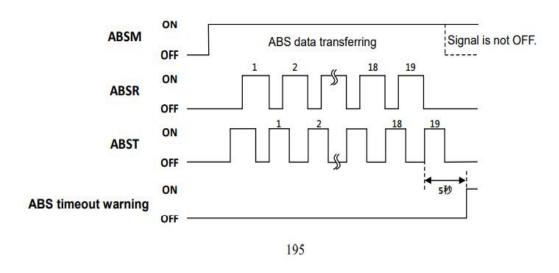

(4) ABSM signal check in ABS transmission mode


If the ABSM signal is turned off when the ABS transmission is not completed, [AL.17 ABS timeout warning] will occur.

This example is to turn ABSM OFF before the 19th ABST data ready is turned on.

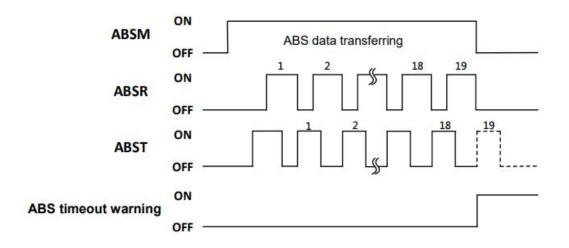

(5) SON signal check in ABS transmission mode


If the SON signal is turned off when the ABS transmission is not completed, [AL.17 ABS timeout warning] will occur. This example is to turn SON OFF before the the 19th ABST data ready is turned on.

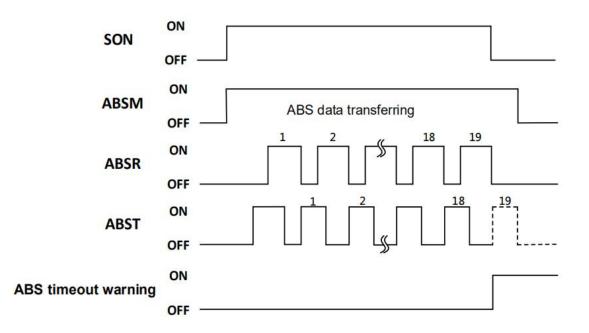

Checksum error


When the checksum is wrong, the ABS data transmission will start again. After the ABSM is closed for 10mSec, the SON will close, and it will take 20mSec to restart.

After re-testing 3 times, an ABS checksum error will occur if normal communication is invalid.

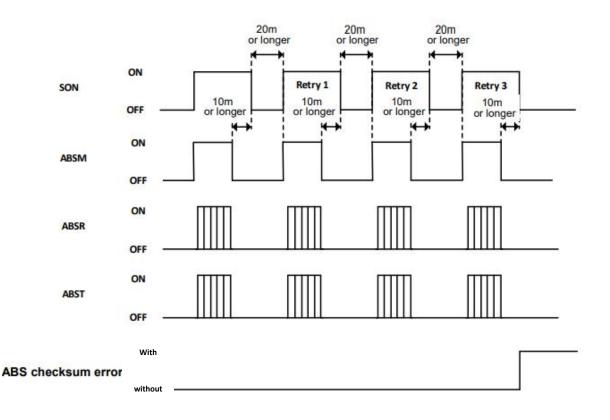

Clear alarm


When an alarm occurs, SON will be OFF. ABSM is not received when there is an alarm; ABSM can be received when the alarm is cleared. ABSM can be turned on after the alarm is cleared.

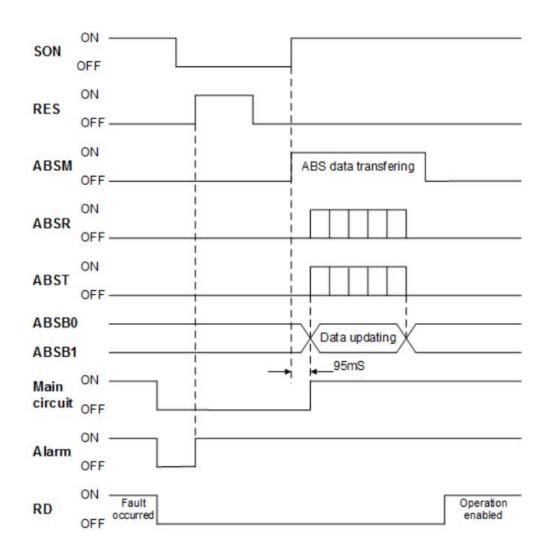

(4) Homing

Focus	Please perform the homing when the motor is static, otherwise the origin
	position may shift.

Move to the target origin position by manual operation (JOG, test positioning). When turning on CR over 20mSec, the current position is regarded as the ABS origin and the data is stored in the non-volatile memory (the maximum number of writing is 1 million)

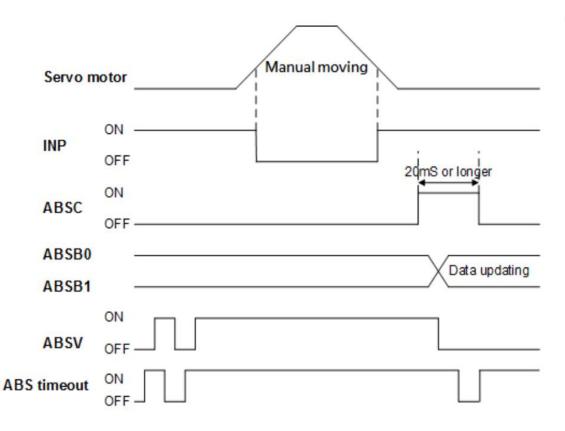

13.2 Delta absolute position detection system

This section mainly introduces the use of Delta PLC with SDC to access absolute position by DIO communication.

13.2.1 Signal description

When transmitting absolute position data, the signal of CN1 terminal will be changed.

Signal	Code	CN1 Pin	Function	I/O	
ABS			When ABSE is on, the ABS mode is		
communication	ABSE User-defined		activated, it will enable ABSQ, ABSC,	DI-x	
enable			ABSR, ABSD.		
			Cross check pin during I/O transmission,		
ABS signal			ABSQ OFF means the host controller has	DI-4	
request	ABSQ	17	issued the requested command; ABSQ ON	(Fixed)	
Tequest			means the host controller has processed the	(Fixed)	
			ABSD data.		
			ABSR OFF means that ABSQ command		
ABS signal ready	ABSR 43	42	can be received; ABSR ON means that the	DO-3	
Abs signal ready		43	data is ready and the ABSD data has been	(Fixed)	
			updated.		
ABS data content	ABSD	44	The output pin of ABS data, the data is	DO-4	
ABS data content	ABSD	44	guaranteed to be correct when ABSR is on.	(Fixed)	
ABS			The related alarm of the absolute encoder is		
communication	ABSW	User-defined	indicated by this DO output.	DO-x	
error					
			When ABSC is turned on, the pulse number		
Origin setting	ABSC	Lisor defined	in the absolute encoder will be cleared to	DI-x	
	g ABSC User-defined		zero. This input is only valid when ABSE is	DI-X	
			turned on.		

Please refer to the following wiring example for details.

DELTA DVP-EH 3 PLC						RVO AMP ihLin SDC
		+24V			CN1	
	S/S		_	COM+	47	
	XO	ABSR	_	DO2	42	
	X1	ABSD		DO3	43	
	X2	ABSW		DO1	41個	〔規劃)
	~2					(八九里小)
		Γ		DOCOM	40	
	Y4	ABSE	_	DI3	16 须	[規畫])
	Y5	ABSQ		DI4	17	
		GND		014	1/	
	C2			SG	24 、 2	25 、 50
		J				

13.2.2 Start procedure

- (1) Install absolute motor and battery.
- (2) Parameter setting.

PA28 is set to "1" which is is absolute system setting.

Set PA34 to " $\Box\Box\Box$, then restart the drive to set the Delta absolute position detection system.

And then restart again to activate the parameter setting.

- (3) [AL.2A Absolute encoder error 1] Alarm release.
 When the battery is replaced and the power is turned on for the first time, an "AL.2A Absolute Encoder error 1" alarm will occur. You can restart the power to release the alarm.
- (4) Absolute position loss [AL.2C Absolute encoder error 3] Alarm release When the absolute system is powered on for the first time, an alarm of "AL.2C Absolute Encoder error 3" will occur. You can set PA29 to "1" or perform coordinate initialization to clear the alarm.
- (5) Homing.
 - Homing in the following conditions.
 - (a) When setting absolute system.
 - (b) When changing servo drive.
 - (c) When changing servo motor.


(d) When absolute position loss [AL.2C Absolute encoder error 3] alarm occurs.

When setting an absolute position system, you can establish an absolute coordinate position by the origin setting. If you run the motor without establishing the origin, unexpected actions may occur.

13.2.3 Use DI/DO to initialize absolute coordinates

Absolute coordinate initialization can be performed with PA29 or DI/DO. If in Pr mode, please do the coordinate initialization by homing.

When DI ABSE is ON and DI ABSC is switched from OFF to ON, the coordinate initialization function will be executed. After execution, the pulse number of the absolute encoder will be cleared to zero. Please refer to the figure below for the operation sequence.

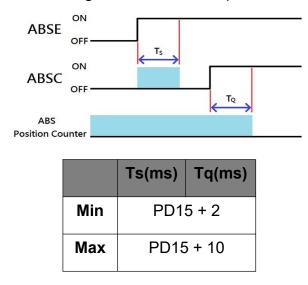

Description of operation sequence.


- 1. When the host controller switches the ABSE signal from OFF to ON, it will need to wait for Ts before the system can proceed to the next step.
- 2. After reaching the Ts time, the host controller can perform the coordinate reset function, , when the ABSC is switched from OFF to ON and after the Tq time , the pulse number of the absolute coordinate will be cleared to zero.

13.2.4 Use parameter settings to initialize absolute coordinates

You can write PA29 to perform absolute coordinate initialization by panel operation or communication command. When PA29 is set to 1, the absolute coordinates will be reset immediately. Please use the homing of Pr mode to initialize the coordinates in Pr mode.

Bit79 ~	Bit63 ~ Bit32	Bit31 ~ Bit16	Bit15 ~ Bit0
Bit64			
Check	Encoder pulse number	Encode	PA31 encoder
Sum	per revolution	revolution	status
	0 ~ 4194304 (22bit	numbers	
	Encoder)	-32768 ~	
		+32767	

Inspection and method description

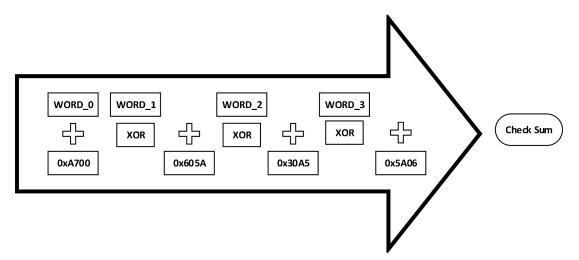


Check Sum = ((((((WORD_0+0xA700) xor WORD_1)+0x605A) xor WORD_2)+0x30A5) xor WORD_3)+0x5A06

Remind:

- 1. The algorithm has no sign.
- 2. 0xA700, 0x605A, 0x30A5, 0x5A06 are hexadecimal constants
- 3. WORD_0: encoder status(Bit15 ~ Bit0)
- 4. WORD_1: encoder revolution numbers(Bit31~Bit16)
- 5. WORD_2: encoder pulse number(Bit47 ~ Bit32)
- 6. WORD_3: encoder pulse number(Bit63 ~ Bit48)

13.2.5 Absolute position data transmission protocol

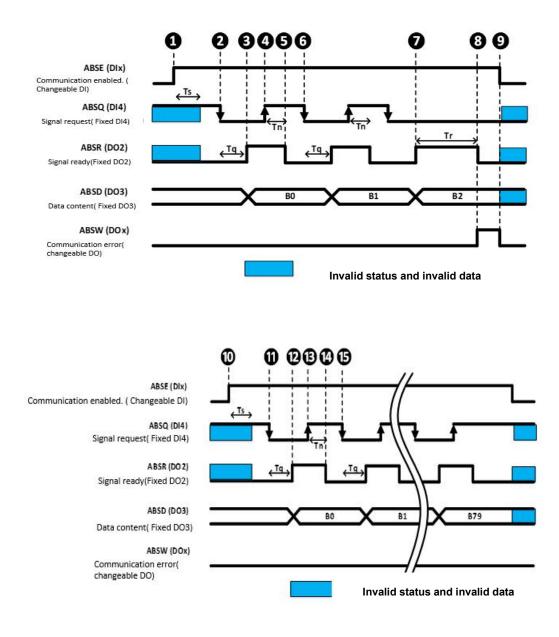

The description of communication procedure.

- 1. When starting communication, the host controller will enable ABSE signal and start DI/DO communication of absolute system. After Ts digital input filter time, DI4, DO2 and DO3 will switch to ABSQ, ABSR, ABSD.
- 2. The host controller sets the ABSQ signal to low level , which means that the host makes a access request to the driver.
- 3. After the Tq confirmation time, the driver has the data ready and enabled the ABSR signal to notify the host controller for data accessing.
- 4. When the host controller detects that the ABSR is at the high level, it will immediately read the data signal on the ABSD. And then set the ABSQ to the high level to notify the drive for data accessing competition.
- 5. After the Tn confirmation time, the driver sets ABSR to the low level, and informs the host computer to prepare communication on the next bit.
- 6. When the host controller detects that the ABSR is at a low level, it will request the next bit from the driver.
- 7. If the drive has the data ready, the ABSR signal will be enabled.
- 8. After Tr communication waiting time, if the host controller does not read data and pulls up the ABSQ signal, ABSW alarm will occur and the communication will stop.
- 9. After the host controller detects the ABSW communication error, it will set ABSE to the low level to make it ready for re-communication.
- 10. Re-enable ABSE signal and re-communication.
- 11. The host controller sets the ABSQ signal to a low level and sends a accessing request.
- 12. After the Tq confirmation time, the driver will notify the host controller that data can be read.
- 13. When the host controller detects that the ABSR is at the high level, it will immediately read the data signal on the ABSD and set the ABSQ to the high level to notify the drive that the data has been read.
- 14. After the Tn confirmation time, the driver sets ABSR to the low level and informs the host controller that it can prepare for the communication of next bit.
- 15. When the host controller detects that the ABSR is at a low level, it will request the next bit from the driver. Repeat step 11 ~ step 14 to complete data communication of a total of 80 bits from 0 to 79.

13.3 Absolute battery specifications

Cautions for use

Carefully read the following safety cautions. Only use the specified batteries to avoid damage or dangerous conditions.



1. Make sure the installation location is free of vapor, corrosive and inflammable gas.

2. Correctly place the battery into the battery box to avoid short-circuit.

3. Do not short circuit the positive and negative electrodes of the battery, and do not install the battery in reverse direction



1. Do not place the battery in a high-temperature environment over 100°C (212°F), as this may cause a fire or an explosion.


2. The batteries are non-rechargeable. Do not charge the batteries as this may result in an explosion.

3. Do not directly weld on the surface of the battery.

Battery specifications

Material	Lithium-thionyl chloride/inorganic electrolyte battery
Туре	ER6C
Shihlin model name:	SDH-BAT
Standard voltage	3. 6 V
Standard capacity	1800 mAh
Continuous discharge current	100 µA
Dimension(D D x H)	14. 5 x 51 mm
Weight	15 g
Operating temperature	-55°C ~ 85°C (-67°F ~ 185°F)

Battery life

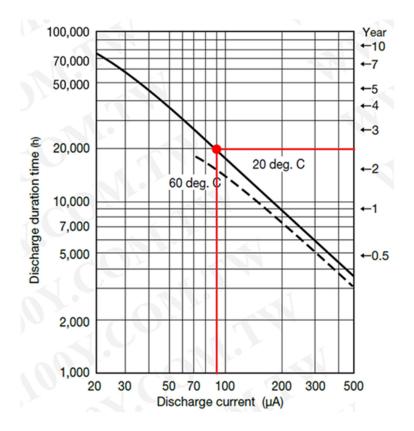

The figure above is the life curve provided by the battery manufacturer. If the absolute encoder current consumption is 90μ A, the battery life is about 20000hr, which is equivalent to 2. 3 years.

14. Appendix

14.1 Accessories

ltem	Name	Shihlin model name	Length (mm)
	Low inertia (100W~1kW) encoder connector	SDH-ENCNL	
Encoder connector (CN2)	Middle & High inertia (100W~ 1kW) encoder junction connector (lead out in direction of motor shaft)	SM3-ENF	
(CNZ)	Middle & High inertia (100W~ 1kW) encoder junction connector (lead out in opposite direction of motor shaft)	SM3-ENR	
	Low inertia (100W~1kW) encoder cable 2meters	SDH-ENL-2M-L/H	2000±100
	Low inertia (100W~1kW) encoder cable 5meters	SDH-ENL-5M-L/H	5000±100
	Low inertia (100W~1kW) encoder cable 10meters	SDH-ENL-10M-L/H	10000±100
	Middle & High inertia (100W~ 1kW) Single turn encoder cable 2meters (lead out in direction of motor shaft)	SM3-ENFS-2M-L/H	2000±100
	Middle & High inertia (100W~ 1kW) Single turn encoder cable 5meters (lead out in direction of motor shaft)	SM3-ENFS-5M-L/H	5000±100
Encoder	Middle & High inertia (100W~ 1kW) Single turn encoder cable 10meters (lead out in direction of motor shaft)	SM3-ENFS-10M-L/H	10000±100
cable	Middle & High inertia (100W~ 1kW) Multiple turn encoder cable 2meters (lead out in direction of motor shaft)	SM3-ENFM-2M-L/H	2000±100
	Middle & High inertia (100W~ 1kW) Multiple turn encoder cable 5meters (lead out in direction of motor shaft)	SM3-ENFM-5M-L/H	5000±100
	Middle & High inertia (100W~ 1kW) Multiple turn encoder cable 10meters (lead out in direction of motor shaft)	SM3-ENFM-10M-L/H	10000±100
	Middle & High inertia (100W~ 1kW) Single turn encoder cable 2meters (lead out in opposite direction of motor shaft)	SM3-ENRS-2M-L/H	2000±100
	Middle & High inertia (100W~ 1kW) Single turn encoder cable 5meters (lead out in opposite direction of motor shaft)	SM3-ENRS-5M-L/H	5000±100


	Middle & High inertia (100W~ 1kW) Single turn encoder cable 10meters (lead out in opposite direction of motor shaft)	SM3-ENRS-10M-L/H	10000±100
	Middle & High inertia (100W~ 1kW) Multiple turn encoder cable 2meters (lead out in opposite direction of motor shaft)	SM3-ENRM-2M-L/H	2000±100
Encoder cable	Middle & High inertia (100W~ 1kW) Multiple turn encoder cable 5meters (lead out in opposite direction of motor shaft)	SM3-ENRM-5M-L/H	5000±100
	Middle & High inertia (100W~ 1kW) Multiple turn encoder cable 10meters (lead out in opposite direction of motor shaft)	SM3-ENRM-10M-L/H	10000±100
	Low inertia (100W~1kW)power connector without brake	SDA-PWCNL1	
	Low inertia (100W~1kW)power connector with brake	SDA-PWCNL2	
	Middle & High inertia (100W~ 1kW) power junction connector without brake (lead out in direction of motor shaft)	SM3-PWF	
Power connector	Middle & High inertia (100W~ 1kW) power junction connector with brake (lead out in direction of motor shaft)	SM3-PWFB	
	Middle & High inertia (100W~ 1kW) power junction connector without brake (lead out in opposite direction of motor shaft)	SM3-PWR	
	Middle & High inertia (100W~ 1kW) power junction connector with brake (lead out in opposite direction of motor shaft)	SM3-PWRB	
	Low inertia (100W~1kW) power cable 1(without brake)	SDA-PWCNL1-2M-L/H	2000±100
	Low inertia (100W~1kW) power cable 2(without brake)	SDA-PWCNL1-5M-L/H	5000±100
Power	Low inertia (100W~1kW) power cable 3(without brake)	SDA-PWCNL1-10M-L/H	10000±100
cable	Middle & High inertia (100W~ 1kW) power junction cable 1 without brake (lead out in direction of motor shaft)	SM3-PWF-2M-L/M	2000±100
	Middle & High inertia (100W~ 1kW) power junction cable 2 without brake (lead out in direction of motor shaft)	SM3-PWF-5M-L/M	5000±100
	Middle & High inertia (100W~ 1kW) power junction cable 3 without brake (lead out in direction of motor shaft)	SM3-PWF-10M-L/M	10000±100


	Middle & High inertia (100W~ 1kW) power junction cable 1 without brake (lead out in opposite direction of motor shaft)	SM3-PWR-2M-L/M	2000±100
	Middle & High inertia (100W~ 1kW) power junction cable 2 without brake (lead out in opposite direction of motor shaft)	SM3-PWR-5M-L/M	5000±100
	Middle & High inertia (100W~ 1kW) power junction cable 3 without brake (lead out in opposite direction of motor shaft)	SM3-PWR-10M-L/M	10000±100
	Low inertia (100W~1kW) power cable 1(with brake)	SDA-PWCNL2-2M-L/H	2000±100
Power cable	Low inertia (100W~1kW) power cable 2(with brake)	SDA-PWCNL2-5M-L/H	5000±100
	Low inertia (100W~1kW) power cable 3(with brake)	SDA-PWCNL2-10M-L/H	10000±100
	Middle & High inertia (100W~ 1kW) power junction cable 1 with brake (lead out in direction of motor shaft)	SM3-PWFB-2M-L/M	2000±100
	Middle & High inertia (100W~ 1kW) power junction cable 2 with brake (lead out in direction of motor shaft)	SM3-PWFB-5M-L/M	5000±100
	Middle & High inertia (100W~ 1kW) power junction cable 3 with brake (lead out in direction of motor shaft)	SM3-PWFB-10M-L/M	10000±100
	Middle & High inertia (100W~ 1kW) power junction cable 1 with brake (lead out in opposite direction of motor shaft)	SM3-PWRB-2M-L/M	2000±100
	Middle & High inertia (100W~ 1kW) power junction cable 2 with brake (lead out in opposite direction of motor shaft)	SM3-PWRB-5M-L/M	5000±100
	Middle & High inertia (100W~ 1kW) power junction cable 3 with brake (lead out in opposite direction of motor shaft)	SM3-PWRB-10M-L/M	10000±100
Communica tion cable(CN4)	USB communication cable for drive and computer	SDA-USB3M	3000
	USB to RS-485 ADAPTER switching devic	USB01	
Communica	Data transmission cable 1.5meters	SNKCBL1R5GTN2	1500
tion cable	Data transmission cable 3 meters	SNKCBL3GTN2	3000
CN3/CN3L)	Data transmission cable 5 meters	SNKCBL5GTN2	5000
	Data transmission cable 10 meters	SNKCBL10GTN2	10000

I/O	I/O connector	SDA-CN1	
connector	I/O cable	SDA-TBL05M	500±10
(CN1)	I/O cable	SDA-TB1M	1000±10
	I/O cable	SDA-TBL2M	2000±10
	I/O terminal block	SDA-TBL50	
Battery	Absolute encoder battery set	SDH-BAT-SET	
set	Absolute encoder battery	SDH-BAT	
(CN5)			

Encoder connector

 
Part number: SDH-ENL (100W~1kW motor use)



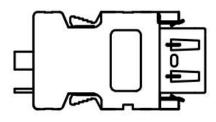

Encoder cable


Low inertia encoder cable; use for 100W, 200W, 400W, 750W, 1kW.

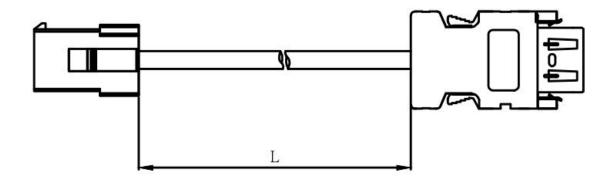


Power connector

Part number: SDA-PWCNL1 (use for 100W~1kW Non-brake model)

 SDA-PWCNL2(use for 100W~1kW brake model)




Low inertia power cable: use for 100W, 200W, 400W, 750W, 1kW.

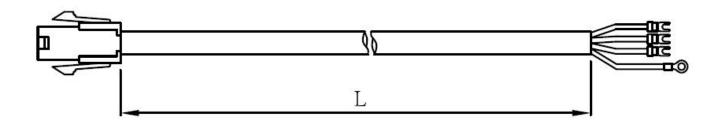


✤ USB communication cable for drive and computer

 Part number: SDA-USB3M




I/O connector

 Part number: SDA-CN1




✤ I/O cable

Part number:SDA-TBL05M, SDA-TBL1M, SDA-TBL2M

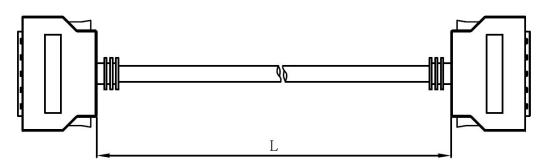


I/O terminal block

 Part number: SDA-TBL50



Absolute encoder accessory:

Absolute encoder battery set	Absolute encoder battery
Shihlin part number:SDH-BAT-SET	Shihlin part number:SDH-BAT

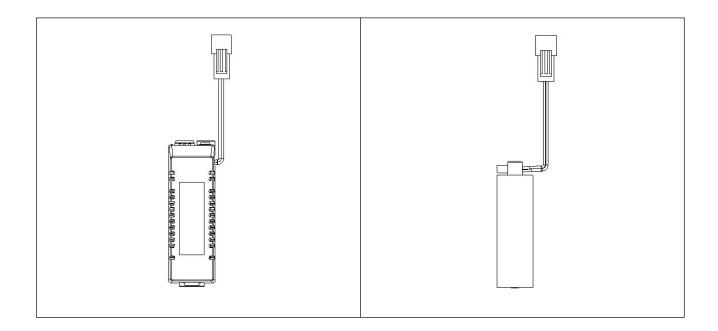

14.2 Regenerative resistor

	Specification of built-in regenerative resistor				
Drive model	Resistanc		PA10	PA11	
name	e value (Ω)	Capacity (W) Regenerative (W) resistance value		Regenerative resistance capacity.	
SDC-010A200		No built-in regenerative resistor			
SDC-020A2					
SDC-040A2	100	20	100	20	
SDC-075A2	40	40	40	40	
SDC-100A2	40	40	40	40	

	•	Specification of external resistor(proposed)		n of external proposed)	Resistor Part Number
Drive model name	Min allowance resistance value (Ω)	Recommende d capacity(W)	PA10 Regenerative resistance value	PA11 Regenerative resistance capacity	
SDC-010A2	100	300	100	300	ABR-300W100
SDC-020A2	100	300	100	300	ABR-300W100
SDC-040A2	100	300	100	300	ABR300W100
SDC-075A2	40	500	40	500	ABR-500W40
SDC-100A2	40	500	40	500	ABR-500W40

14.3 Table of communication address

	Commu		Commu		Commu		Commu
	nication		nication		nication		nication
NO	address	NO	address	NO	address	NO	address
PA01	0x0300	PA16	0x031E	PA31	0x033C	PA46	0x035A
PA02	0x0302	PA17	0x0320	PA32	0x033E	PA47	0x035C
PA03	0x0304	PA18	0x0322	PA33	0x0340	PA48	0x035E
PA04	0x0306	PA19	0x0324	PA34	0x0342	PA49	0x0360
PA05	0x0308	PA20	0x0326	PA35	0x0344	PA50	0x0362
PA06	0x030A	PA21	0x0328	PA36	0x0346		
PA07	0x030C	PA22	0x032A	PA37	0x0348		
PA08	0x030E	PA23	0x032C	PA38	0x034A		
PA09	0x0310	PA24	0x032E	PA39	0x034C		
PA10	0x0312	PA25	0x0330	PA40	0x034E		
PA11	0x0314	PA26	0x0332	PA41	0x0350		
PA12	0x0316	PA27	0x0334	PA42	0x0352		
PA13	0x0318	PA28	0x0336	PA43	0x0354		
PA14	0x031A	PA29	0x0338	PA44	0x0356		
PA15	0x031C	PA30	0x033A	PA45	0x0358		

	Commu		Commu		Commu		Commu
	nication		nication		nication		nication
NO	address	NO	address	NO	address	NO	address
PB01	0x0400	PB16	0x041E	PB31	0x043C	PB46	0x045A
PB02	0x0402	PB17	0x0420	PB32	0x043E	PB47	0x045C
PB03	0x0404	PB18	0x0422	PB33	0x0440	PB48	0x045E
PB04	0x0406	PB19	0x0424	PB34	0x0442	PB49	0x0460
PB05	0x0408	PB20	0x0426	PB35	0x0444	PB50	0x0462
PB06	0x040A	PB21	0x0428	PB36	0x0446	PB51	0x0464
PB07	0x040C	PB22	0x042A	PB37	0x0448	PB52	0x0466
PB08	0x040E	PB23	0x042C	PB38	0x044A	PB53	0x0468
PB09	0x0410	PB24	0x042E	PB39	0x044C	PB54	0x046A
PB10	0x0412	PB25	0x0430	PB40	0x044E	PB55	0x046C
PB11	0x0414	PB26	0x0432	PB41	0x0450	PB56	0x046E
PB12	0x0416	PB27	0x0434	PB42	0x0452	PB57	0x0470
PB13	0x0418	PB28	0x0436	PB43	0x0454	PB58	0x0472
PB14	0x041A	PB29	0x0438	PB44	0x0456	PB59	0x0474
PB15	0x041C	PB30	0x043A	PB45	0x0458		

	Commu nication		Commu nication		Commu nication		Commu nication
NO	address	NO	address	NO	address	NO	address
PC01	0x0500	PC21	0x0528	PC41	0x0550	PC61	0x0578
PC02	0x0502	PC22	0x052A	PC42	0x0552	PC62	0x057A
PC03	0x0504	PC23	0x052C	PC43	0x0554	PC63	0x057C
PC04	0x0506	PC24	0x052E	PC44	0x0556	PC64	0x057E
PC05	0x0508	PC25	0x0530	PC45	0x0558	PC65	0x0580
PC06	0x050A	PC26	0x0532	PC46	0x055A	PC66	0x0582
PC07	0x050C	PC27	0x0534	PC47	0x055C	PC67	0x0584
PC08	0x050E	PC28	0x0536	PC48	0x055E	PC68	0x0586
PC09	0x0510	PC29	0x0538	PC49	0x0560	PC69	0x0588
PC10	0x0512	PC30	0x053A	PC50	0x0562	PC70	0x058A

PD10	0x0612	PD20	0x0626	PD30	000000	FD40	0x064E
PD10	0x0612	PD20	UXUh/h	PD.50			
1008				PD29	0x063A	PD39 PD40	
PD08	0x060E	PD18 PD19	0x0622	PD28	0x0638	PD38	0x064C
PD07	0x060E	PD17	0x0620	PD28	0x0636	PD37	0x064A
PD06 PD07	0x060C	PD16 PD17	0x0620	PD26 PD27	0x0632	PD36 PD37	0x0648
PD05	0x0608	PD15 PD16	0x061C	PD25 PD26	0x0630	PD35	0x0646
PD04 PD05	0x0608	PD14 PD15	0x061A 0x061C	PD24 PD25	0x062E 0x0630	PD34 PD35	0x0642 0x0644
PD03 PD04	0x0604 0x0606	PD13 PD14	0x0618 0x061A	PD23 PD24	0x062C	PD33 PD34	0x0640 0x0642
PD02 PD03	0x0602 0x0604	PD12 PD13	0x0616 0x0618	PD22 PD23	0x062A 0x062C	PD32 PD33	0x063E 0x0640
PD01	0x0600	PD11	0x0614	PD21	0x0628	PD31	0x063C
	address		address	NO	address	NO	address
NO	nication	NO	nication	NO	nication	NO	nication
	Commu		Commu		Commu		Commu
	0.000		0.000		0.000		Correst
PC20	0x0526	PC40	0x054E	PC60	0x0576		
PC19	0x0524	PC39	0x054C	PC59	0x0574		
PC18	0x0522	PC38	0x054A	PC58	0x0572	PC78	0x059A
PC17	0x0520	PC37	0x0548	PC57	0x0570	PC77	0x0598
PC16	0x051E	PC36	0x0546	PC56	0x056E	PC76	0x0596
PC15	0x051C	PC35	0x0544	PC55	0x056C	PC75	0x0594
PC14	0x051A	PC34	0x0542	PC54	0x056A	PC74	0x0592
PC13	0x0518	PC33	0x0540	PC53	0x0568	PC73	0x0590
	0x0516	PC32	0x053E	PC52	0x0566	PC72	0x058E
PC12							

	Communicati		Communicati		Communicati
NO	on address	NO	on address	NO	on address
PE01	0x0700	PE34	0x0742	PE67	0x0784
PE02	0x0702	PE35	0x0744	PE68	0x0786
PE03	0x0704	PE36	0x0746	PE69	0x0788
PE04	0x0706	PE37	0x0748	PE70	0x078A
PE05	0x0708	PE38	0x074A	PE71	0x078C
PE06	0x070A	PE39	0x074C	PE72	0x078E
PE07	0x070C	PE40	0x074E	PE73	0x0790
PE08	0x070E	PE41	0x0750	PE74	0x0792
PE09	0x0710	PE42	0x0752	PE75	0x0794
PE10	0x0712	PE43	0x0754	PE76	0x0796
PE11	0x0714	PE44	0x0756	PE77	0x0798
PE12	0x0716	PE45	0x0758	PE78	0x079A
PE13	0x0718	PE46	0x075A	PE79	0x079C
PE14	0x071A	PE47	0x075C	PE80	0x079E
PE15	0x071C	PE48	0x075E	PE81	0x07A0
PE16	0x071E	PE49	0x0760	PE82	0x07A2
PE17	0x0720	PE50	0x0762	PE83	0x07A4
PE18	0x0722	PE51	0x0764	PE84	0x07A6
PE19	0x0724	PE52	0x0766	PE85	0x07A8
PE20	0x0726	PE53	0x0768	PE86	0x07AA
PE21	0x0728	PE54	0x076A	PE87	0x07AC
PE22	0x072A	PE55	0x076C	PE88	0x07AE
PE23	0x072C	PE56	0x076E	PE89	0x07B0
PE24	0x072E	PE57	0x0770	PE90	0x07B2
PE25	0x0730	PE58	0x0772	PE91	0x07B4
PE26	0x0732	PE59	0x0774	PE92	0x07B6
PE27	0x0734	PE60	0x0776	PE93	0x07B8
PE28	0x0736	PE61	0x0778	PE94	0x07BA
PE29	0x0738	PE62	0x077A	PE95	0x07BC
PE30	0x073A	PE63	0x077C	PE96	0x07BE
PE31	0x073C	PE64	0x077E	PE97	0x07C0
PE32	0x073E	PE65	0x0780	PE98	0x07C2
PE33	0x0740	PE66	0x0782	PE99	0x07C4

	Communicati		Communicati		Communicati
NO	on address	NO	on address	NO	on address
PF01	0x0800	PF34	0x0842	PF67	0x0884
PF02	0x0802	PF35	0x0844	PF68	0x0886
PF03	0x0804	PF36	0x0846	PF69	0x0888
PF04	0x0806	PF37	0x0848	PF70	0x088A
PF05	0x0808	PF38	0x084A	PF71	0x088C
PF06	0x080A	PF39	0x084C	PF72	0x088E
PF07	0x080C	PF40	0x084E	PF73	0x0890
PF08	0x080E	PF41	0x0850	PF74	0x0892
PF09	0x0810	PF42	0x0852	PF75	0x0894
PF10	0x0812	PF43	0x0854	PF76	0x0896
PF11	0x0814	PF44	0x0856	PF77	0x0898
PF12	0x0816	PF45	0x0858	PF78	0x089A
PF13	0x0818	PF46	0x085A	PF79	0x089C
PF14	0x081A	PF47	0x085C	PF80	0x089E
PF15	0x081C	PF48	0x085E	PF81	0x08A0
PF16	0x081E	PF49	0x0860	PF82	0x08A2
PF17	0x0820	PF50	0x0862	PF83	0x08A4
PF18	0x0822	PF51	0x0864	PF84	0x08A6
PF19	0x0824	PF52	0x0866	PF85	0x08A8
PF20	0x0826	PF53	0x0868	PF86	0x08AA
PF21	0x0828	PF54	0x086A	PF87	0x08AC
PF22	0x082A	PF55	0x086C	PF88	0x08AE
PF23	0x082C	PF56	0x086E	PF89	0x08B0
PF24	0x082E	PF57	0x0870	PF90	0x08B2
PF25	0x0830	PF58	0x0872	PF91	0x08B4
PF26	0x0832	PF59	0x0874	PF92	0x08B6
PF27	0x0834	PF60	0x0876	PF93	0x08B8
PF28	0x0836	PF61	0x0878	PF94	0x08BA
PF29	0x0838	PF62	0x087A	PF95	0x08BC
PF30	0x083A	PF63	0x087C	PF96	0x08BE
PF31	0x083C	PF64	0x087E	PF97	0x08C0
PF32	0x083E	PF65	0x0880	PF98	0x08C2
PF33	0x0840	PF66	0x0882	PF99	0x08C4

14.4 Compliance with global standards

14.4.1. Safety instructions

Before installing this equipment, please read this manual carefully to ensure use it correctly. This section explains the safety regulations for users and equipment operation.



Because there is a possibility of electric shock, you should turn off the power for more than 20 minutes, after the charging indicator is off and the voltage test is confirmed, It can be wired or inspected, otherwise it may cause electric shock.

14.4.2. Professional technicians

Arrange a professional technician who has received professional training to install the SDC servo drive.

14.4.3. Compliance with standards

(1) Safety regulations

SDC servo drive complies with IEC/EN61800-5-1 standards

(2) Compliance with EU standards

SDC servo complies with EMC directive(2014/30/EU) and low voltage directive(2014/35/EU)

(3) Compliance with USA/Canada regulations

This servo drive design complies with UL 61800-5-1 及 CSA C22.2 No. 274-17

(a) Installation

The minimum size of the distribution box is 200% of the size of the SDC servo drive. For ventilation of the fan and to keep the ambient temperature below 55°C, only copper wires can be used for wiring. The servo drive should be installed in a metal distribution box.

(b) Overload protection feature

The SDC servo drive has overload protection function. (It is specified based on 120% of the rated current of the servo driver (full load current).)

(c) Motor overheat protection

There is no temperature sensor inside the motor, and the SDC series don't have overheat protection.

(d) Capacitor discharge

After the power is turned off, do not touch the servo and its terminals immediately. The capacitor discharge takes 20 minutes.

(e) About wiring protection

When installing equipment in the United States, branch circuit protection is based on national electrical regulations and local regulations. When installing equipment in Canada, branch circuit protection is based on the Canadian Electrical regulations and provincial regulations.

14.4.4. Correct use method

The equipment used must comply with the specifications (voltage, temperature, etc., please refer to section 11.1 for details).

(1) Power cable

Refer to section 3. 1. 6 for detailed power cable selection table.

Note 1: When connecting to the terminal block, use the screws provided with the terminal block.

Note 2: The letters in the table indicate crimping tools, please refer to the recommended crimping terminal table for crimping terminals and suitable tools.

Note 3: The cable AWG selection depends on the specifications of the connected servo motor.

(2) Torque of fixed terminal block: Crimp terminals must comply with UL specifications, and insulating sleeves must be used to prevent direct contact.

Drive	Recommended torque(Nt-m)						
Drive	L1, L2	U, V, W	P, C, N	PE			
SDC-010A2							
SDC-020A2							
SDC-040A2	0.8	0.8	0. 8	1.4			
SDC-075A2							
SDC-100A2							

(3) Example of non-fuse circuit breaker selection

Drive	UL certified current-limiting circuit breaker	Example
SDC-010A2	240 \/ 5 A	NF50-SVFU 5A
SDC-020A2	240 V, 5 A	NF30-3VFU 3A
SDC-040A2	240 V, 10 A	NF50-SVFU 3P 10A
SDC-075A2	240 \/ 15 A	NF50-SVFU 3P 15A
SDC-100A2	240 V, 15 A	NF90-3VFU 3F 19A

In order to meet the requirements of the North American safety standard UL61800-5-1, be sure to connect a circuit breaker on the input side to prevent accidents caused by short circuits in the internal circuit. Install adequate branch circuit short circuit protection in accordance with applicable regulations and this manual. This product is suitable for circuits with a rated fusing capacity below 5000A and a maximum voltage of 240Vac.

14.4.5. Basic inspection and maintenance

14.4.5.1. Basic inspection

It is recommended that the user do the following various tests regularly. During the test, please carefully check whether the servo drive is powered off and the charging indicator is off, and then perform the following tests:

- Check whether the screws of the terminal block, driver installation part, servo motor and mechanism connection are loose, if yes, please tighten it.
- The servo should not be placed where harmful gas exists.
- Avoid placing conductive objects next to the drive and the drive wiring.
- Servo motor wiring should avoid excessively long bare area and do not use damaged or broken wire.
- Insulation should be done at the wiring terminal.
- Check whether the external AC220V voltage is correct.
- Check whether the operation switch is OFF.
- Check whether power wiring and Encoder wiring is correct.

14.4.5.2. Maintenance

Do not disassemble the servo drive by yourself to perform maintenance. Please follow below instruction for regular maintenance:

- Wipe the servo drive and servo motor regularly to avoid the adhesion of dust.
- Do not operate for a long time in harsh environments.
- The vents of the servo drive should be kept clean to avoid dust accumulation.

14.4.5.3. Parts service time

The lifetime of the parts may be changed due to the user's operating environment. When an abnormality is found, it needs to be replaced immediately. Please contact the Shihlin distributor for replacing parts. The service life of the parts is as follows:

Component name	Approximate lifetime	Description
Relay	100,000times	The power capacity will impact its life, the accumulative number of switching is about 100,000 times.
Cooling fan	10,000-30,000 hours(2-3 years)	Continuous operation or placing the servo drive in a place with harmful gas will shorten the service life of the fan, which is about 2 to 3 years. However, if the fan runs with abnormal noise, it needs to be replaced.
Rectified capacitor	10years	If the rectified capacitor is affected by the ripple current, its characteristics will be deteriorated. The service life of the capacitor is affected by the surrounding temperature and use conditions. If the servo is operated in a general environment with air conditioning, the service life is about 10 years.

14.5 Manual version and revision history

Manual version: V1.02

Release month: Dec. 2023

Release	Manual	Revision contents
date	version	
2021/5/20	V1.00	Initial release
2022/5/16	V/1 01	1. Modify PA23 parameter content
2022/5/16 V1.01		2. Support 22bit optical encoder motor (L005~L100)
		1. Added PD37 parameter
2023/3/3	23/3/3 V1.02 2. Add SRDY DO signal	
		3. Modify CN3 pin define
2022/12/26	1/1 02	1. Integrated instructions and parameters of SDC-A(M) series servo products
2023/12/26	V1.03	2. Added SM3 series motor specifications